

TL2200QVP


Sit Down User Manual

Table of Contents

Using The Touch Screen

Screen Functions.....	2
Using The Touch Screen.....	3
Manual Stitch Mode.....	3
Maximum Speed.....	3
Maximum Presets.....	3
Baste Mode.....	4
Baste Speed.....	4
Needle Stop.....	4
Needle.....	4
Cut Thread.....	5
Settings.....	5
Light Bar.....	5
Foot Pedal Switch.....	5
Main Menu.....	5
Needle Light.....	5
Foot Pedal Switch Settings.....	6-7
Tools.....	8
Screen Brightness.....	8
Screen Calibration.....	8
Language.....	9-10
Firmware.....	10

Screen Functions

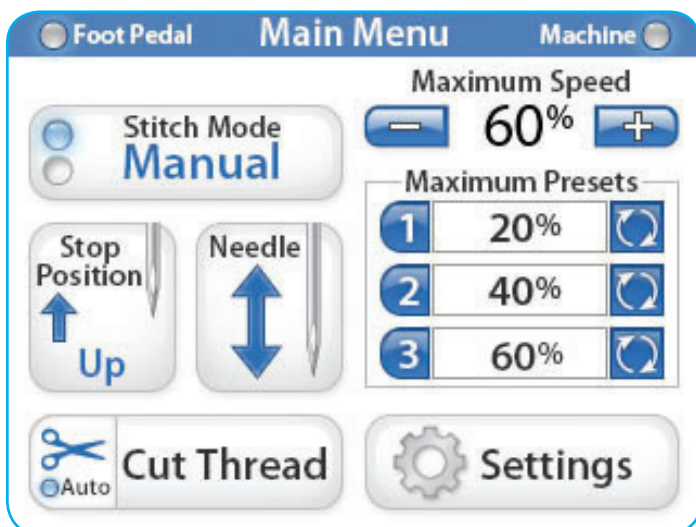





The Juki Quilt Virtuoso Pro has a 3.5" touch LCD screen mounted to the front light bars.

Pressing the Stitch Mode button toggles between the "Manual" and "Baste" modes.

The active stitch mode (Baste or Manual) is indicated with an illuminated blue light on the left of the mode button.


Using the Touch Screen

Machine and Handlebar Menus

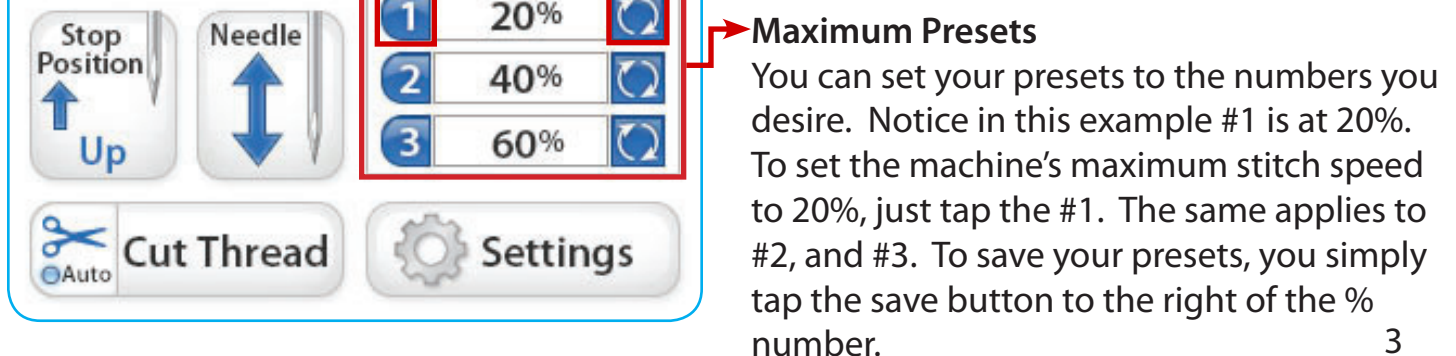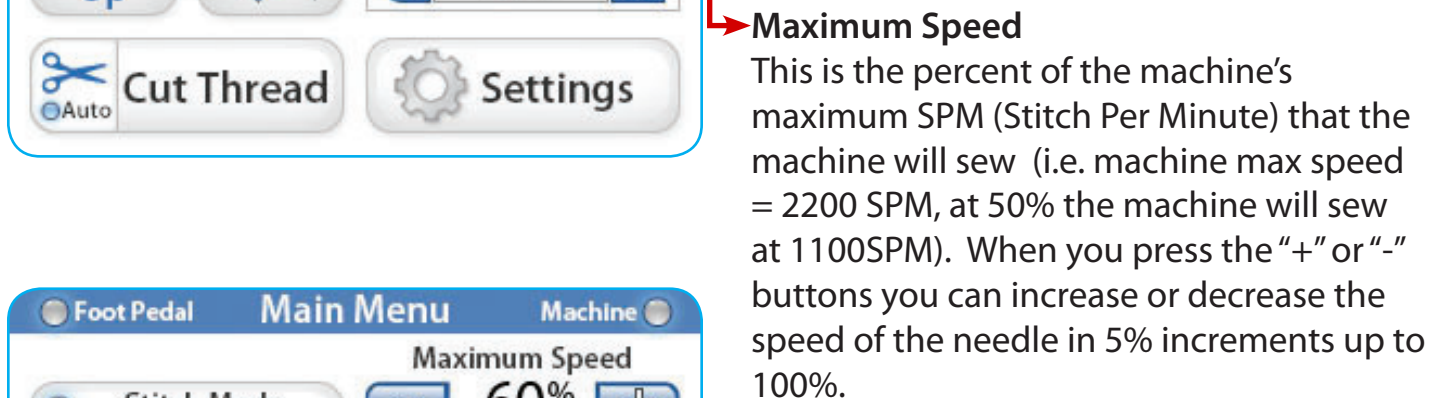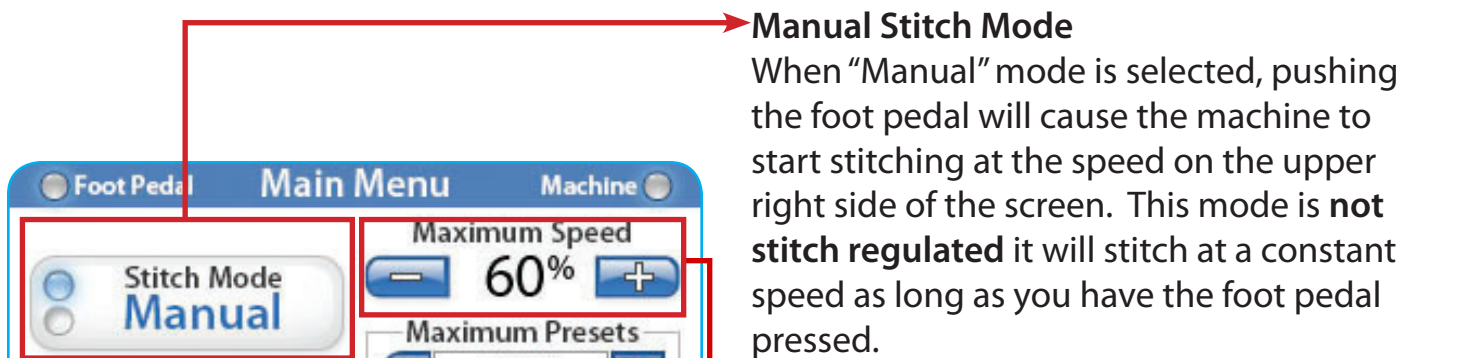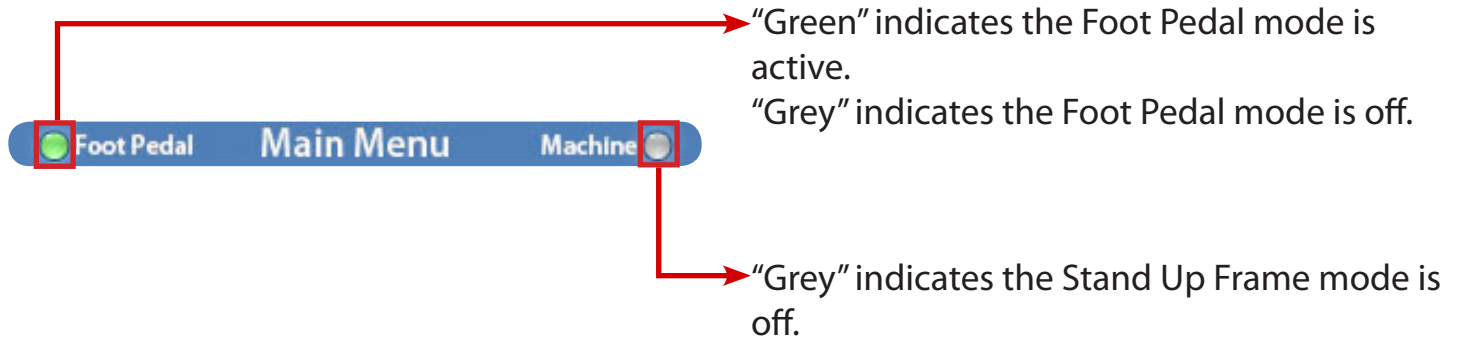

Baste Mode

When “Baste” mode is selected, the machine will stitch at a constant rate at the speed you have selected.

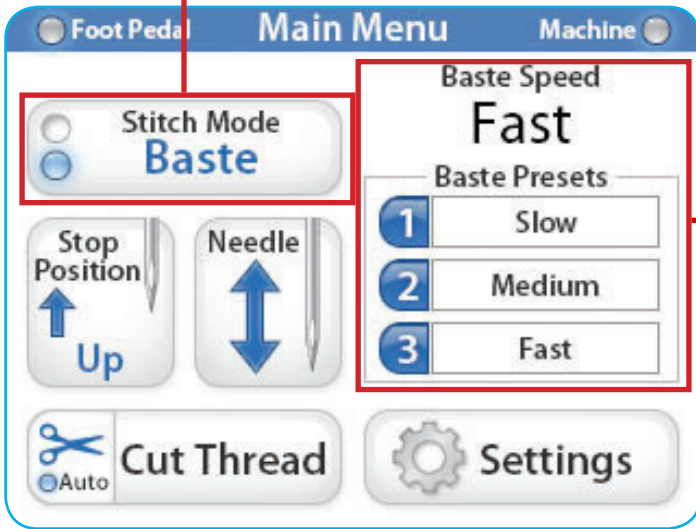


Baste Speed

Set the speed of your baste stitch by selecting slow, medium, or fast. The speed will stay constant as long as you are pressing down the foot pedal.


Needle Stop

The needle stop button toggles the needle between the up and down position. The Button indicates the position the needle will end in when the machines is stopped.

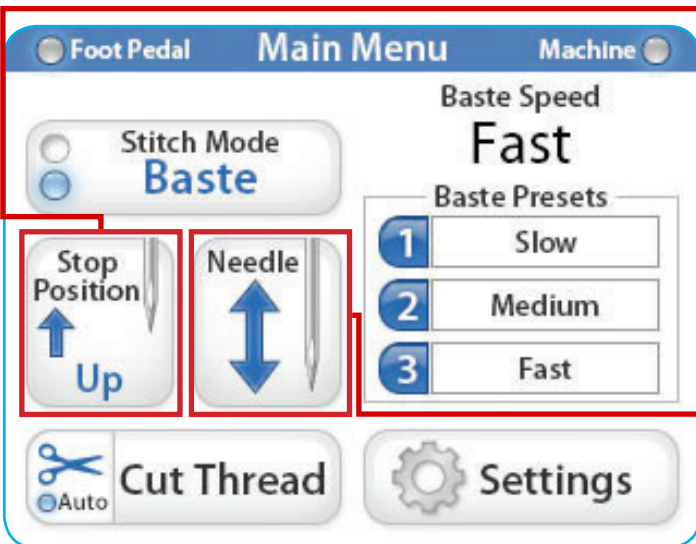

Needle

Pressing this button will allow you to manually change the current position of the needle.

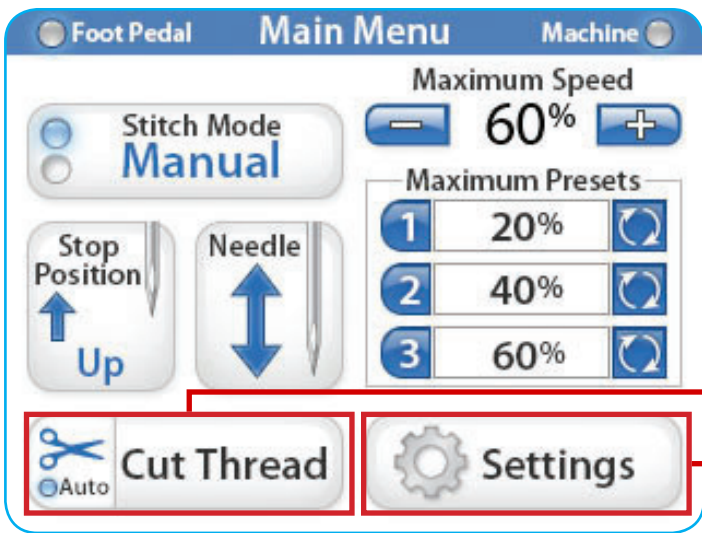


Cut Thread

Press the “Cut Thread” area of the cutter button to cut the thread. To activate the “Auto Cut Feature” press the scissor part of the “Cut Thread” button (the “Auto” button light is blue). When activated, every time you stop sewing the machine will automatically cut your thread. Simply push the scissor icon to turn the Auto Cut Feature off.

Settings

The “Settings” button activates the settings screen.

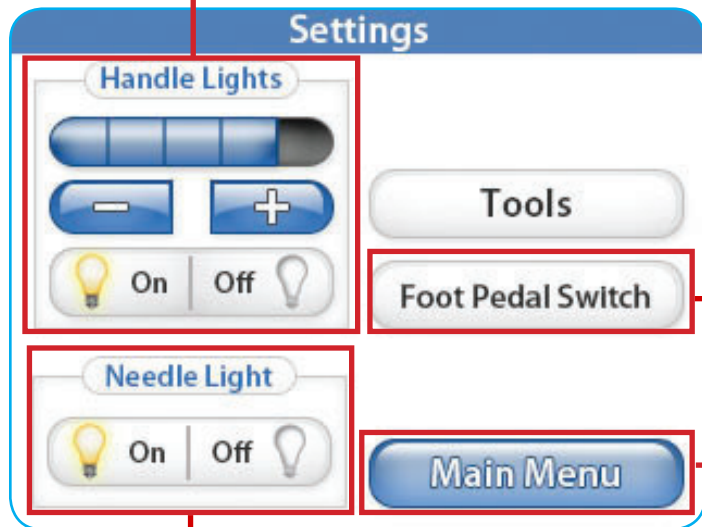

Light Bar Lights

Pressing the “+” or “-” buttons allows you to set the brightness of the handle lights. When pushing the “+” button a blue square will indicate the power value between 1 and 5. There are 3 LED lights on each light bar. Press the off button to turn off the light bar LED lights.

Foot Pedal Switch

Press the “Foot Pedal Switch” button to bring up the 6 different settings that are available. See pages 6-7.


Main Menu

Press the “Main Menu” button to go back to the Main Menu.


Needle Light

When the “Needle Light” button is pressed, the rear needle bar light toggles On or Off.


Foot Pedal Switch Settings

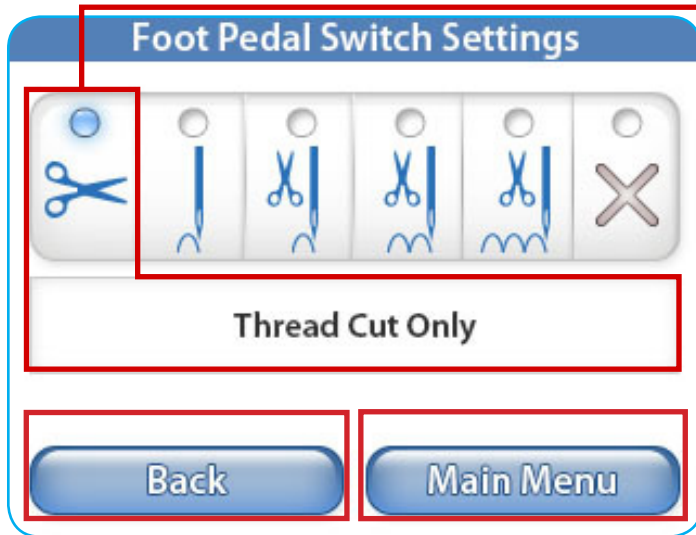


When this mode is selected, pushing back on the foot pedal with your heel will cause the machine to **cut** the bobbin and needle thread.

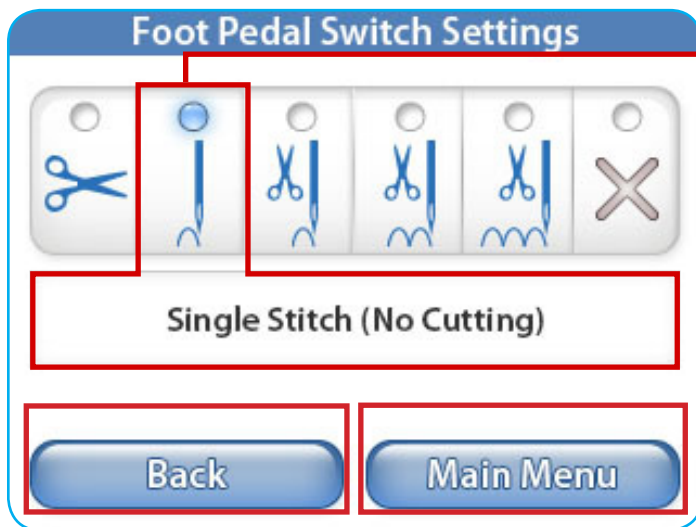


When this mode is selected, pushing back on the foot pedal with your heel will cause the machine to take a **single stitch**.

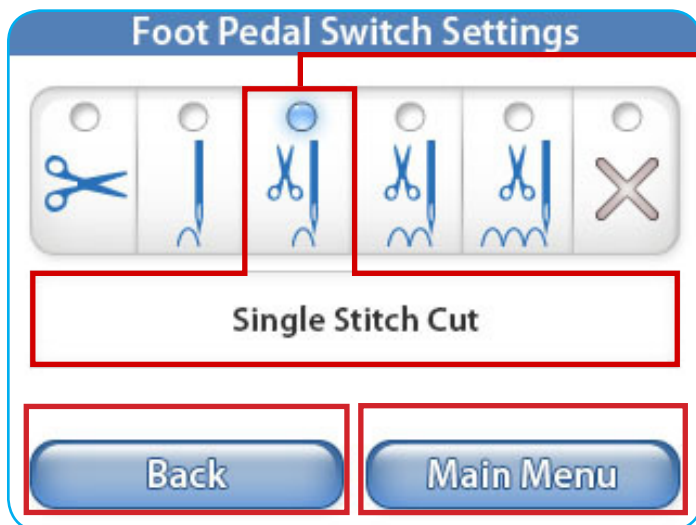


When this mode is selected, pushing back on the foot pedal with your heel will cause the machine to take a **single stitch and then cut** the bobbin and needle thread.

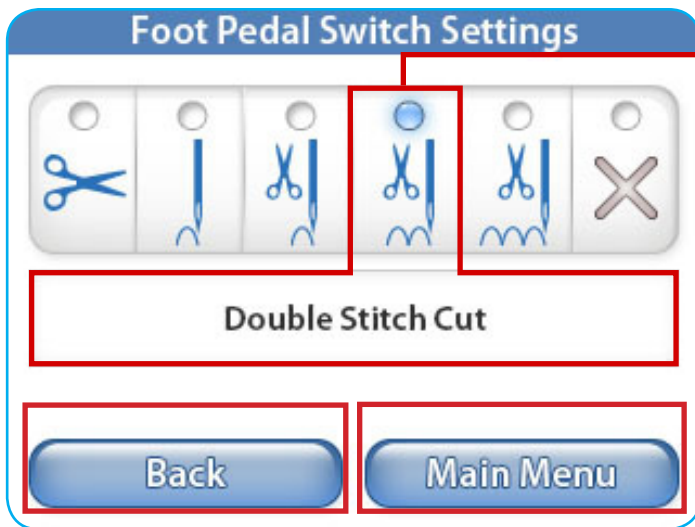


When this mode is selected, pushing back on the foot pedal with your heel will cause the machine to take **two stitches and then cut** the bobbin and needle thread.

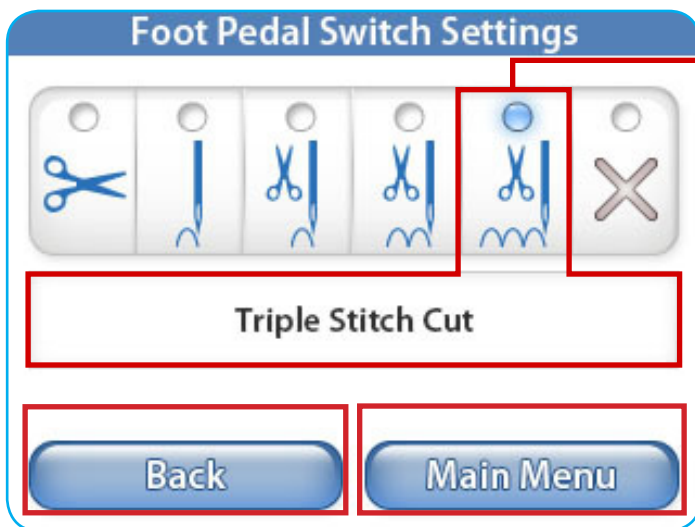

When this mode is selected, pushing back on the foot pedal with your heel will cause the machine to take **three stitches and then cut** the bobbin and needle thread.

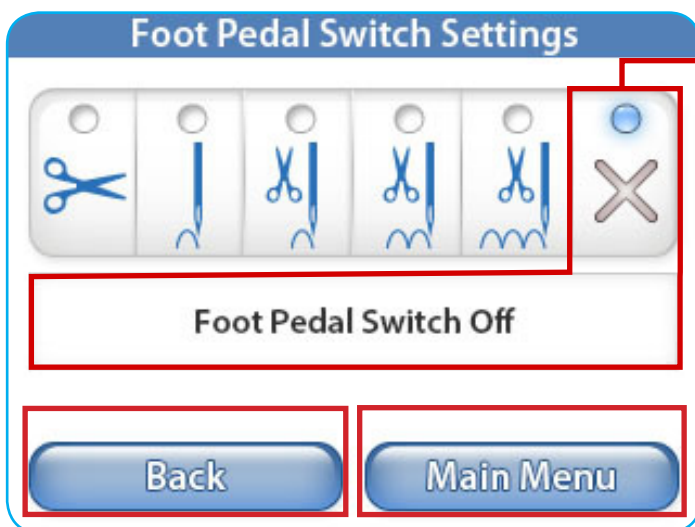


This mode will turn off the foot pedal heel switch.

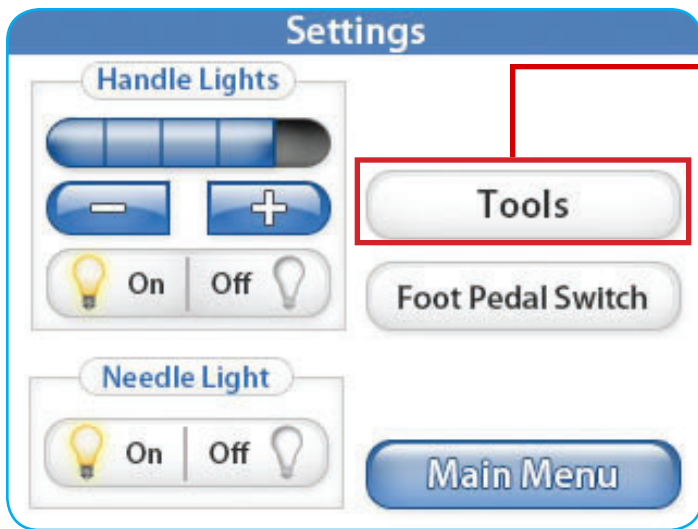

Tools


Pressing the "Tools" button it will bring up the tools screen with more options. See more details below.

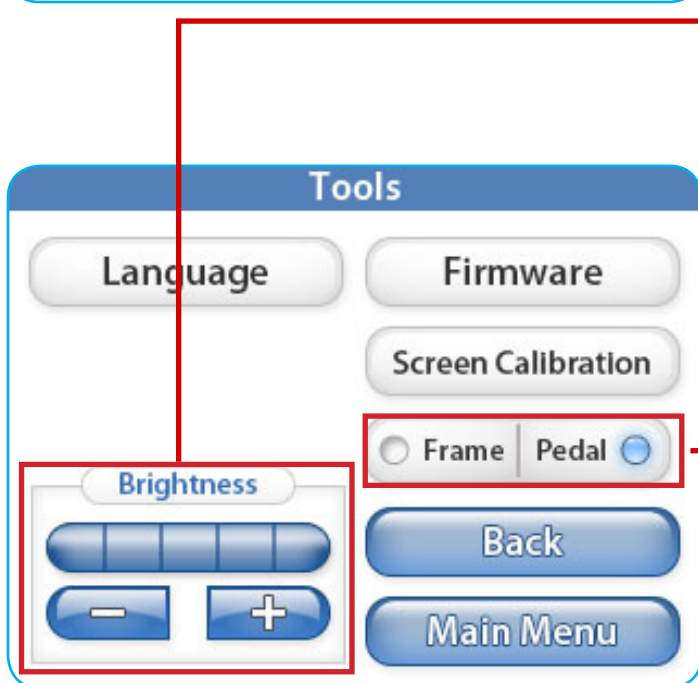

Screen Brightness


Pressing the "+" or "-" buttons allows you to set the brightness of your screen. Press the "+" button to increase the brightness and press the "-" button to decrease the brightness.

Choose your systems mode by pressing either the "Frame" or "Pedal" button.

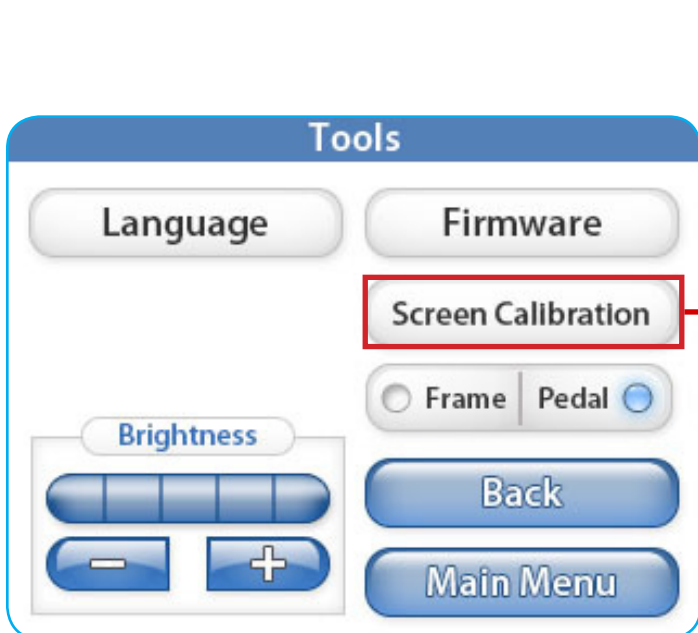

Screen Calibration

Press the "Screen Calibration" to re-calibrate the touch screen. Use a detailed item such as the lid of a pen to press and hold on the small square that appears on the screen. Press and hold the small square until it disappears. Then press and hold the next small square that appears until you have done this for all four corners and finally the center of the screen to complete the process. When the process has been completed, the screen will return to the main menu. If you wish to escape during this process, power the machine off and then back on.

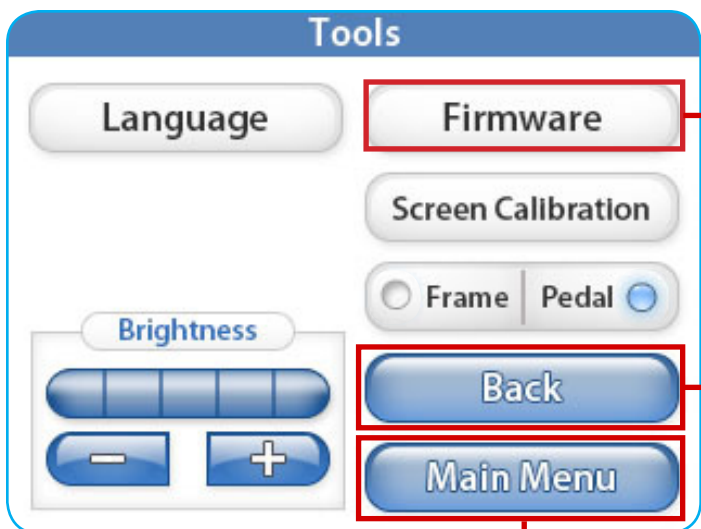

Firmware

When you press the "Firmware" button, the firmware version currently installed will be listed on the LCD screen and stitch regulator system. See more details below.

Back

Pressing the "Back" button will take you back to the previous screen.

Main Menu

Press the "Main Menu" button to go back to the Main Menu.



Language

Pressing the "Language" button opens the language screen, where you can select the language for the software. See more on page 10.

Language

From this screen you can select the language you would like to use.



Firmware

The information contained in this menu will identify the version numbers, and date for the "LCD Screen Firmware" and for the "Regulator Firmware."

