

# TL2200QVP


## Stitch Regulator User Manual

# Table of Contents


## **Using The Touch Screen**

Handlebar Functions .....	3
Main Menu Screen Layout .....	3
Green and Red light indicator .....	4
Minimum Speed .....	4
Stitches Per Inch .....	4
Cruise Stitch Mode / Regulated .....	5
Precise Stitch Mode / Regulated .....	5
Baste Stitch Mode (Small, Medium and Large).....	5
Manual Stitch Mode / Non-Regulated .....	6
Manual Stitch Mode Percentage.....	6
Cut Thread .....	6
Auto Cut.....	6
Settings Screen Layout .....	7
Needle Lights .....	7
Handlebar lights .....	7
Sound .....	7
Tools Screen .....	8
Screen Calibration .....	8
LCD Brightness level.....	9
Language.....	9-10
Firmware.....	10

# Handlebar Functions

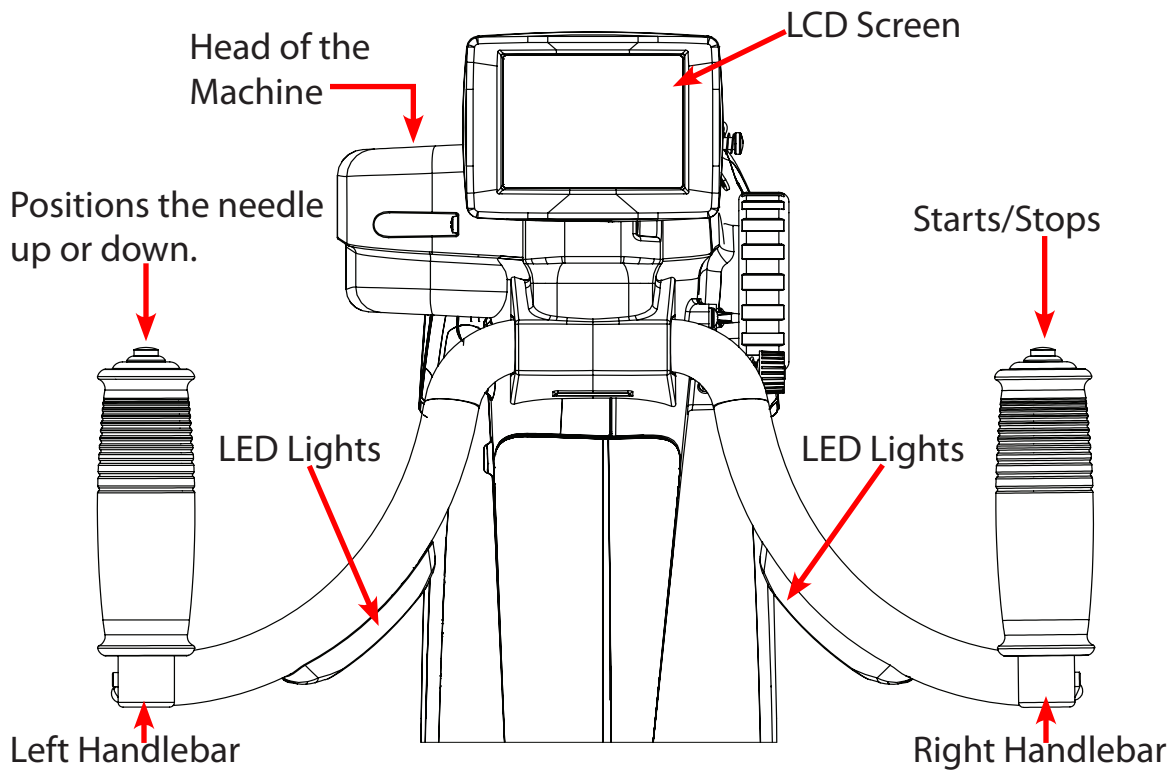

## Screen Functions

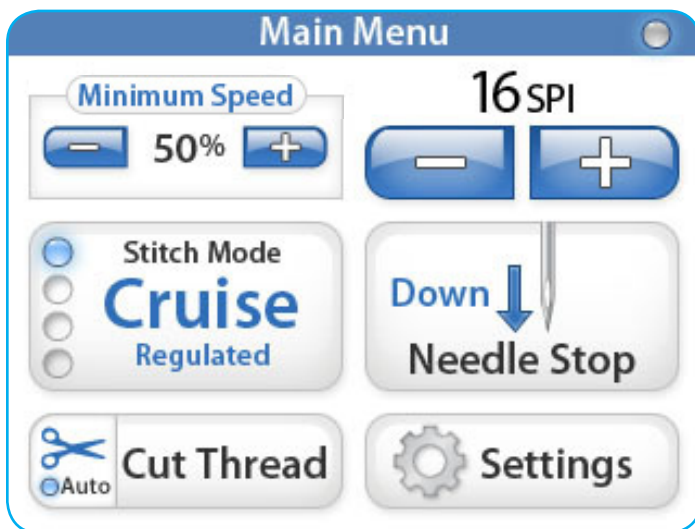




The Juki Quilt Virtuoso Pro has a 3.5" touch screen mounted to the front handlebars. The LCD screen can be removed and placed on the optional rear handlebars.


You can toggle through each stitch mode by pressing the Stitch Mode button (currently show in cruise mode). There are four different settings you can choose from to find the perfect stitch mode for the project you are working on. (Stitch Modes are shown beginning on page 4)

The active stitch mode (Cruise, Precise, Baste or Manual) is indicated with a illuminated blue radio light on the left of the mode button.

# Using the Touch Screen


## Machine and Handlebar Menus

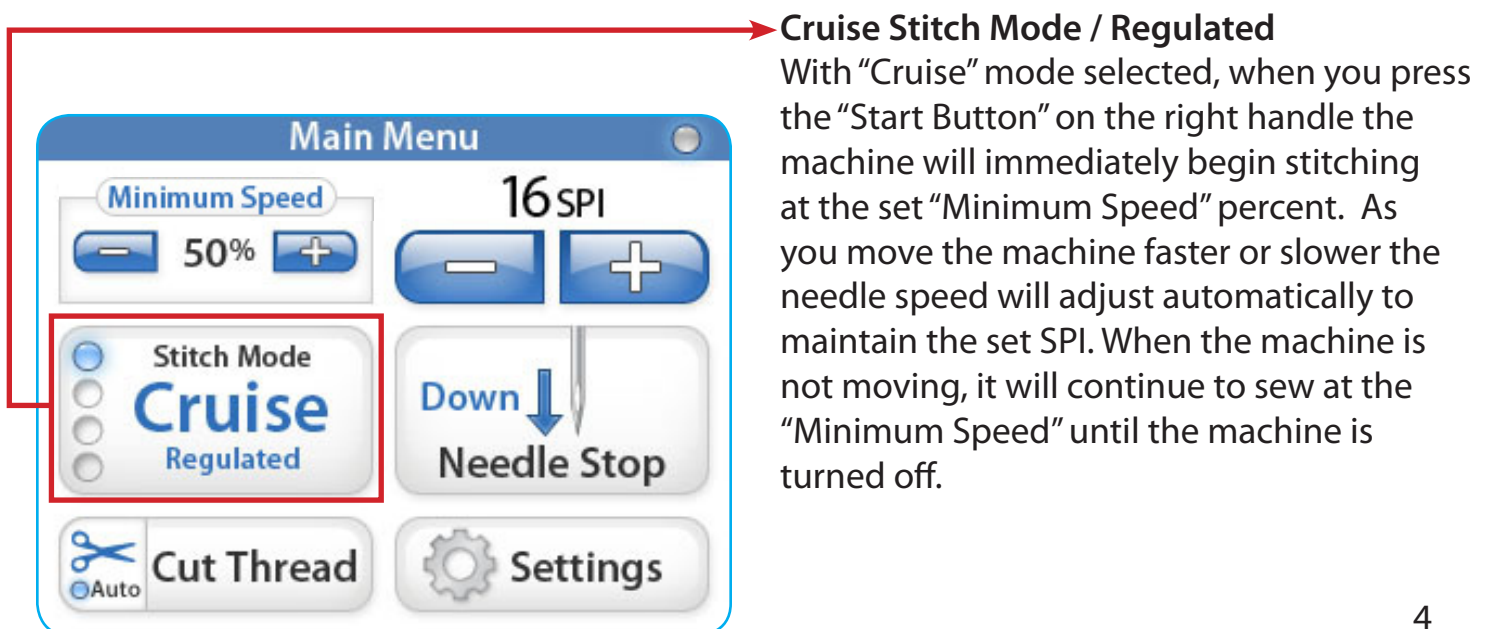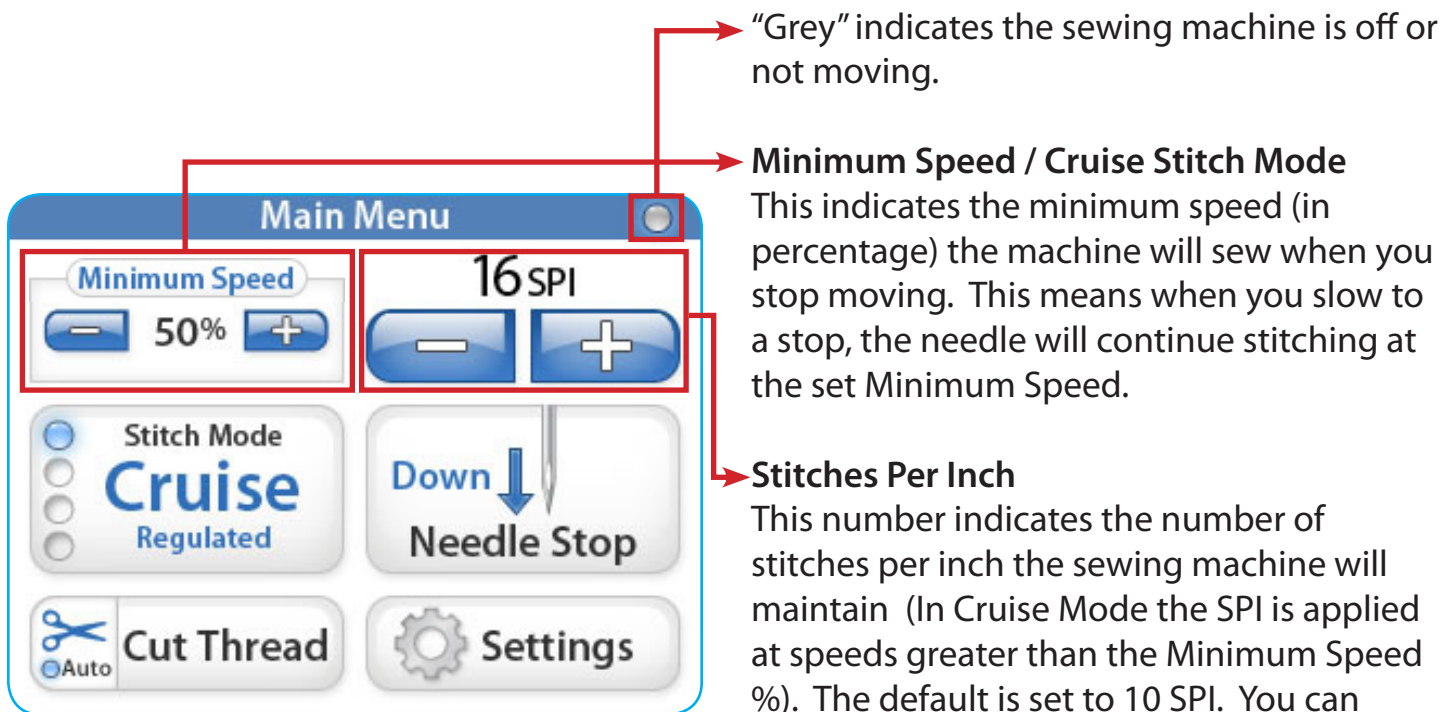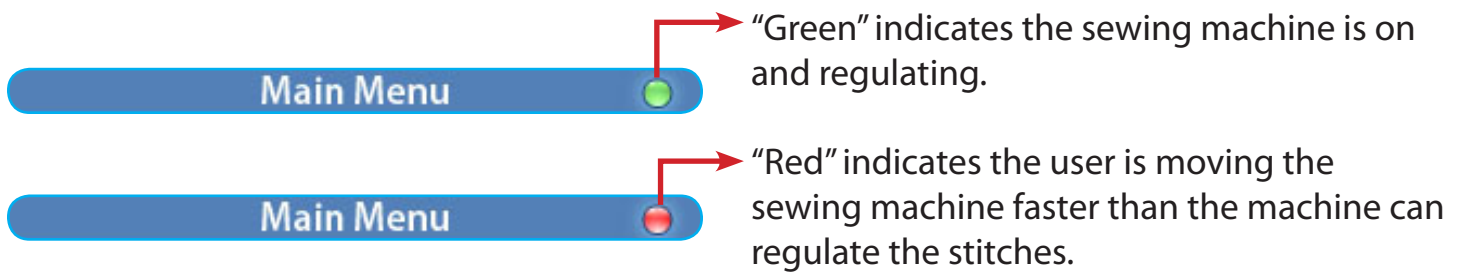

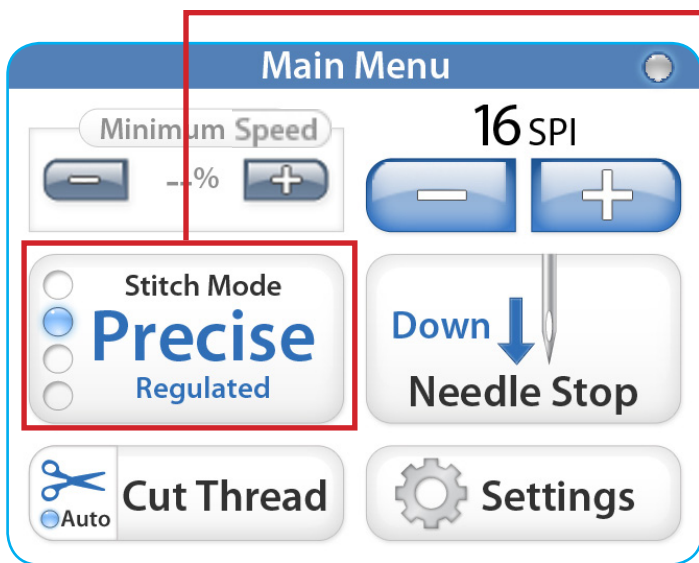

### Precise Stitch Mode / Regulated

If "Precise" mode is selected when you press the "Start" button on the right handle, the machine **will not** start stitching until you begin moving the machine. As you move the machine faster or slower the needle speed will adjust automatically to maintain the set SPI. Once the machine has stopped, the needle will stop moving, but will engage again once you start to move the machine.

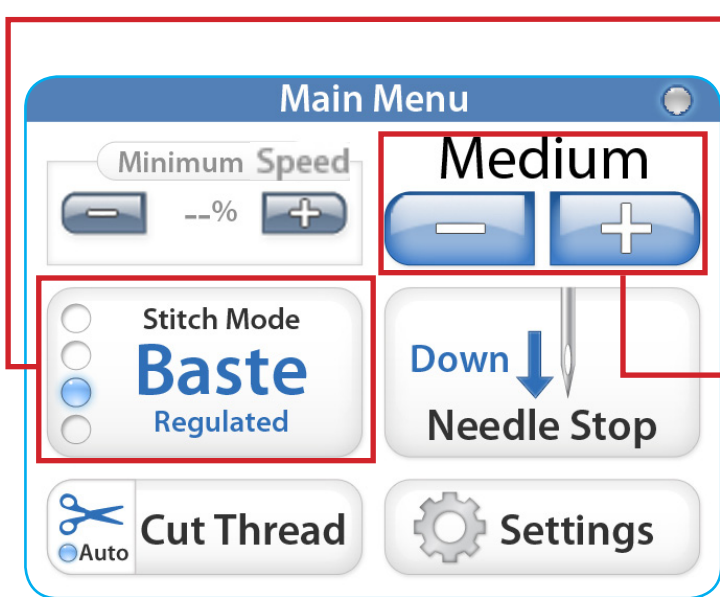

### Baste Stitch Mode / Regulated

If "Baste" mode is selected when you press "Start" button on the right handle, the machine will begin to baste at the stitch length selected. There is no Minimum Speed for this stitch mode setting.

### Medium

Pressing the "+" or "-" button will toggle through "Small," "Medium" or "Large" baste mode settings for stitch length. Small will be 1/2" stitch length, Medium will be a 1" stitch length and Large will be 1 1/2" stitch length.



**Manual Stitch Mode / Non-Regulated**  
 If "Manual" mode is selected, when you press "Start" on the right handle, the machine will begin stitching at the set speed as a percentage of maximum speed set on the upper right side of the screen. This mode is **not stitch regulated** it is a speed control function. This means the machine will only sew at the set percentage (i.e. machine max speed = 2200 SPM, at 50% the machine will sew at 1100SPM).


**Manual Stitch Mode %**  
 This is the percent of the machine's maximum SPM (Stitch Per Minute) speed the machine will sew (i.e. machine max speed = 2200 SPM, at 50% the machine will sew at 1100SPM). When you press the "+" or "-" buttons you can increase or decrease the speed of the needle in 5% increments up to 100%.

**Cut Thread**  
 Press the "Cut Thread" area of the cutter button every time you want to cut your thread. To activate the "Auto Cut Feature" press the scissor part of the "Cut Thread" button (the radio "Auto" button light is blue). When activated, every time you stop the machine by pressing the off button on the right handle, the machine will automatically cut your thread. Simply push the scissor to turn the cut feature off.

**Needle Stop**  
 The needle stop button toggles the needle between the up and down position. The Button indicates the position the needle will end in when the machines is stopped.


**Settings**  
 The "Settings" button activates the settings screen. See more on pages 7.

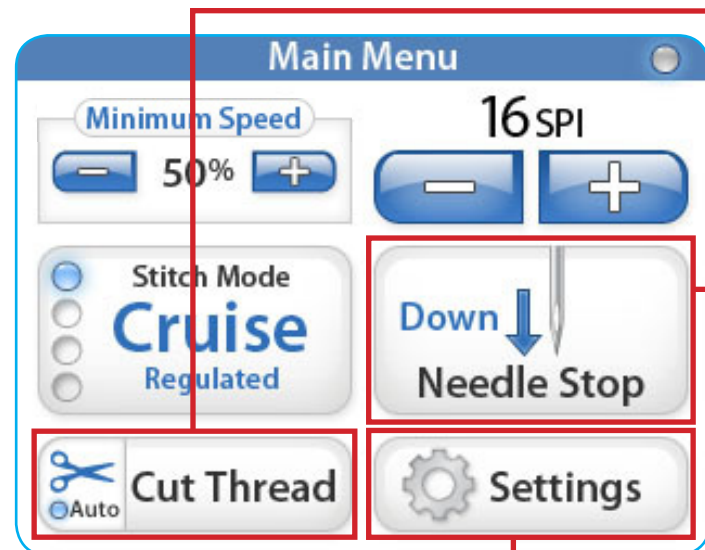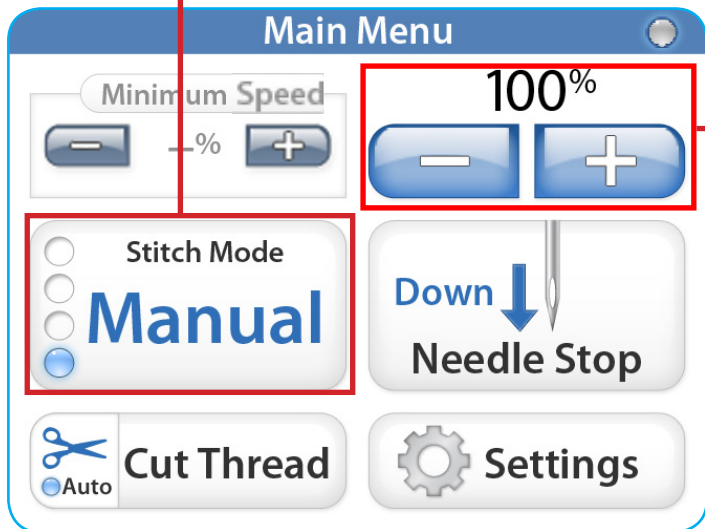

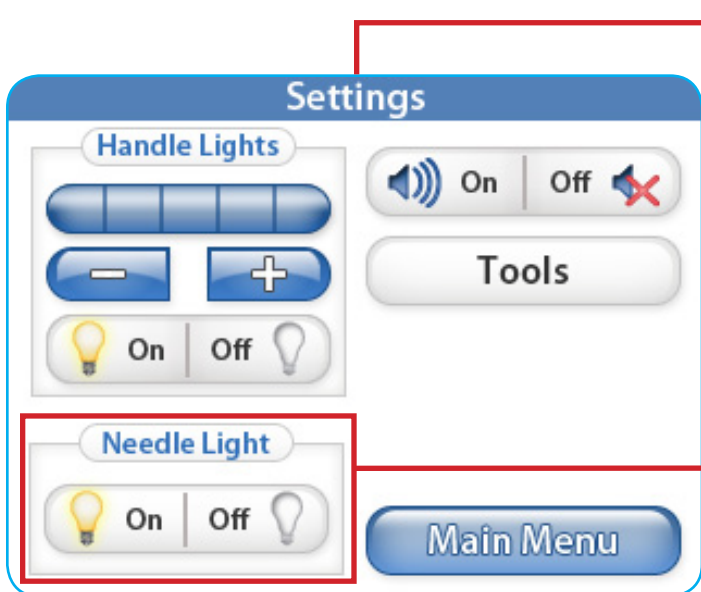

**Settings**  
 The "Settings" button activates a screen that provides access to additional machine functions.

**Needle Light**  
 When the "Needle Light" button is pressed the rear needle bar light toggles On or Off.

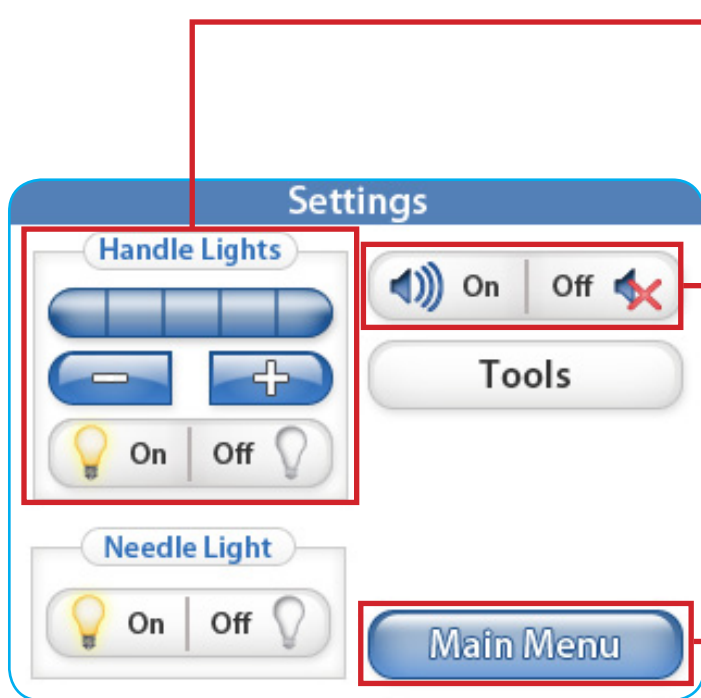

**Handle Lights**  
 Pressing the "+" or "-" buttons allows the user to set the brightness of the handle lights. When pushing the "+" button a blue square will indicate the power value between 1 - 5. There are 3 LED lights on each handlebar. Press the off button to turn off the handle bar LED lights.

**Sound**  
 This setting provides the user with the ability to turn off or on the over speed audible beep. With this button set to on, a beeping sound will occur anytime the user moves the sewing machine faster then the machine can stitch regulate.

**Main Menu**  
 Press the "Main Menu" button to go back to the Main Menu.




### Tools

When you press the “Tools” button it will bring up the tools screen with more options. See more details below.

### Firmware

When you press the “Firmware” button it will bring up the firmware screen with numbers indicating specifics for the LCD screen and stitch regulator system. See more on page 9

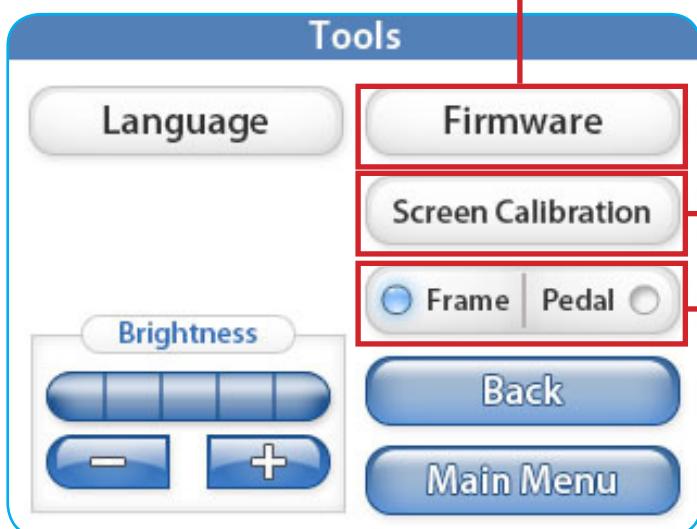


### Screen Calibration

Press the “Screen Calibration” to re-calibrate the touch screen. Use a detailed item such as the lid of a pen to touch the small square that appears on the screen. Follow this process until all of the squares have been touched. Once completed the screen will remain black until you touch the lower right corner of the screen to return to the main menu.

Choose your systems mode by pressing either the “Frame” or “Pedal” button.



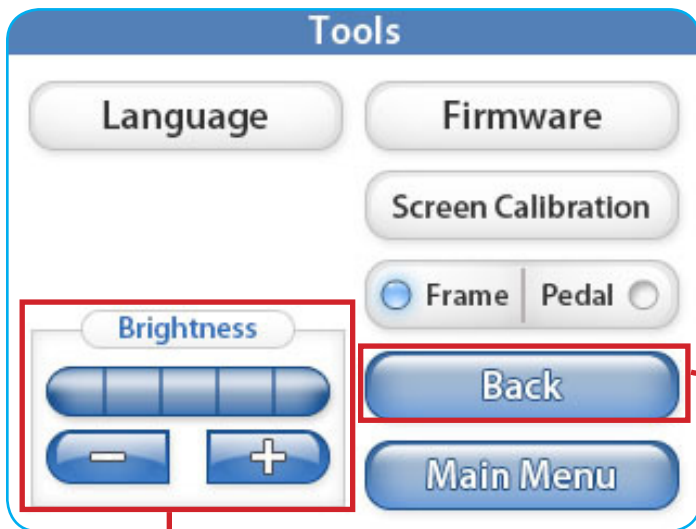


**Back**

Pressing the "Back" button will automatically take you back to your previous screen.

**Brightness**

Pressing the "+" or "-" buttons allows you to set the brightness of your screen. Press the "+" button to increase the brightness and press the "-" button to decrease the brightness.

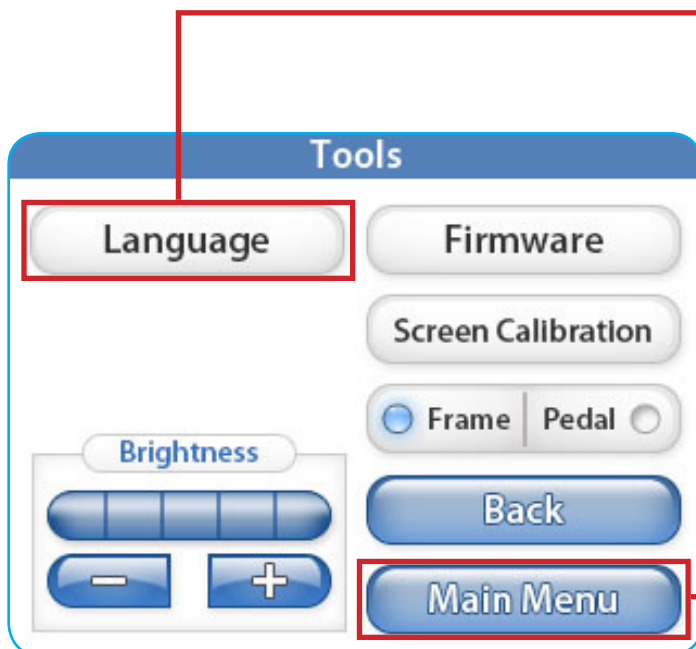

**Language**

Pressing the "Language" button opens the language screen, where you can select the language for the software. See more on page 10.

**Main Menu**

When you press the "Main Menu" button you will be returned to the Main Menu screen.

### Language

From this screen you can select the language you would like to use.



### Firmware

The information contained in this menu will identify the version numbers, and date for the "LCD Screen Firmware" and for the "Regulator Firmware."

