


Selection of each program mode from the normal mode.

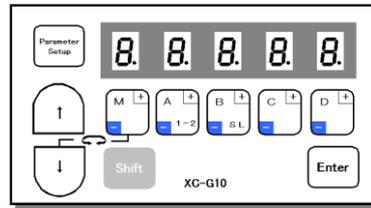

Mode name	Key operation	Digital display	Return to the normal mode
Tacking type setting mode	Press the [↑] key one time from the normal mode.	b. - 2 - 2 *The tacking setting mode will be entered.	Press the [↓] key one time.
No. of tacking stitch setting mode	Press the [↑] key two times from the normal mode.	7. 4 4 4 4 Note) Skipping this menu at the time of pattern No.=4.	Press the [↓] key two times.
Preset stitching setting mode	Press the [↑] key three times from the normal mode.	- 4 4 Note) Skipping this menu at the time of pattern No.= A to H.	Press the [↓] key three times.
Pattern No. selection mode	Press the [↑] key four times from the normal mode.	P. 5 7 2. 1. *The pattern No. selection mode will be entered.	Press the [↓] key four times.
Program mode [P]	While holding down the [↓] key, press the [↑] key for 2 seconds or more from the normal mode.	[] [] P - P *The display will flicker. H. 4 0 0 0 *The program mode [P] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.
Program mode [A]	While holding down the [↓] key, press the [A] key for 2 seconds or more from the normal mode.	[] [] P - A *The display will flicker. G A . . L *The program mode [A] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.
Program mode [B]	While holding down the [↓] key, press the [B] key for 2 seconds or more from the normal mode.	[] [] P - b *The display will flicker. 5. . . . 0 *The program mode [B] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.
Program mode [C]	While holding down the [↓] key, press the [C] key for 2 seconds or more from the normal mode.	[] [] P - C *The display will flicker. . A. P S U *The program mode [C] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.
Program mode [D]	While holding down the [↓] key, press the [D] key for 2 seconds or more from the normal mode.	[] [] P - d *The display will flicker. d l . . 7 *The program mode [D] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.
Program mode [E]	While holding down the [↓] key, press the [A] key and the [↑] key for 2 seconds or more from normal mode.	[] [] P - E *The display will flicker. l . E - - *The program mode [E] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.
Program mode [F]	While holding down the [↓] key, press the [B] key and the [↑] key for 2 seconds or more from normal mode.	[] [] P - F *The display will flicker. C o A . 0 *The program mode [F] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.
Program mode [G]	While holding down the [↓] key, press the [C] key and the [↑] key for 2 seconds or more from normal mode.	[] [] P - G *The display will flicker. 7 2. . 7 l *The program mode [G] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.
Program mode [H]	While holding down the [↓] key, press the [D] key and the [↑] key for 2 seconds or more from normal mode.	[] [] P - H *The display will flicker. L H H 9 0 *The program mode [H] will be entered. Switch the function item with the [↓] or [↑] key.	Press down [↓] key, press [↑] key.

The mode can also be selected with the "Direct number call operation". (Refer to the next section.)

Program mode [J]	While holding down the [↓] key, press the [↑] key and the [A] and the [B] key for 2 seconds or more from normal mode.	The mode can also be selected with the "Direct number call operation". (Refer to the next section.)		*The display will flicker.	Press down [↓] key, press [↑] key.
				*The program mode [J] will be entered. Switch the function item with the [↓] or [↑] key.	
Program mode [K]	While holding down the [↓] key, press the [↑] key and the [A] and the [C] key for 2 seconds or more from normal mode.			*The display will flicker.	Press down [↓] key, press [↑] key.
				*The program mode [K] will be entered. Switch the function item with the [↓] or [↑] key.	
Program mode [O]	While holding down the [↓] key, press the [↑] key and the [B] and the [D] key for 2 seconds or more from normal mode.			*The display will flicker.	Press down [↓] key, press [↑] key.
				*The program mode [O] will be entered. Switch the function item with the [↓] or [↑] key.	
Program mode [Q]	While holding down the [↓] key, press the [A] key and the [C] key for 2 seconds or more from normal mode.			*The display will flicker.	Press down [↓] key, press [↑] key.
				*The program mode [Q] will be entered. Switch the function item with the [↓] or [↑] key.	
Program mode [S]	While holding down the [↓] key, press the [B] key and the [D] key for 2 seconds or more from normal mode.			*The display will flicker.	Press down [↓] key, press [↑] key.
			*The program mode [S] will be entered. Switch the function item with the [↓] or [↑] key.		
Program mode [I]	While holding down the [↓] key, press the [↑] key and the [B] and the [C] key for 2 seconds or more from normal mode.		*The display will flicker.	Press [D] key for 2 seconds or more. [*1]	
			*The program mode [I] will be entered.		
Program mode [R]	While holding down the [↓] key, press the [B] and the [C] key for 2 seconds or more from normal mode.		*The display will flicker.	Press [D] key for 2 seconds or more. [*1]	
			*The program mode [R] will be entered.		
Program mode [1] Simple setting	While holding down the [↓] key, press the [A] and the [B] key for 2 seconds or more from normal mode.		*The display will flicker.	Press [D] key for 2 seconds or more. [*1]	
			*The program mode [1] will be entered. Switch the function item with the [↓] or [↑] key.		
Program mode [2] Simple setting	While holding down the [↓] key, press the [C] and the [D] key for 2 seconds or more from normal mode.		*The display will flicker.	Press [D] key for 2 seconds or more. [*1]	
			*The program mode [2] will be entered. Switch the function item with the [↓] or [↑] key.		
Program mode [3] Simple setting	While holding down the [↓] key, press the [A] and the [D] key for 2 seconds or more from normal mode.		*The display will flicker.	Press [D] key for 2 seconds or more. [*1]	
			*The program mode [3] will be entered. Switch the function item with the [↓] or [↑] key.		

[*1] To return to the normal mode without executing each function in mode [I], [R], [1], [2] or [3], press the [↓] and [↑] keys simultaneously.