



To return all settings to the factory settings ..... Function setting [RESET]

(1)

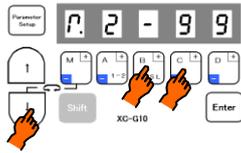


\* Enter program mode [R]  
([↓] + [B] + [C] keys)

(2)

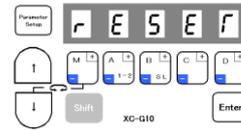


\* Program mode [R] will be entered.

(3)

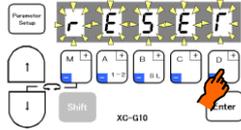

\* [RESET] will flicker when the [D] key is held down, and the reset process will be executed.

(4)

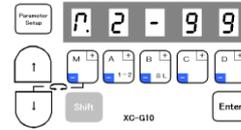

\* The data will be set to the factory setting when the [D] key is pressed over 2 seconds or more, and then the normal mode will be returned to. (Process is completed)

**Description**

- A. All settings will be returned to the factory settings when the [D] key is held down for two or more seconds while [RESET] is displayed. The display will return to the normal mode.
- B. To return to the normal mode from the [RESET] display without executing the reset process, press the [↑] key while holding down the [↓] key. In this case, the settings will not be returned to the factory setting.

**Caution**

When this function is set, the contents of all settings to this point will be cleared, and will return to the factory settings. Please take care when using this function.