

Erasing

Operation points


- Select "Read mode" from the menu.
- Select the target (internal memory/USB memory).
- Select the data, and execute erasing.

Operation details

(1)Selecting data erase

- ▶ Press  on the standard screen, and open the menu mode.
- ▶ Press .

Note Data erasing excluding the start position cannot be executed. Erase pattern data after home returning.

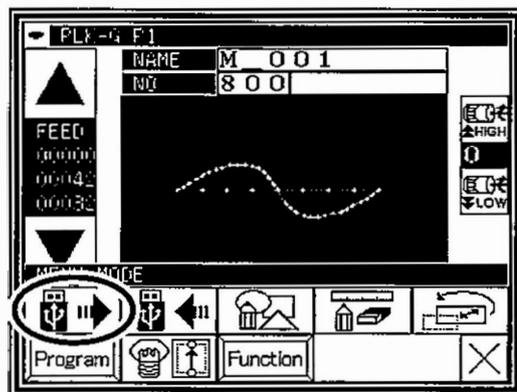


(2)Select the target (internal memory/USB memory).

- ▶ When the screen first opens, the mode to erase from the internal memory is selected.
(The mode display at the upper left of the screen is )
- ▶ Press  to change to erasing from the USB memory.
(The mode can also be changed by pressing )

Note If the USB memory is not inserted into the USB connector, USB memory icon can not be selected.


- ▶ If there is a large amount of data, press  to change the screen.

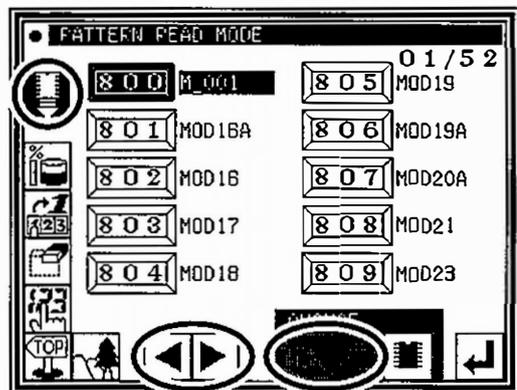

(3)Selecting and erasing the data

- ▶ Press (Select) the number of the data to be erased, and press .

Note A message confirming that you erase the data appears. If you cancel the erase operation, press the  icon. If you execute the erase operation, press the  icon. A message indicating that erasing is in progress appears, and then the Standard screen reappears.

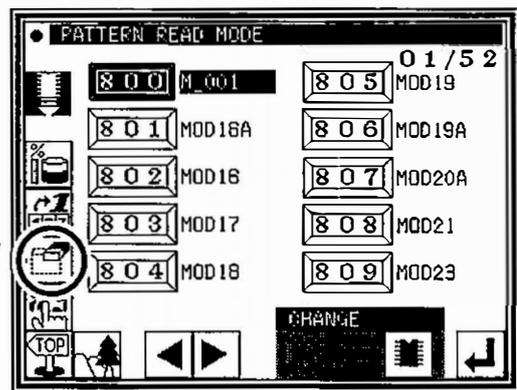

[Caution] When the target is the USB memory, do not remove the USB memory during erasing. (Doing so may result in data damage.)