


The Up Counter screen is explained below

(The Down Counter screen is the same, except for the valid/invalid icon design.)

* The methods of counting with the up counter (down counter) and clearing the counter are determined by the program mode setting. (Page[16]-7)

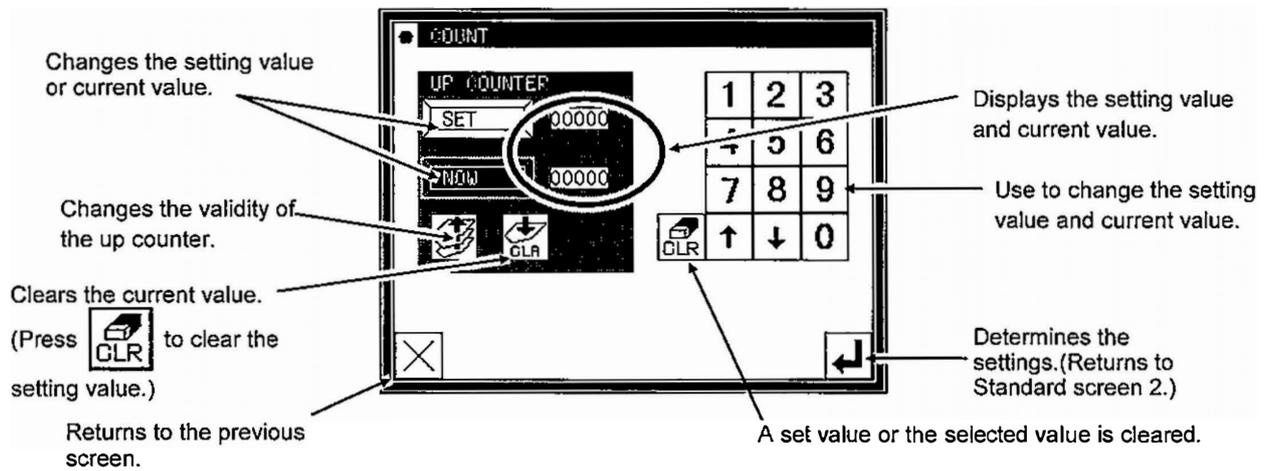

●When this screen is displayed, sewing cannot be performed.