

Reading, writing and erasing data (floppy disk)


(1) Reading (from floppy disk)

Operation points

- * Select Read from the menu.
- * Change the target to the floppy disk.
- * Select the data, and execute reading.

Operation details


1. Selecting data read

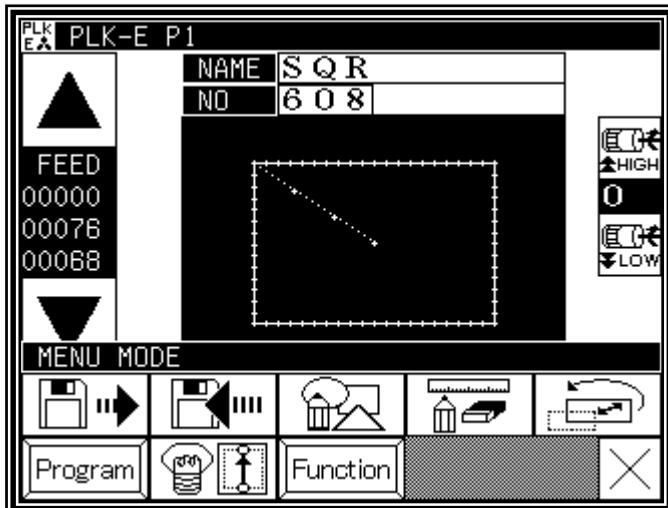

* Press on the Standard screen, and open the Menu mode.

* Press .

2. Changing from internal memory to floppy disk

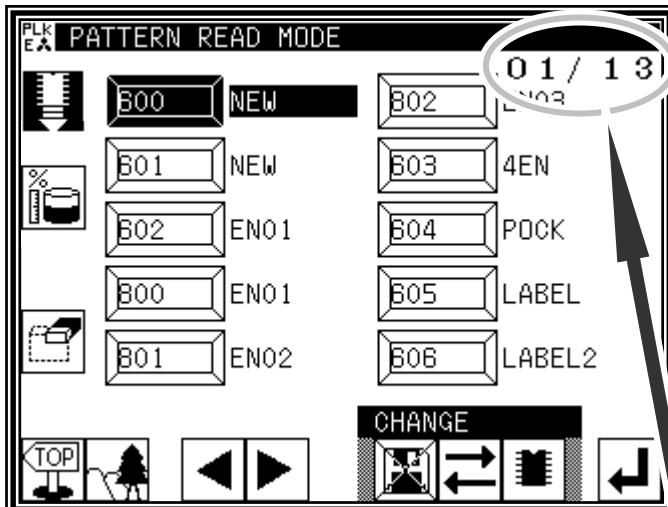

message indicating this will appear.

* When the screen first opens, the mode to read from the internal memory is selected.

(The mode display at the upper left of the screen is .)

* Press to change to reading from the floppy disk.

(The mode can also be changed by pressing .)


[Memo] If a floppy disk is not inserted, a

* If there is a large amount of data, press and to change

the screen.

The page of the currently-displayed screen will be displayed.

3. Selecting and setting the data

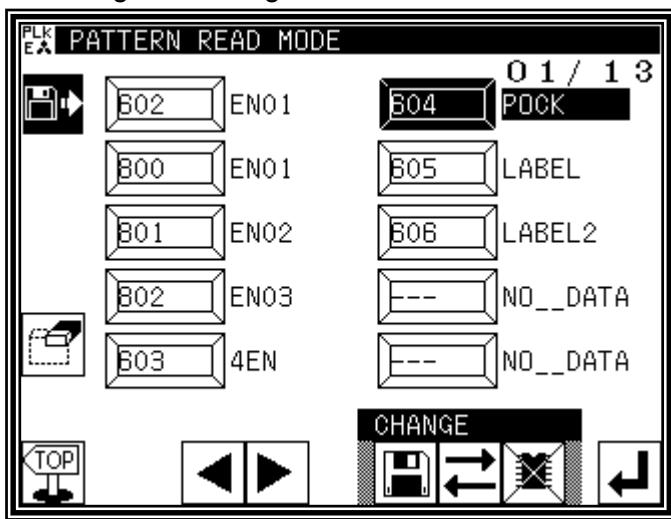

* Press the number of the data to be read, and then press .

* If data with the same number as that in the selected floppy disk is found in the internal memory, a message prompting whether to overwrite the same number will appear.

If is pressed at this time,

the Read screen will reappear without reading the data.


If the data can be overwritten, press .

[Memo] If the data is overwritten, the data in the internal memory will be erased. This can be avoided with the following method.

* Save the internal memory data having the same number onto another floppy disk. (Refer to "Writing (to floppy disk)" in the next section.)

* Change the number of the internal memory data having the same number, and save it in the internal memory.

4. Completing reading

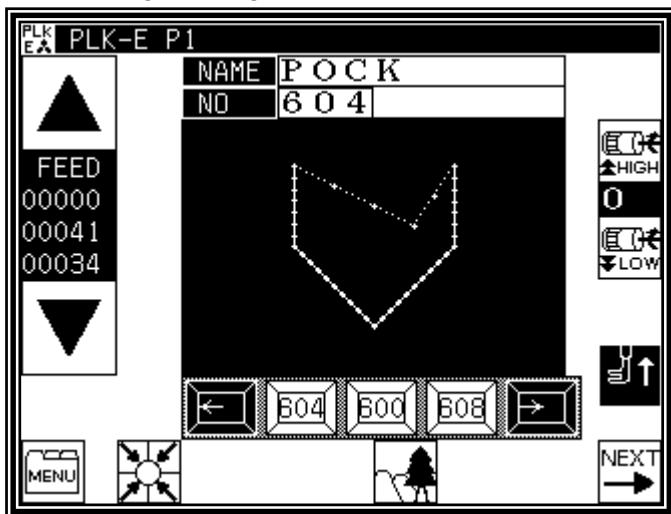

* The read data will be displayed.

(2) Writing (to floppy disk)


Memo The sewing data of 224 patterns can be written in the maximum. (The number of patterns which can be written according to the content of the data.)

Operation points

- * Select Write from the menu.
- * Change the target to the floppy disk.
- * Set the pattern name and number, and start writing.


Operation details

1. Selecting data write

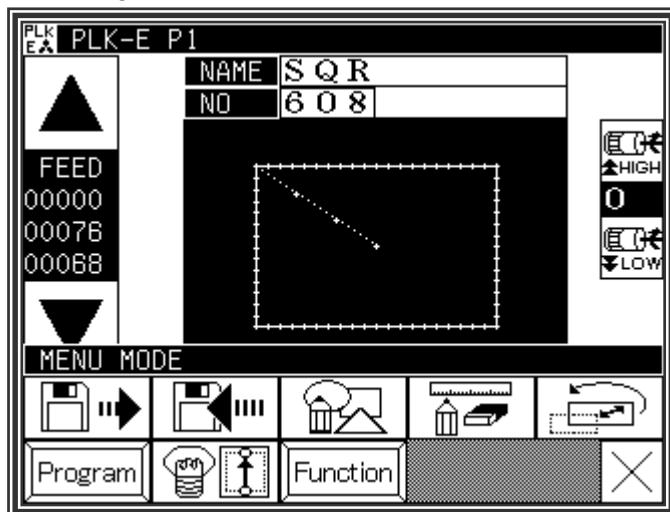

- * Press on the Standard screen, and open the Menu mode.
- * Press

2. Setting the pattern name and number

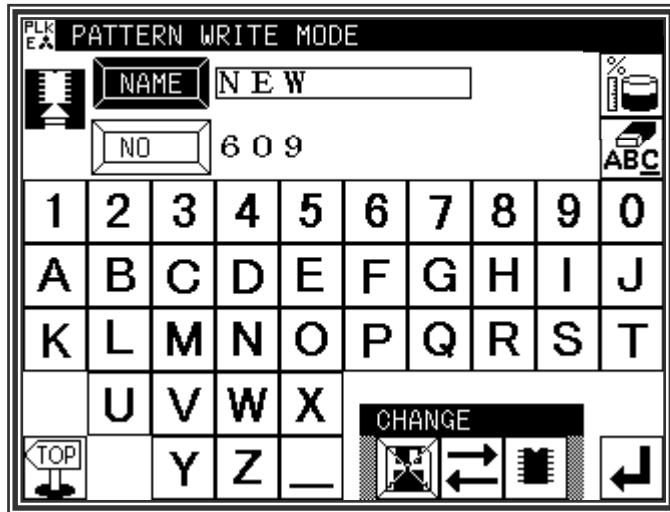

* In the same manner as when reading data, the default mode when the screen is opened is the internal memory mode. Change to the floppy disk mode. (Refer to steps 2 and 3 for reading data.)

* Set the pattern name and number. (The default pattern name and number are set.)

To change the pattern name,


press , and to change the number press .

Highlight the key, and then change the setting.

*When the key is pressed,

one of the alphanumeric characters from the right can be deleted from the pattern name or number.

3. Starting writing

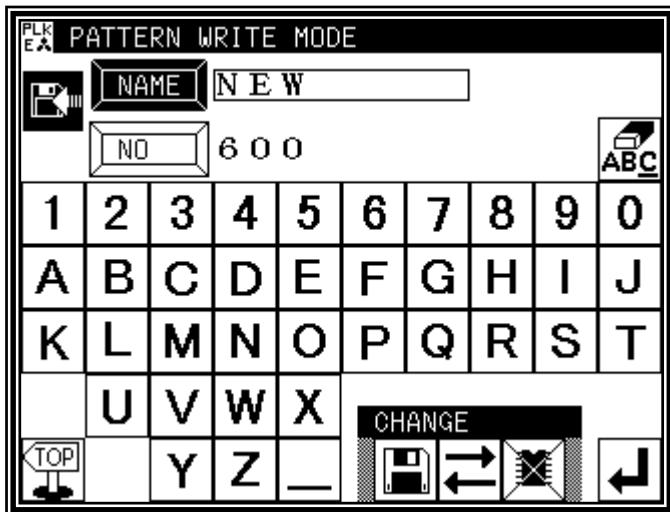

overwriting the data.

[Memo] If a floppy disk is not inserted, a message indicating this will appear.

* Press .

* If the same number as the data number to be written is found in the floppy disk, a message prompting whether to overwrite the same number will appear.



If is pressed at this time,

the Write screen will reappear without

If the data can be overwritten,

press .

* After the message indicating writing in progress appears, the Standard screen will reappear.


(3) Erasing (from floppy disk)

Operation points

- * Select Read from the menu.
- * Change the target to the floppy disk.
- * Select the data, and start erasing.

Operation details


1. Selecting data erase

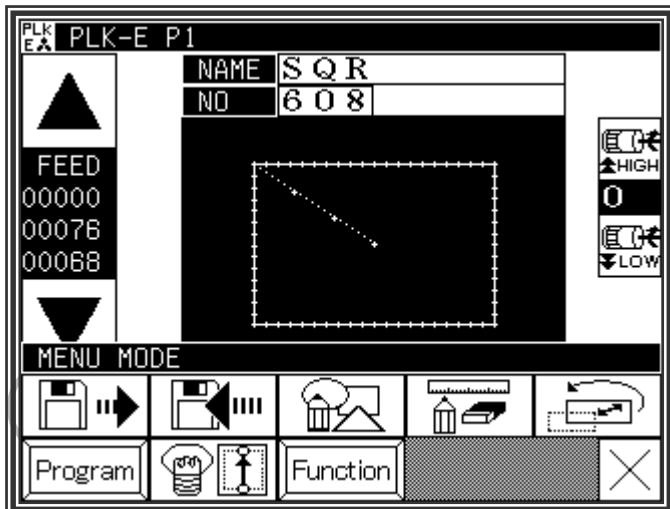

* Press on the Standard screen, and open the Menu mode.

* Press .


2. Changing between internal memory and floppy disk

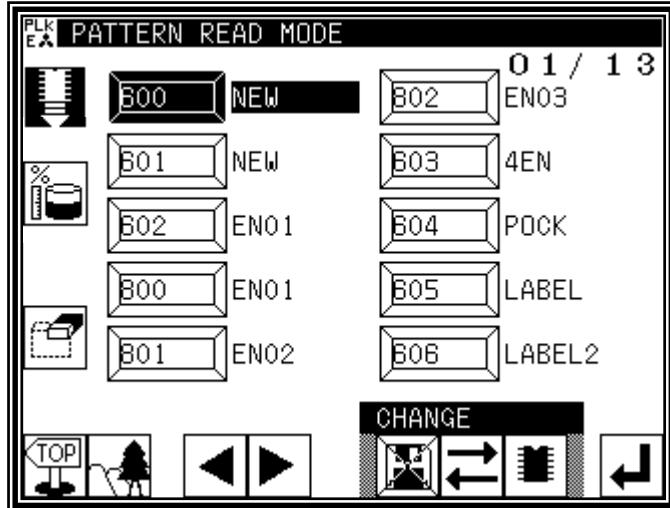

* In the same manner as when reading data, the default mode when the screen is opened is the internal memory mode. Change to the floppy disk mode. (Refer to steps 2 and 3 for reading data.)

[Memo] If a floppy disk is not inserted, a message indicating this will appear.

3. Selecting and erasing data

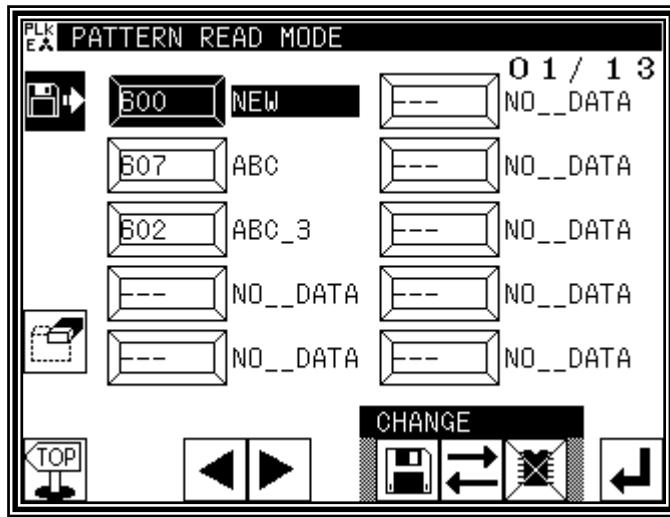

* Press (select) the number of the data to



be erased, and press .

* A message confirming the erasing will appear.

To cancel the erasing process,

press . The data will not be erased, and the Read screen will reappear.

To erase the data, press .



After a message indicating the erasing in progress appears, the Standard screen will reappear.