


Adjustment of the trimmer cam follower

- (1) Turn the power switch off and remove the top cover.
 - (2) Loosen the arm set screw (No.3) to adjust the cam follower (No.1) with a cam groove clearance of about 1mm between the cam follower and the trimmer cam (No.2).
 - (3) Loosen the nut (No.4) for turning the adjust screw (No.5).
 - (4) Turn the pulley so that the needle bar moves to the lowest position.
 - (5) Push the cam follower arm (No.1) to the arrow direction "A" and put the cam into the cam groove of the trimmer cam (No.2).
 - (6) When tightening the adjust screw (No.5) in the condition described above, the cam follower is pushed into the cam groove then, the cam follower arm (No.1) is not returned even when releasing the cam follower arm .
 - (7) When loosening the adjust screw (No.5) to the point "a" shown on the figure, the cam follower arm (No.1) goes back to the position in the direction "B"
- Loosen the nut (No.4) from the point "a" to "b", 90-degree turns, and then fix the adjust screw (No.5).

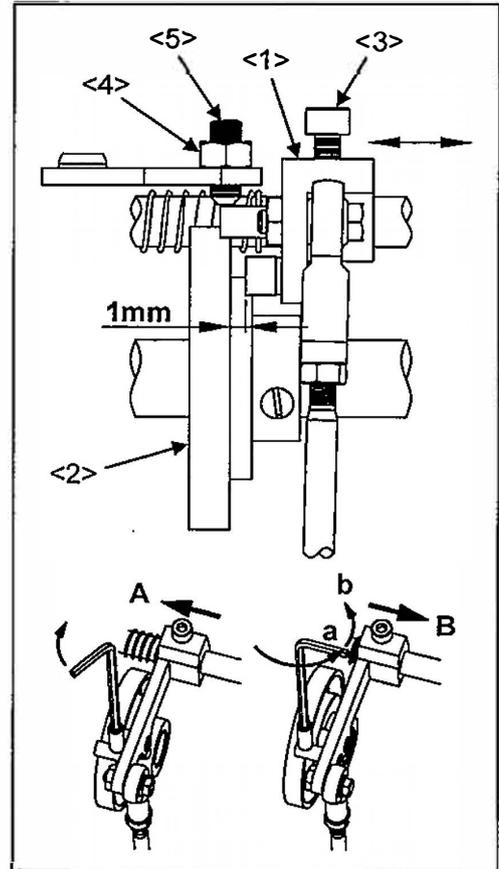

<1>: Cam follower arm <2>: Trimmer cam
<3>: Arm set screw <4>: Nut <5>: Adjust screw