


Adjustment of the fixed knife position

- (1) Open the cylinder cover (No.1) and remove the ring-E type (No.4), which engages the movable knife (No.2) and the thread trimmer link (No.3).
- (2) Loosen the screw (No.5) then, remove the slide plate (No.6).
- (3) Adjust the fixed knife (No.7) position to be positioned for the blade edge to have the clearance 0.5mm from the edge of the needle plate (No.8), which is standard position.
- (4) For the adjustment of the fixed knife (No.7) position, loosen the screw (No.9) and move the knife.

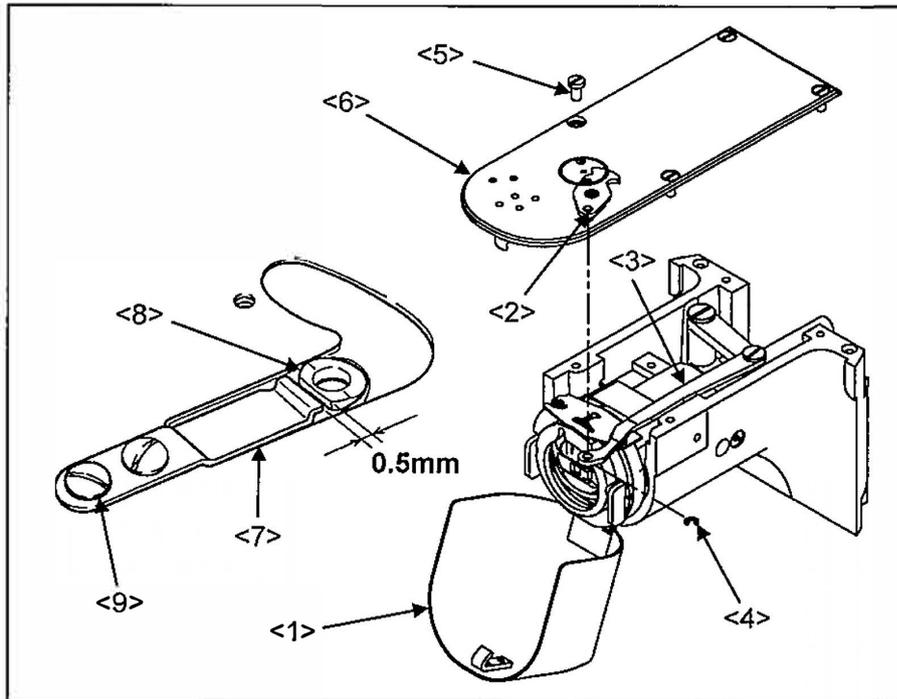

- <1>: Cylinder cover
- <2>: Movable knife
- <3>: Thread trimmer link
- <4>: Ring-E type
- <5>: Screw
- <6>: Slide plate
- <7>: Fixed knife
- <8>: Needle plate
- <9>: Screw