


Adjustment of the thread tension (Shuttle hook type)


(1) Adjustment of bobbin thread tension

Adjust the bobbin thread tension with the thread tension adjusting screw (No.2) on the bobbin case (No.1). The thread tension becomes loose when loosening the thread tension adjusting screw (No.2) counterclockwise, and the thread tension becomes tight when tightening the thread tension adjusting screw clockwise.

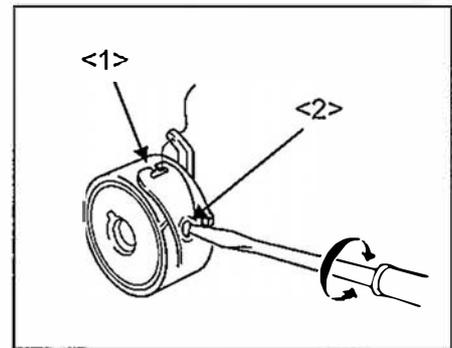

(2) Bobbin thread tension (Rotary hook type)

Adjust the bobbin thread tension with the thread tension Adjusting screw (No.2) on the bobbin case (No.1). The thread tension become loose if turn the thread tension adjusting screw (No.2) to the counterclockwise, and the thread tension becomes tight if turn it to the clockwise.

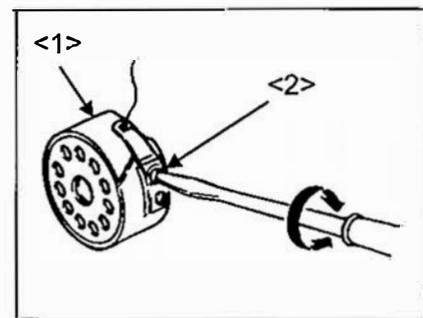

<1>: Bobbin case latch

<2>: Adjusting screw

