


### Adjustment of the position for movable knife

- (1) Tilt the sewing machine head and open the cylinder cover.
- (2) Check the movable knife (No.1) whether the movable knife is at the standard home position 0.5mm far from the front face of the shuttle hook retainer (No.2).
- (3) For the adjustment of the movable knife point, loosen the hexagon head bolt (No.3) and move the horizontal thread trimmer rod (No.4) then, adjust the position of the movable knife point.

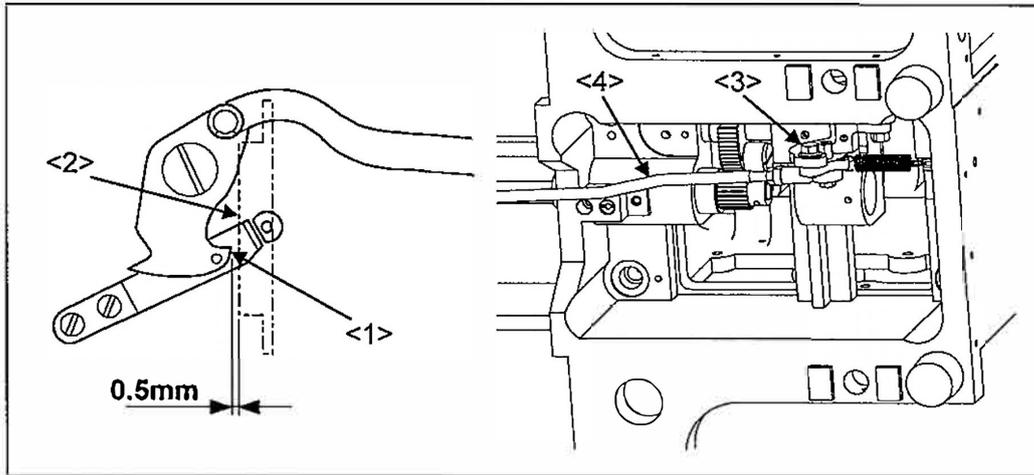

<1>: Movable knife <2>: Shuttle hook retainer <3>: Hexagon head bolt <4>: Horizontal thread trimmer rod