

Manual / Test mode conversion switch (No.1)

When this switch is ON, operation mode is changed to test mode. In this mode, each cylinder can be operated separately by the operation panel. Please refer to [7-6 Test mode operation] the following page.

