

Initial setting of the setting table


For the thermal trimming system function it is necessary to initial setting of setting table. Please perform the procedures below.

[Notice] If this setting not performed the thermal trimming system does not function.

Reading of the Setting table/Step file


(1) Turning on the power supply

While holding down the [F] key on the front panel of the control box, turn the machine power ON.
(Keep pushing [F] key until red LED on the front panel is turned on.)

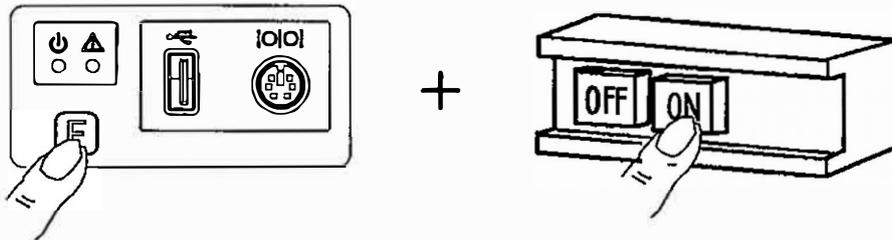

(2) Setting of the Setting table/Step file


Press 

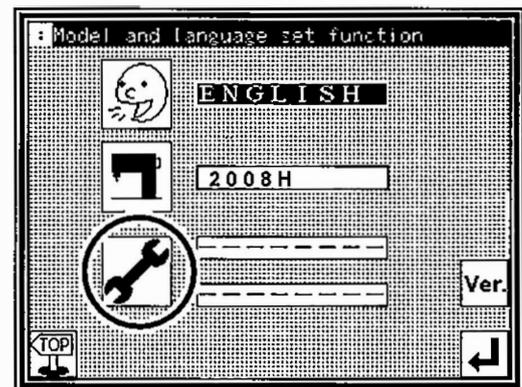

(3) Setting table/Step file reading mode

Press 

To the connector on the front panel of the control box, connect the USB memory [*1] for initial configuration that comes, please press .

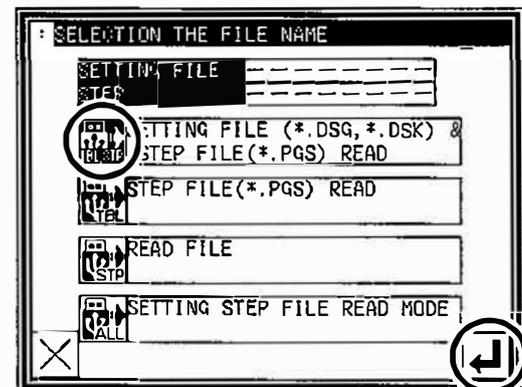


[*1] If the USB memory for initial configuration that comes with is not available on the loss, etc., refer to the section of this technical manual "5-2-2. How to create a USB memory for initial configuration", please create a USB memory.

(4) The screen to select the step file is displayed. Please choose the [2008HT **] by using up and down arrow button. (The ** mark displays file version.)

[Notice] Please make sure that the file name

[2008HT **] is selected correctly. If you are set in different file names, it may cause a malfunction.

Press  .

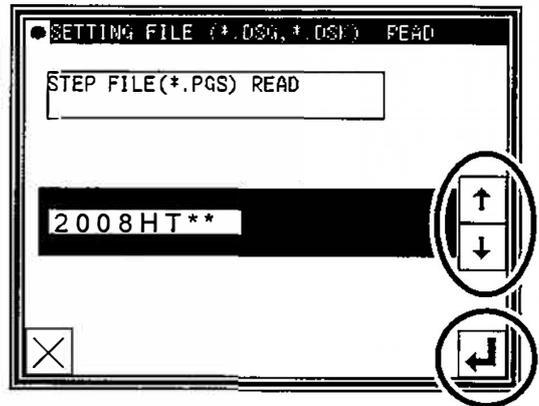


(5) The screen to select the setting file is displayed.

Please choose the [2008HT **] in the same way.

[Notice] Please make sure that the file name

[2008HT **] is selected correctly. If you are set in different file names, it may cause a malfunction.

Press  .

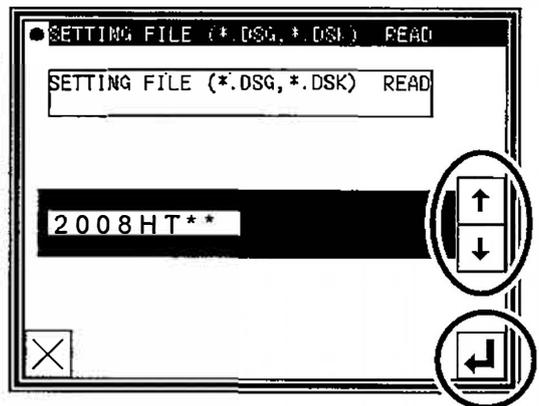

(6) Re-turning on the power supply

Please turn the power off the message "M-290 : READING COMPLETE" appears.

(7) After check the LED lamp has completely off on the front panel of the control box, turn the power on.

