

ENGLISH

PS-910

Barcode reader

INSTRUCTION MANUAL



CAUTION :

This Instruction Manual describes the barcode reader. When you want to use your sewing machine with this product attached, refer to the “Safety precautions” in the Instruction Manual for your sewing machine carefully until you fully understand the included precautions in prior.

CONTENTS


1. Installing the parts	1
2. Setting the barcode functions	5
2-1. Setting the barcode functions on the operation panel	5
2-2. Setting the barcode number	7
2-3. Cancelling the barcode number	8
2-4. How to use the barcode reader	8

1. Installing the parts




WARNING :

Be sure to turn OFF the power supply and air supply to the sewing machine before attaching the parts in order to protect against accidents caused by an unintended start of the sewing machine.

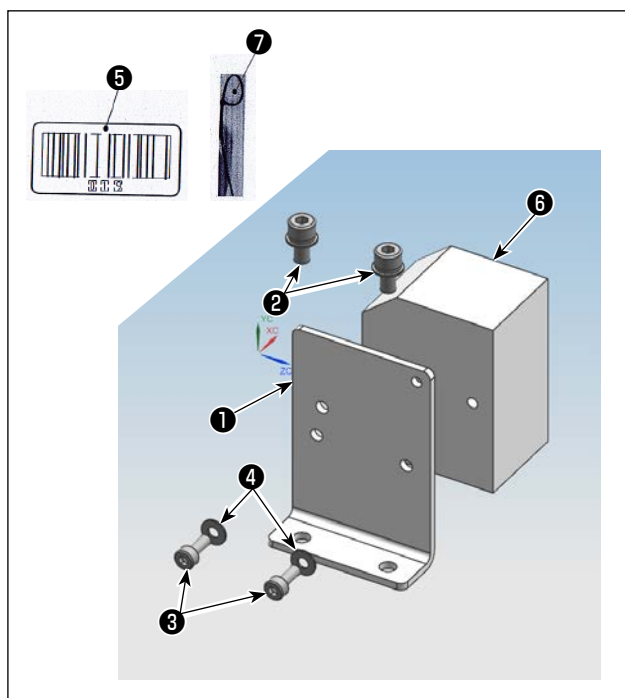

No.	Part number	Part name	Quantity
①	40282404	Barcode reader mounting plate	1
②	40235469	Screw	2
③	40234454	Screw	2
④	40234514	Washer	2
⑤	40235331	barcode seal	100
⑥	40235199	Barcode reader	1
⑦	40235332	Cable clip band	1

[13090]

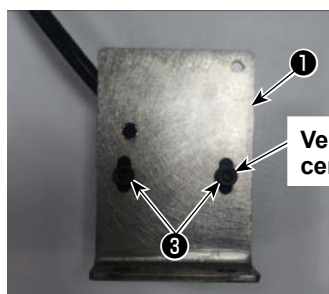





1) Fix the barcode reader ⑥ and the mounting plate ① with the screws ③ .




The mounting angles of 13090 and 6055 are different.

[6055]

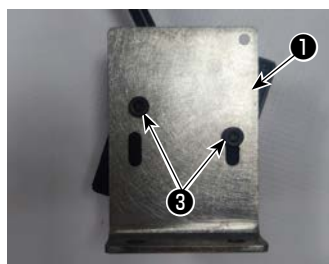

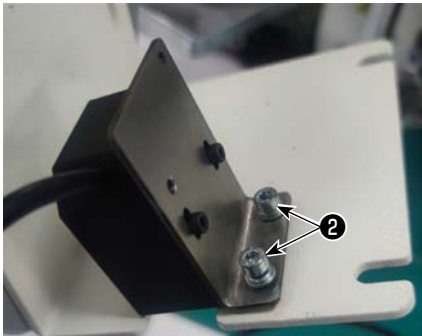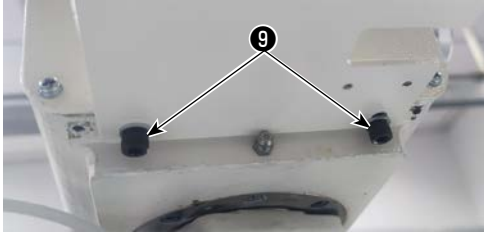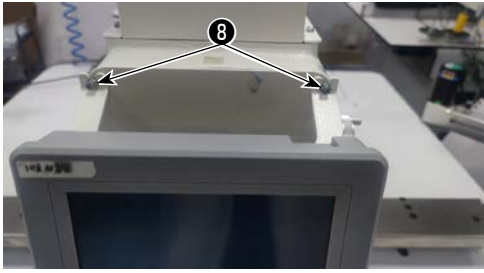

- 2) Remove the panel mounting plate fixing screws ⑧ and ⑨ , and fix the barcode reader mounting plate ① and the panel mounting plate with the screws ② .

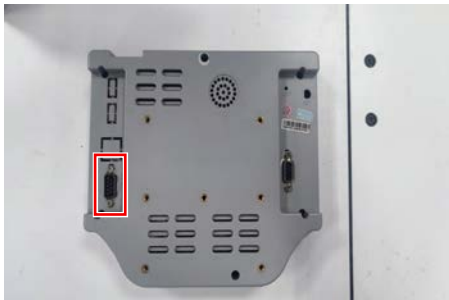

- 3) Connect the barcode reader plug to the connector at the panel as shown.




- 4) Pass the cable clip band ⑦ through this hole in the barcode reader mounting plate and fix the cable behind the panel.




Cut the excess cable clip band.




- 5) The installation is complete after attaching the panel mounting plate in its original position.

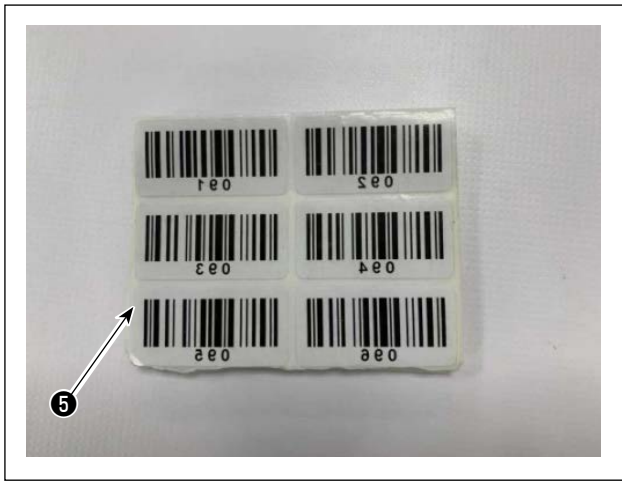

6) Take out a seal from barcode seals ⑤ provided.

 One hundred barcode seals (with serial numbers from 001 to 100) are provided.


[13090]

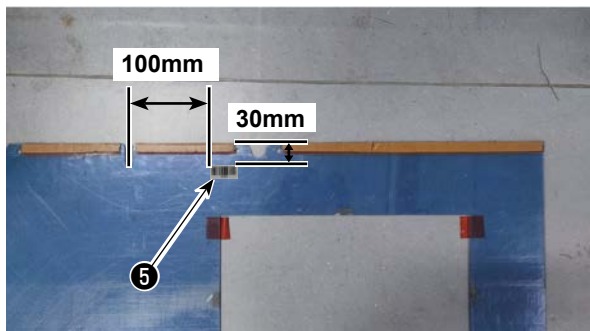

13090 :

Stick the barcode seal 100 mm to the right side from the center of the cassette (setup guide) and 30 mm from the upper side of the cassette.

[6055]

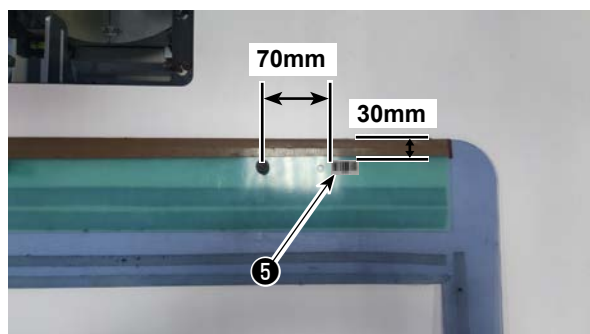


6055 :


Stick the barcode seal at a position 70 mm to the right side from the center of the right template stand and 30 mm from the upper side of the cassette.

2. Setting the barcode functions

2-1. Setting the barcode functions on the operation panel

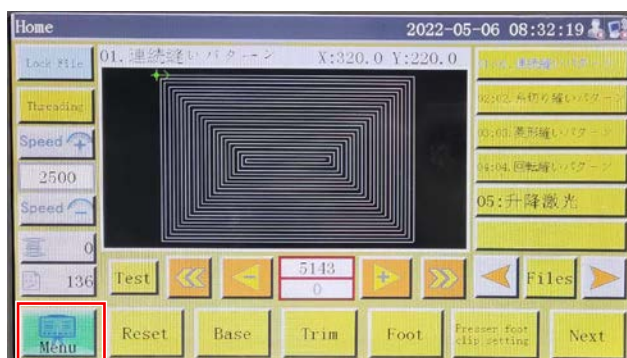


1) Press button **A**.

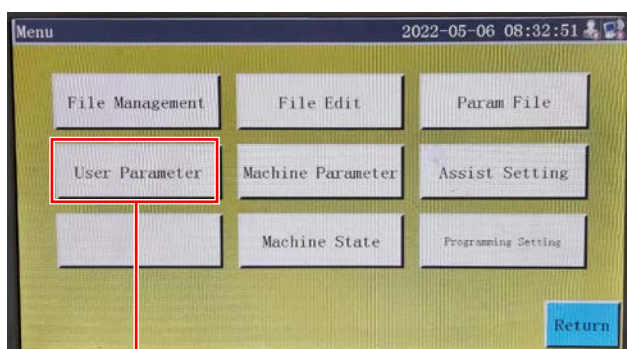


2) Press button **B**.

In the default state, the factory-set password is provided. The password is "11111111".

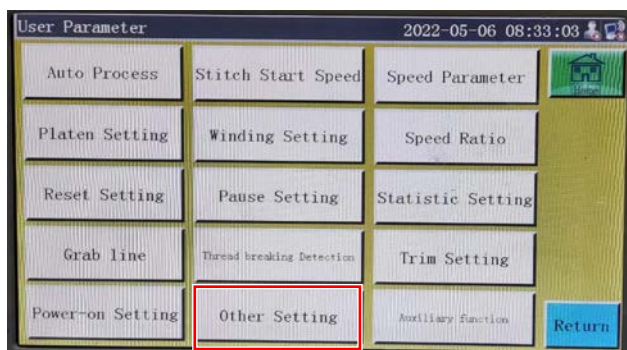


3) Press button **C**.

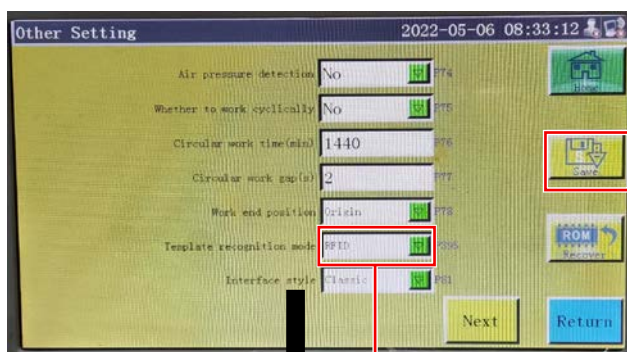


4) To allow the barcode reader to recognize the template, change **D** from "Electronic identification label" to "Barcode". Then, press **E**.


Template recognition mode Barcode

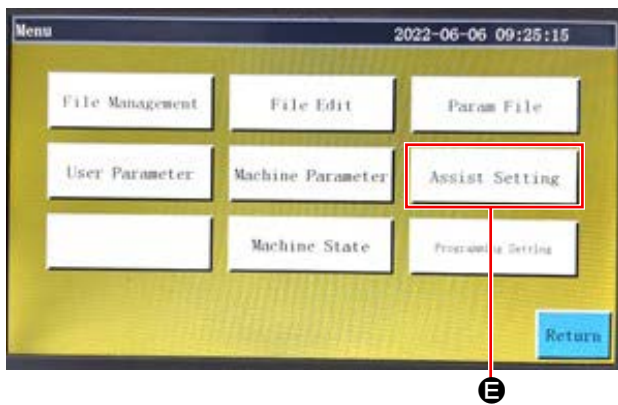


- 5) Return to the screen of 2).
Press button **E**.

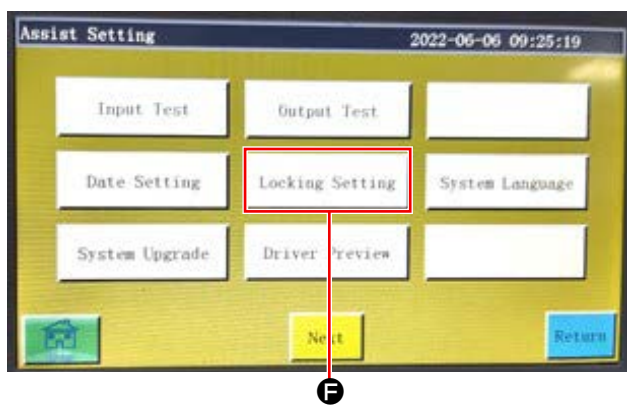

- 6) Press button **F**.

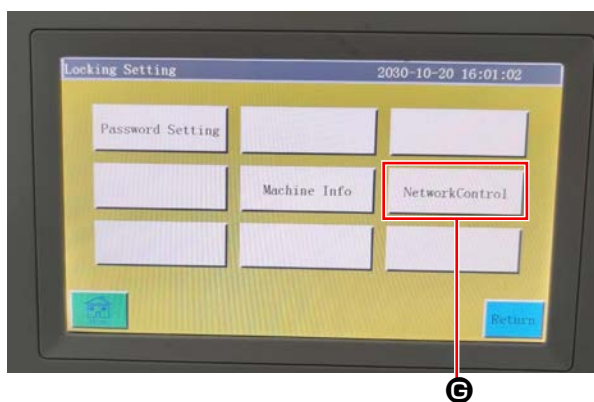


- 7) Press button **G**.
The password is "11111111".

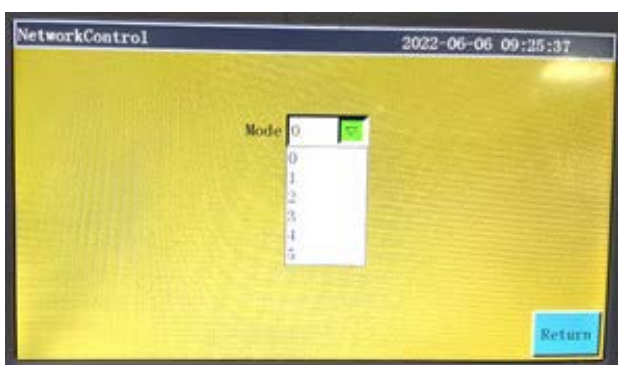


- 8) Set the mode to "0".

2-2. Setting the barcode number

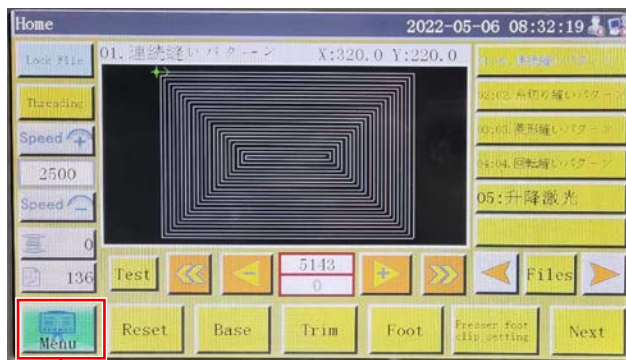


1) Press button **A**.

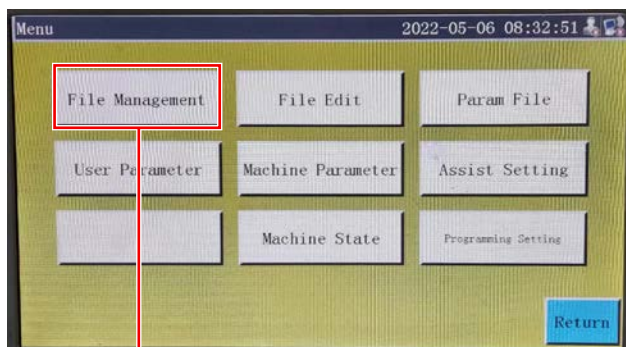

2) Press button **B**.



3) Select the sewing pattern file you want to read and press button **C**.

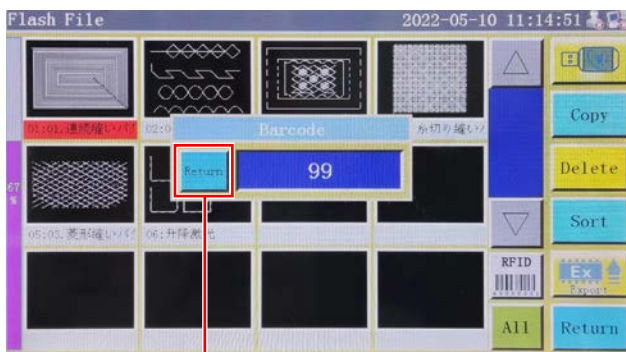

4) Press button **D**.
Save the data.

2-3. Cancelling the barcode number

When you want to cancel the barcode reader number, it is necessary to set the current number to the largest value (the largest one of unassigned numbers, such as 100) first. Then, change that number to "0".

Example)


1	2	3	4	5	6
		↓			
		0			

1	2	3	4	5	6
		↓			
		7 (or 8 to 100)			

When the number "3" is changed to "0", the subsequent numbers registered "4, 5 and 6" will also be erased.

To prevent the aforementioned erasure of registered numbers you do not want to erase, firstly set the barcode number to the largest available value "7", then change it to "0".

2-4. How to use the barcode reader

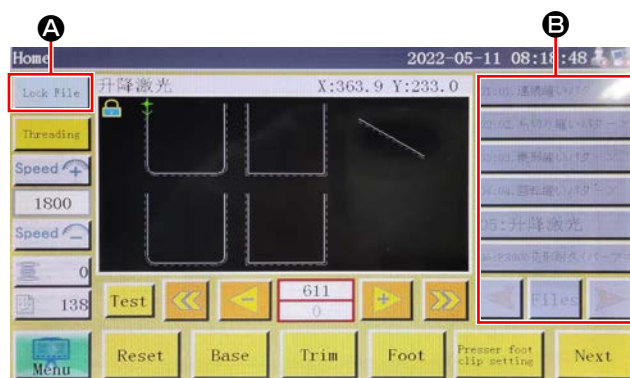

1) Press button **A** to lock the pattern conversion.



The barcode is enabled by locking the pattern conversion.
When the pattern conversion is locked, pattern list **B** changes its color to gray.



2) Place the barcode seal in the cassette right under the barcode reader.

When the barcode reader recognizes the barcode, the barcode reader beeps.



If the barcode reader does not beep, adjust the vertical position of the barcode reader.
If the pattern is not converted even when the barcode reader beeps, check the self lock.



3) Check whether the pattern is converted appropriately.