

Reading


Operation points

- Select "Read mode" from the menu.
- Select the target (internal memory/USB memory).
- Select the data, and execute reading.


Operation details

(1) Selecting data read

Note Data reading excluding the start position cannot be executed. Read pattern data after home returning.

▶ Press  on the standard screen, and open the menu mode.


▶ Press  .

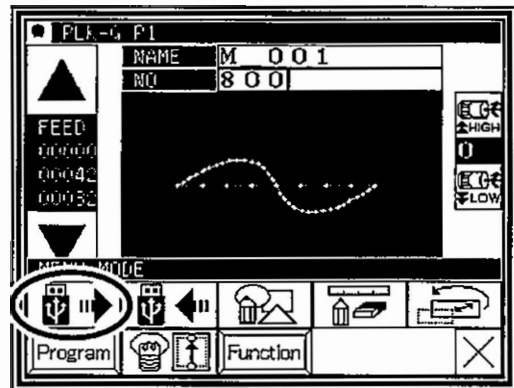


(2) Select the target (internal memory/USB memory).



▶ When the screen first opens, the mode to read from the internal memory is selected.


(The mode display at the upper left of the screen is )

▶ Press  to change to reading from the USB memory.

(The mode can also be changed by pressing )

Note If the USB memory is not inserted into the USB connector, USB memory icon can not be selected.


▶ If there is a large amount of data, press   to change the screen.

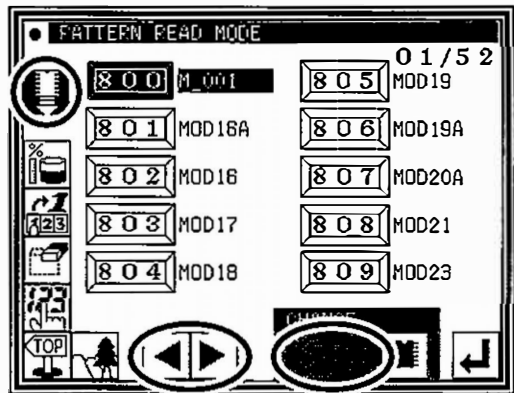

(3) Selecting and setting the data


▶ Press the number of the data to be read, and then press



Note When you read data from the USB memory and select a data number that already exists in the internal memory, a message confirming that you overwrite the data appears. If you do not overwrite the data, press the  icon. If you overwrite the


data, press the  icon.


▶ The read data will be displayed.

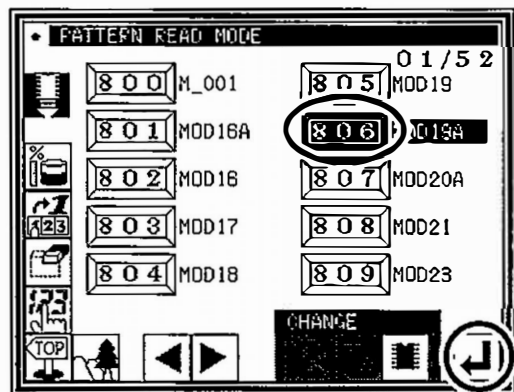


[Caution] When the target is the USB memory, do not remove the USB memory during reading. (Doing so may result in data damage.)

 (4) Specifies pattern data number 2

 - ▶ Next press number button [6].
- ▶ Then all pattern data which number starts from 86 is displayed.
- ▶ At this time, desired pattern number [861] is displayed, then press .

Note It is also available, if inputs 3 digits in the column as [861] and push  button.

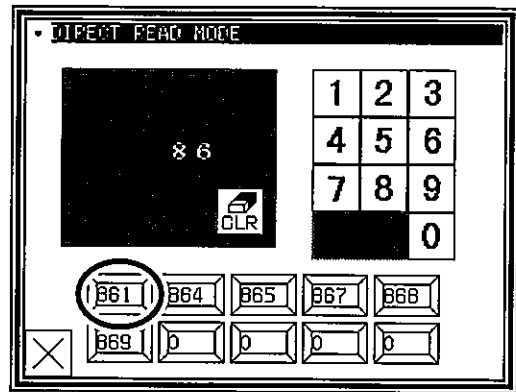

(5) Data read complete

- ▶ Standard screen with the figure of pattern number [861] is displayed.

