


Setting for material step level

Presser foot height between the sewing can be changed according to the step of the material thickness.
(In change the height of the presser foot according to the situation of the sewing material, it is effective to prevent skip stitch or prevent thread breakage.)

The method in the pattern data input is as follows. Please refer to P.[11]-43 for the pattern data modification.


- (1) On the way of pattern data input, please execute following operation at the position where presser foot height will be changed.

▶ Press .

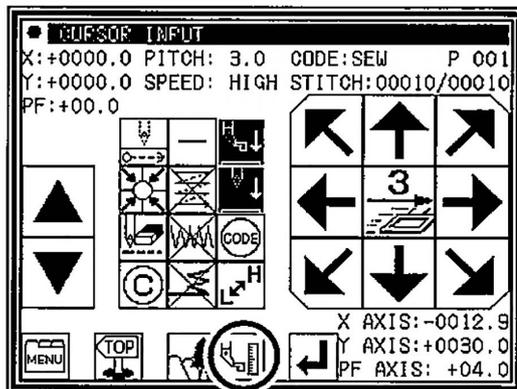

- (2) Setting material step


▶ Press  and presser foot is lowered. Turn the hand wheel and needle lowered to the lowest position. Then up and down arrow icon is activated.

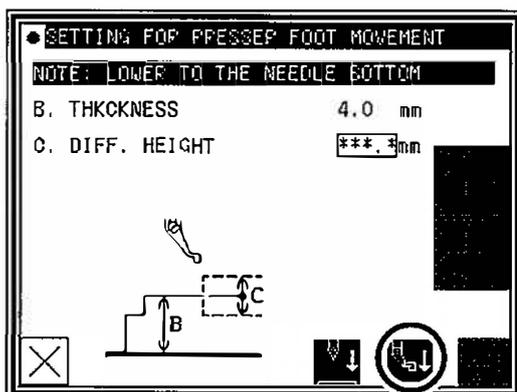

▶ Press up and down arrow to change the presser foot height.
(example shows presser foot height = 1.6 mm.)

▶ After setting value, press .

* Please consider interference between the presser foot and the needle bar.

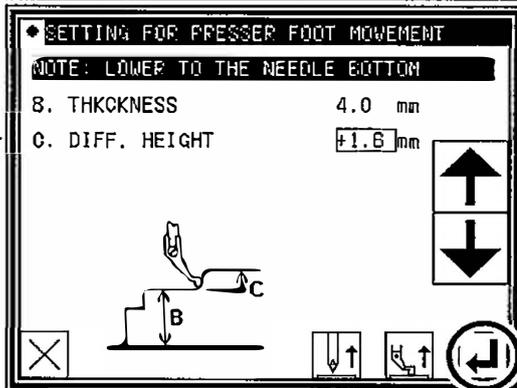

- (3) Next setting (if desired)

▶ If there is more position where presser foot height wants to be changed, please repeat above operation (1) to (2).

