Program mode
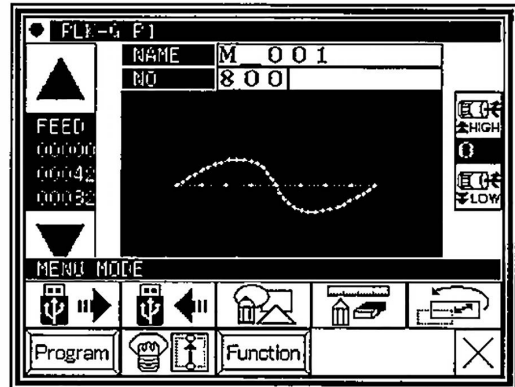
MEMO For each function explanation, please refer to [16] Program mode list

Setting methods

■Entering the program mode

►Press [MENU] and [Program] on the Standard panel, and open the Program Mode panel.

■Program Mode panel

This panel is used to select the program mode. There are several mode selection pages.
Press the ◄ ► icons to change the page.

01/04
- Wiper
- Area limit
- Slow start
- Needle position
- Clamp
- Thread trimming sensor

02/04
- home position
- Brake
- Halt
- Presser foot
- Counter
- Bobbin winding

03/04
- Feed method
- Step
- Speed
- Jog
- Thread trimming/Thread release
- Feed angle

04/04
- Other
- Pattern
- Special