



LIMISERVO XC-G series TECHNICAL INFORMATION MANUAL

Motor XL-G554-10Y, XL-G554-20Y,
XL-G754-20Y

Control box XC-GMFY

**Induction type AC servo motor
and control box with automatic
needle positioner**



Thank you for purchasing this product.

Please read this manual thoroughly before use to ensure safe and proper use.

Please read the instruction manual for the machine head together with this manual.

Save this manual for future reference.

1	Contents.....	1
2	Safety Instructions.....	2
3	Points of Caution.....	3
4	Names of Each Part.....	4
5	Installation	5
	1. Installation of the motor.....	5
	2. Installation of the control box.....	5
	3. Installation of the pulley.....	5
	4. Mounting of the belt.....	5
	5. Installation of the protective cover	6
	6. Installation of the position detector	7
	7. Connection of our sewing machine and control box	7
6	Wire and Grounding.....	8
	1. Insertion of the power connector	8
	2. Connection of 3-phase power.....	8
	3. Current capacity	8
	4. When using the 3-phase 200 - 240V class LIMISERVO with single phase 200 - 240V class	8
7	Confirmation.....	9
	1. Before turning switches on.....	9
	2. Turn on the power.....	9
8	Adjustments	10
	1. Adjustment of stopping position	10
	2. Adjustment of pedal toe down pressure, and heeling pressure	10
	3. Adjustment of operation speed	11
9	Changing the solenoid voltage and output voltage.....	12
	1. To change solenoid voltage DC24V/DC30V	12
	2. Changing the output voltage between 0VDC and 5VDC	12
10	Operation of the Control switch Panel Keys.....	13
	1. Displays during normal mode and functions of each key.....	13
	2. Selection of each mode.....	13
	(1) Types of program mode.....	13
	(2) Selection of each program mode from the normal mode.....	14
	(3) Direct number call function	15
	3. Using the normal mode.....	16
	4. Changing to the tacking, preset, pattern NO. selection mode.....	17
	(1) Tacking setting mode	17
	(2) No. of tacking stitches setting mode	17
	(3) Preset stitching setting mode	18
	(4) Pattern No. selection mode	18
	5. Using the program mode [1] simple setting	19
	6. Using the program mode [2] simple setting	21
	7. Using the program mode [3] simple setting	23
11	Function List	25
12	How to Use the Option Connector	29
	1. Connector Layout	29
	2. To use as a standing work type sewing machine	30
13	Error Display.....	31
14	Specifications	32
	<Reference> Table of digital display	32
	Dimensions (MOTOR and CONTROL BOX)	33

1. To ensure safe use

*Always observe the following items to ensure safe use of the industrial sewing machine drive unit (motor and control box).

1.1 Before starting

Read all instruction manuals thoroughly before starting use of this drive unit, and follow the technical manuals. Also read the instruction manuals for the installed sewing machine.

1.2 Application and purpose

This drive unit is designed to drive a sewing machine and must not be used for other applications or purposes. Do not use this drive unit until it can be confirmed that safety measures for the installed sewing machine have been taken.

1.3 Work environment

Use this drive unit in dry and well-kept clean locations, e.g. in the clothing industry, and which process dry sewing material.

Avoid using this control unit in the following types of environments.

- | | |
|------------------------------|---|
| (1) Power voltage | - Place where voltage fluctuation exceeds $\pm 10\%$ of the rated voltage. |
| | - Place where the specified power capacity cannot be secured. (Refer to page 8) |
| (2) Electromagnetic noise | - Place where strong electric or magnetic fields are generated such as near a large-output high frequency oscillator or high frequency welding machine. |
| (3) Temperature and humidity | - Place where atmospheric temperature is 35 degree or higher and 5 degree or lower. |
| | - Place subject to direct sunlight or outdoors. |
| | - Near a heat source such as a heater. |
| | - Place where relative humidity is 45% or less and 85% or more, or where dew condensation occurs. |
| (4) Atmosphere | - Atmosphere with dust or corrosive gases. |
| | - Atmosphere with combustible gases or explosive atmosphere. |
| (5) Altitude | - Place where altitudes exceeds 1,000m above mean sea level. |
| (6) Storage | - Place where storage temperature is 55 °C or higher and -25°C or lower. |
| (7) Vibration | - If excessive vibration occurs when the control box is installed on the sewing machine, install it separately. |

2. Installation

2.1 Motor and control box

- Correctly install according to the attached technical manuals.

2.2 Accessories

- Always disconnect this control unit from the main power supply when installing any accessories listed in the technical manual. (Turn the main switch OFF, and remove the plug from the outlet (power supply line).)

2.3 Cable

- (1) Arrange the connection cable so that excessive force is not applied during use, and do not excessively bend the cable.
- (2) Cables near moving parts (e.g., pulley) must be wired at a minimum distance of 25mm.
- (3) Confirm that the power voltage of the power cable for supplying to the control box meets the specifications on the motor and control box rating nameplates before connecting it to the power line. Connect it to the designated places to supply the power. Perform this step with the power switch turned OFF.

2.4 Grounding

- Correctly connect the power cable grounding to the power supply grounding.

2.5 Accompanying appliances and accessories

- Electric accompanying appliances and accessories must be connected to the place listed in this manual.

2.6 Removal

- (1) Turn the power switch OFF and remove the plug from the outlet (power supply line) before removing the motor or control box.
- (2) Do not pull on the cord when removing the plug. Always hold the plug itself.
- (3) There is a high voltage applied inside the control box, so always **wait at least 10 minutes after running the power switch OFF** and remove the plug from the outlet (power supply line) before opening the control box panel.

3. Maintenance, inspection and repairs

- Follow the technical manuals for maintenance and inspection of this control unit.
- Repairs and maintenance must be done and approved by specially trained personnel.
- Do not run this control with the ventilation openings of the motor's dust-proof filter blocked or clogged with dust, loose cloth, etc.
- Always turn the power switch OFF and remove the plug from the outlet (power supply line) before replacing the sewing machine needle or bobbin, etc.
- Always use original replacement parts for repairs or maintenance.

4. Other safety measures

- Keep fingers away from all moving machine parts (especially near sewing machine needle, etc.).
- Do not drop this control unit.
- Do not operate this product without parts such as the protective cover or protective devices such as the safety breaker.
- The servomotor surface may reach high temperatures depending on the operation conditions and loads. Do not touch directly.
- If any damage is observed on this control unit, if the drive does not run properly or if operator is uncertain about operation, do not operate the drive unit. Operate the drive only after adjustments, repairs and approvals have been made by qualified personnel.
- The user must avoid making modifications or changes based on user's judgment.
- When system have to be stop in case of emergency, remove the power supply plug from the power supply line.

5. Hazard display, warning display

- (1) This symbol indicates risk that may cause personal injury or risk to the machine when mishandling of products.



- (2) This symbol indicates electrical risks and warnings.



- (3) This symbol indicates thermal risks and warnings.



- Always deliver this instruction manual to the end user.
- Save these technical manuals for future reference.




Caution

1. Please remove your foot from the pedal when turning the power ON.
2. Always turn the power OFF when leaving the machine.
3. Do not inspect the control circuit with a tester.
4. Always turn the power switch OFF before tilting the sewing machine, replace the needle or threading the needle.
5. Always ground the grounding wire.
6. Do not use branched wiring.
7. The brakes may not function when the power is turned OFF or when there is a power failure during sewing machine operation.
8. Match the connector shape and direction, and insert securely.
9. Keep the signal wire as short as possible when connecting the external switch to the connector of control box. If it is long, malfunctions may occur. Use a shield wire when possible.
10. Install the sewing machine away from sources of strong noise such as high-frequency welders.
11. An optical method is used for the detector's detection element so take care not to let dust or oils get on the detection plate when removing the cover for adjustment, etc. If these do get on the plate, wipe off with a soft cloth and do not scratch the plate. Take care not to let oils enter between the detector discs.
12. When the position detector connector or the belt has come off or when the sewing machine is completely locked, the motor will be automatically turned OFF after a set time to prevent damage to the motor. (The motor may not turn OFF if the locking is not complete.) After the problem has been resolved, turn the power OFF and ON and normal operation will be possible. The same operation should be taken when the position detector or wires are broken.
13. Be sure to ground the lever unit when using it to separate from the control box.
14. **Always turn off the power switch before connecting or disconnecting each connector**
15. **Do not alter this motor and control box including accessories to avoid any accident**


The altered examples: To connect the power supply to the other device through the push button switch, to take out signals of the encoder and the detector to use the external devices.

Our company does not assume the responsibility on any accident caused by altering.

16. A high voltage is applied inside the machine, so **wait at least 10 minutes after turning the power OFF** before opening the control box. There is a cable connecting the PCB on the cover side with the PCB on the box side. When disconnecting the cable, gently disconnect at the connector section. Do not pull with force.

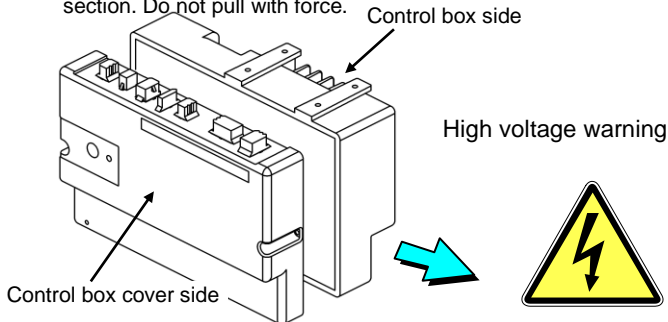


17. Remove the dust that has adhered on the motor's dust-proof filter once every two to three weeks.

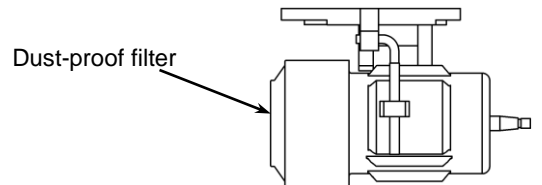


If the motor is run while the filter is clogged, the motor may overheat and affect the motor life.

18. If the fuse blows, remove the cause, and replace the blown fuse with one having the same capacity.

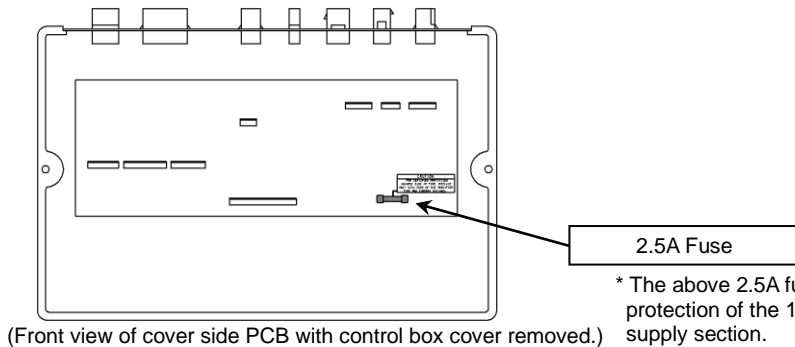

* The above 2.5A fuse is for protection of the 12V power supply section.

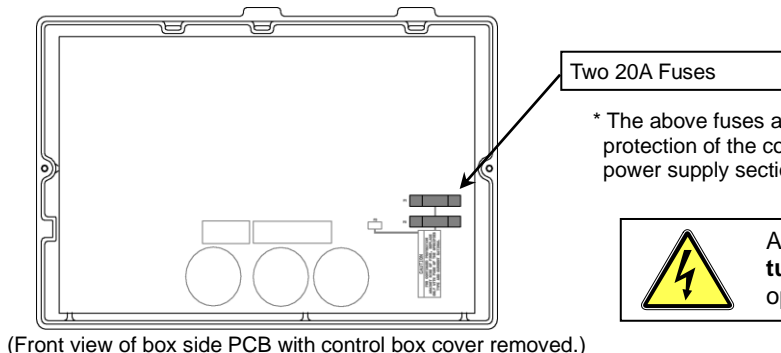


* The above fuses are for protection of the control box power supply section.




Always wait at least 10 minutes after turning the power switch OFF before opening the control box cover.


1. Front side of control box

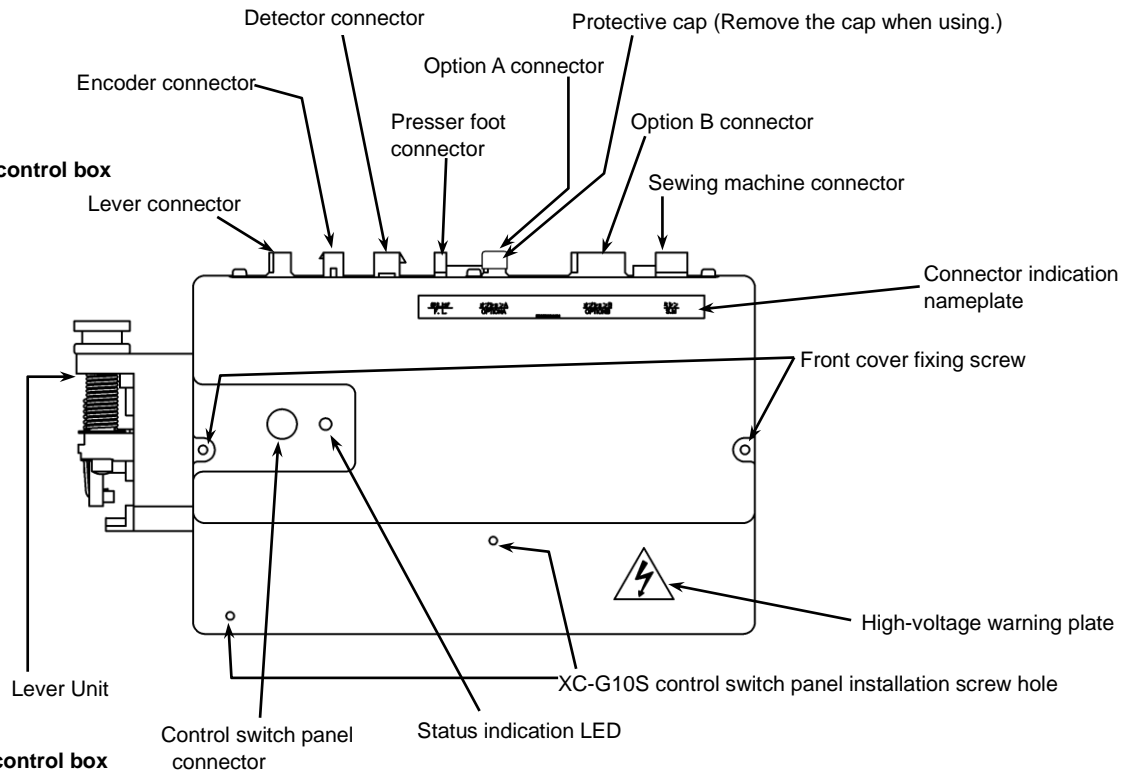


2. Back side of control box

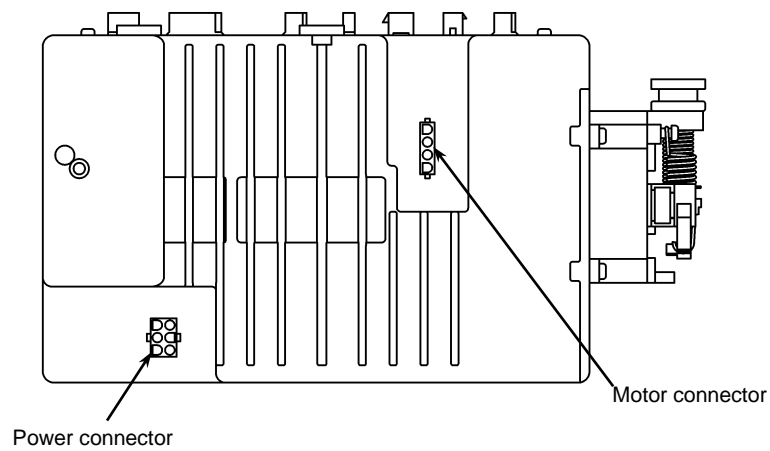


3. Left side of control box

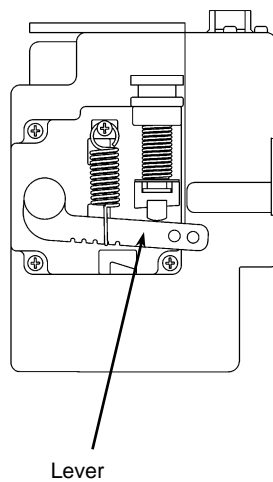

 Be sure to ground the lever unit when using it to separate from the control box.

5 Installation


1. Installation of the motor

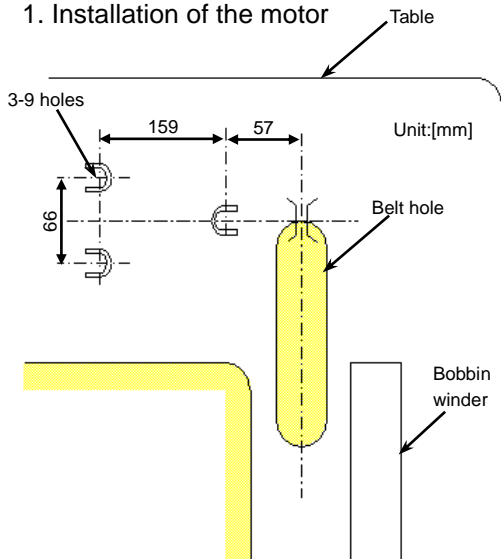


Open three 9mm holes on the table as seen from the above. Install the motor securely using the installation bolts, washers, spring washers and nuts.
The installation bolts, etc., are included with the motor as accessories.

2. Installation of the control box

(1) Tighten the control box onto the motor.

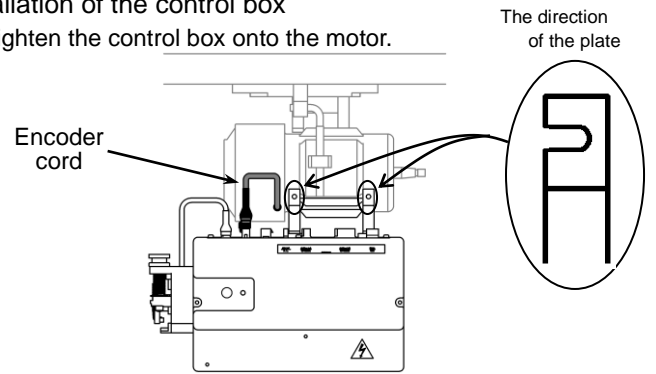

(2) Insert the power cord from the motor into the connector on the back of the control box. Insert the encoder cord from the motor into the encoder connector on the front of the control box.

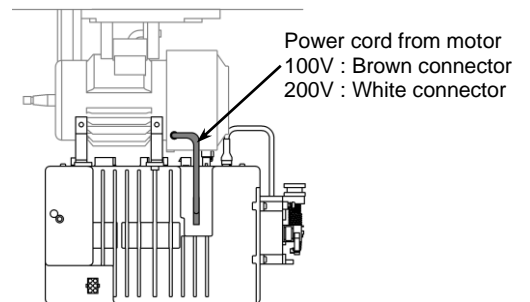

3. Installation of the pulley

* To properly install, the protective cover A (motor side of the protective cover) must be installed onto the motor before the pulley is installed. (Refer to "5. Installing the protective cover".)

Securely tighten the pulley.

Caution
Incomplete tightening may cause malfunctions.


Select the correct pulley diameter to ensure complete use of the motor performance.

Selection of the motor pulley:


$$\text{Motor pulley outer diameter (mm)} = \frac{\text{Normal sewing machine speed}}{(*) \text{ Motor speed}} \times \text{Sewing machine pulley diameter (effective diameter)} + 5 \text{ mm}$$

(*) The motor speed should be set at 3,600rpm. When the motor pulley diameter is selected with the above method and the pulley diameter is too small, select the minimum pulley in the range that the belt will not slip.

(**) Refer to page 20 for the pulley diameter to be used when using our thread trimming sewing machine.

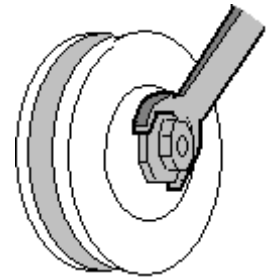

4. Mounting of the belt

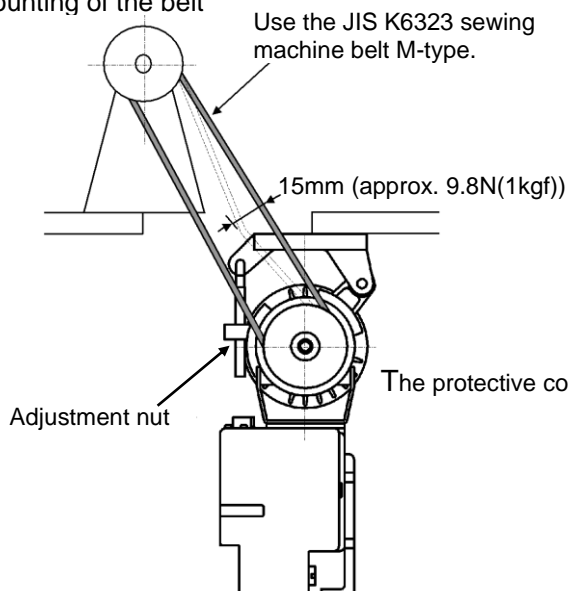

To adjust the belt tension, press down on the center of the belt with your hand, and turn the upper and lower nuts of the adjustment nut to increase or decrease the center height of the motor so that the belt dips approximately 15mm.


Caution
If the belt tension is too low, the medium and low speeds will be inconsistent, and the stopping precision will be poor. When too tight, the motor bearings will deteriorate.

Caution
For safety always turn the power switch off, before adjusting the belt.

5. Installation of the protective cover (with belt slip off prevention part)


The protective cover is enclosed with the motor as an accessory.

1. Install the protective cover A onto the motor.

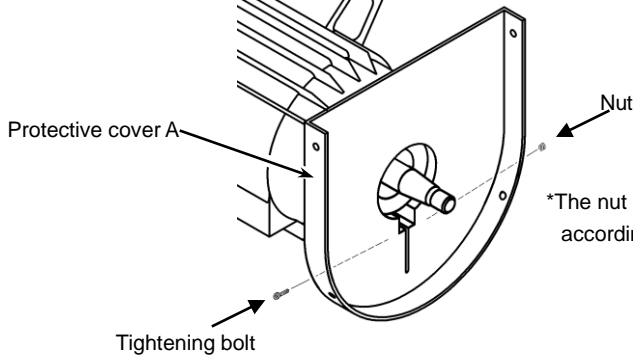

*The nut can be installed according to either direction.

2. Install the pulley and attach the belt. (Refer to "3. Installing the pulley" and "4. Mounting of the belt".)

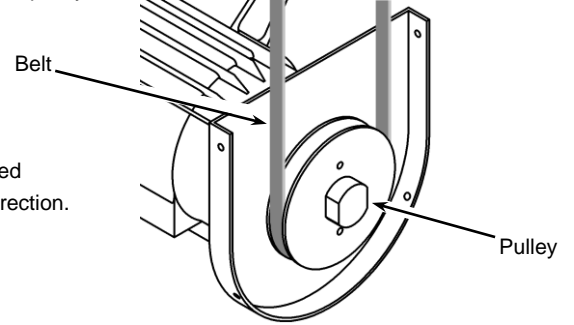


3. Install the "belt slip off prevention part mounting plate" onto protective cover B with the following procedures.


* Change the direction of the long and short side of the attachment plate according to the motor pulley outer diameter.

(a) For motor pulley outer diameter $\phi 55$ to $\phi 80$

(b) For motor pulley outer diameter $\phi 80$ to $\phi 125$

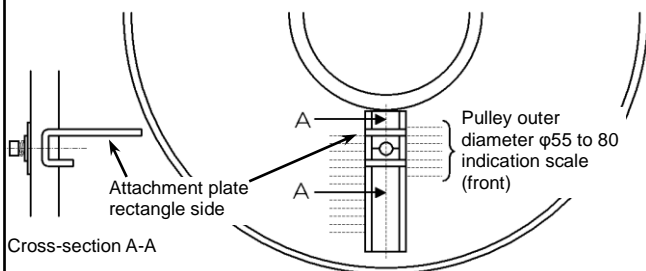

(View from back of protective cover)

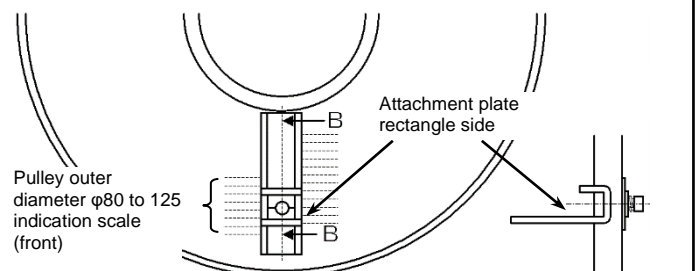

(View from back of protective cover)


Cross-section B-B

* Set the center of the washer to the pulley diameter indication scale and tighten the bolt.


* Confirm that the belt does not contact the attachment plate.

4. Install the "protective rod" onto the protective cover B with the following steps.

* Set the protective rod to the motor pulley rotation direction and install between the belt and motor pulley.

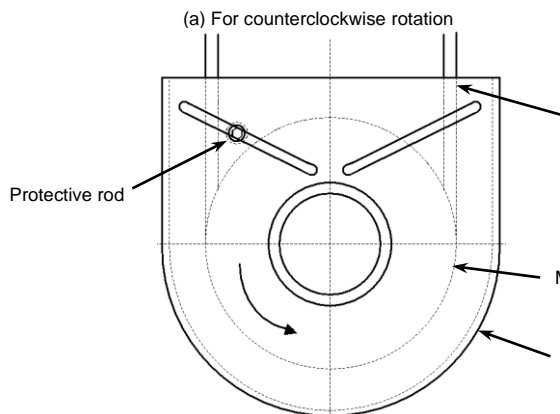

(View from front of protective cover)

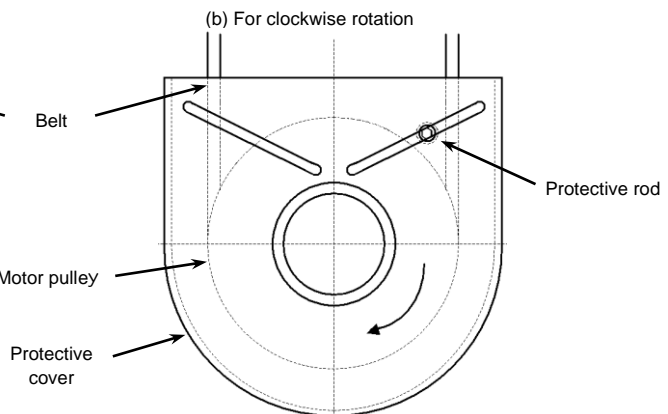


(View from front of protective cover)

* Set the center of the protective rod to the position at the center of the belt and motor pulley and tighten the bolt


5. Set protective cover B onto protective cover A, and tighten with the four set screws.

* Confirm that the belt and motor pulley do not contact the protective rod.

6. If necessary, adjust the position of the "protective rod" and "belt slip off prevention part mounting plate". Securely tighten after adjusting.

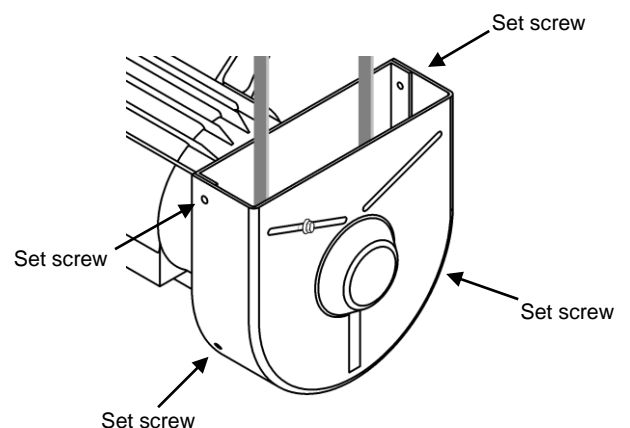


6. Installation of the position detector

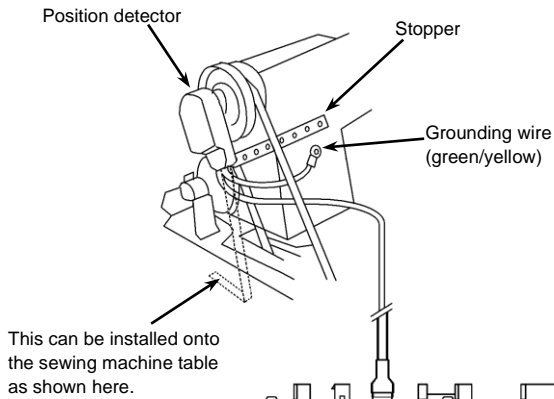

- (1) The installation of the position detector will differ according to the sewing machine model, so please consult with our dealer for details.
The diagram on the left shows an example of the position detector installation.
- (2) Insert the connector from the position detector into the control box position connector.
- (3) To prevent malfunctions caused by static electricity, connect the grounding wires (green/yellow) from the position detector onto the sewing machine head.

Caution


This can not be used with except XC-G, XC-F and XC-E Series.

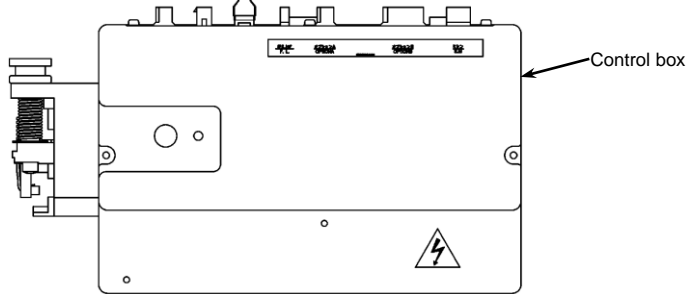


7. Connection of our sewing machine and control box.

Wire the units as shown below.
Align the connector shape and direction, and securely insert it.

[View of control box from cover side]

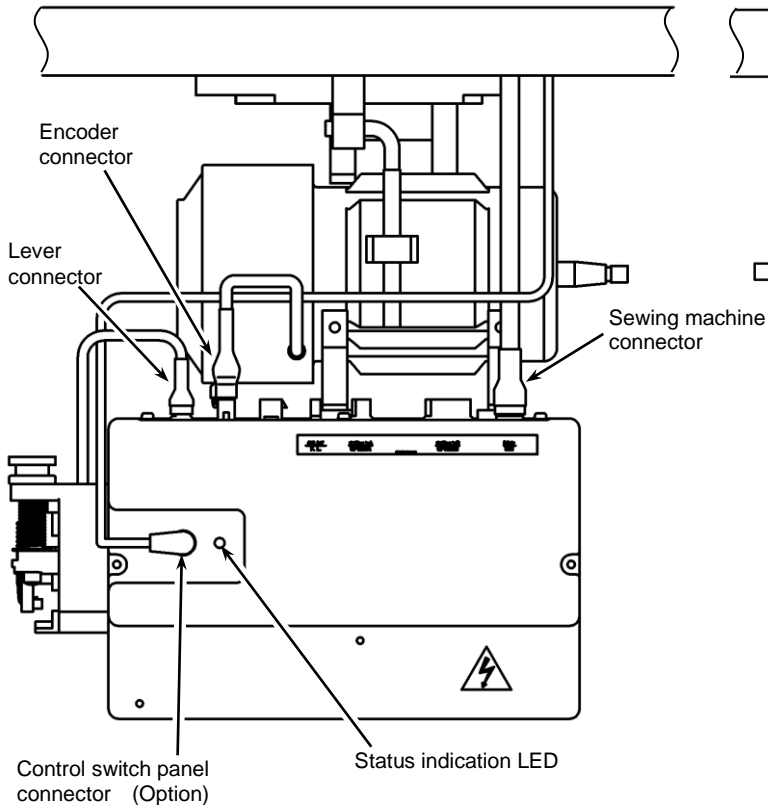

[View of control box from box side]

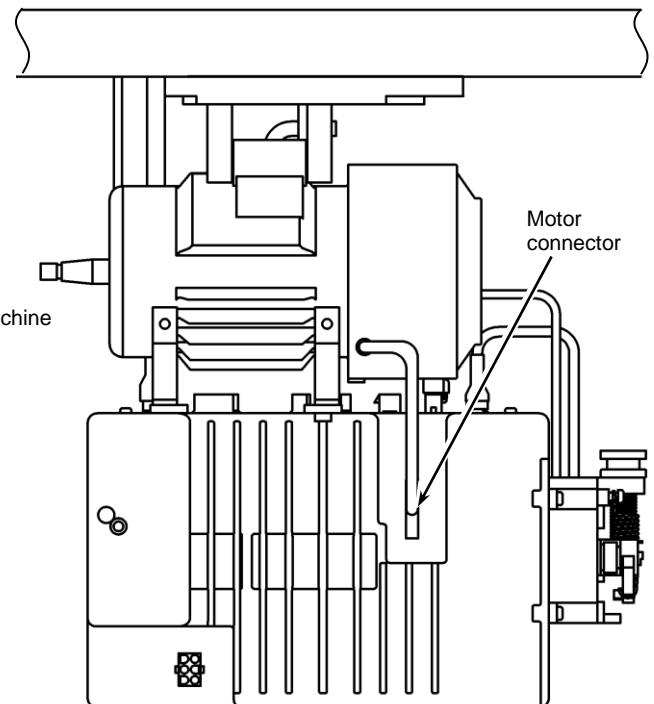


Caution


For safety purposes, always turn the power switch OFF and wait for the status indication LED or the [PWR. OF] (displayed for approx. 10 seconds) LED display on the control switch panel to turn OFF before connecting or disconnecting each connector.
This [PWR.OF] display is not an error.

1. Insertion of the power connector

Confirm the connector form and insertion direction when inserting the power connector into the control box and insert completely.

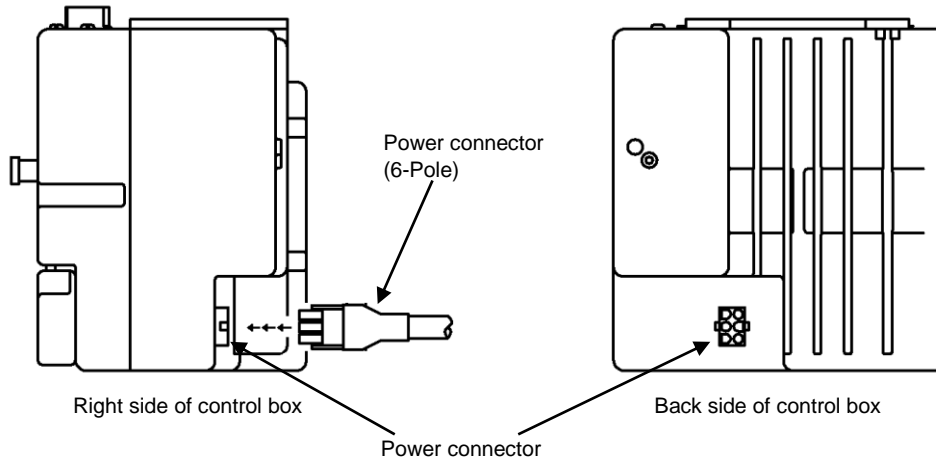

2. Connection of 3-phase power

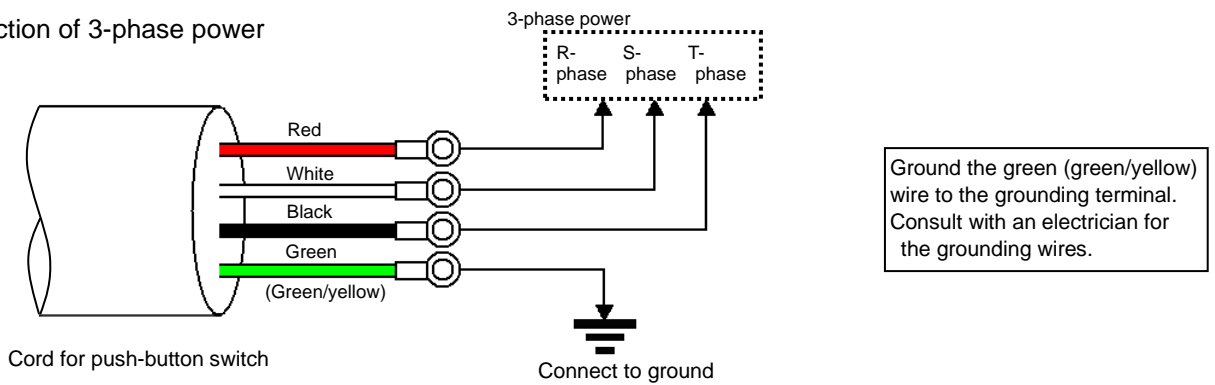


3. Current capacity

Use a fuse or complete breaker for the power.

Power	Recommended current capacity
Single phase 100 to 120V 550W 200 to 240V 550W / 750W	15A
3-phase 200 to 240V 550W / 750W	10A

4. When using the 3-phase 200 - 240V class LIMISERVO with single phase 200 - 240V class

Connect the "red" and "white" lead wires from the push-button switch to the power.
The black wire is not used.
Tape it with insulation tape, etc., to insulate securely.
Always ground the green/yellow (green) grounding wire.

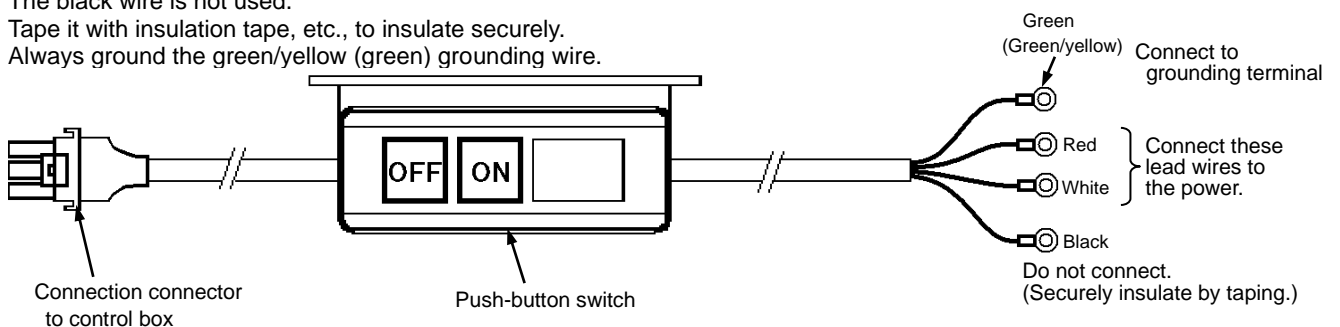


1. Before turning switches on.....

Places to confirm	Reference
(1) Is the power and capacity suitable ?	Current capacity on page 8.
(2) Is the power voltage the same as the factory preset voltage of the rated nameplate on the side of the control box?	Voltage value given on rated nameplate on side of control box. XC-GMFY-20-05 : 200 to 240V XC-GMFY-10-05 : 100 to 120V
(3) Are the connectors inserted correctly? -Power connector from push-button switch -Motor connector -Motor encoder connector -Position detection connector	Insertion of the power connector on page 8. Connection of our sewing machine and control box on page 7. Insertion of the position detector on page 7.
(4) Is the lead wire contacting the V belt ?	-
(5) Is the belt tension okay ?	Mounting of the belt on page 5.
(6) Are the pulley nuts securely tightened ?	Installation of the pulley on page 5.
(7) Can the sewing machine be rotated lightly by hand ?	-


2. Turn on the power.....

(1) Does the status indication LED on the control box light up in green?
There is a problem if the LED is flickering or is lit up in red.

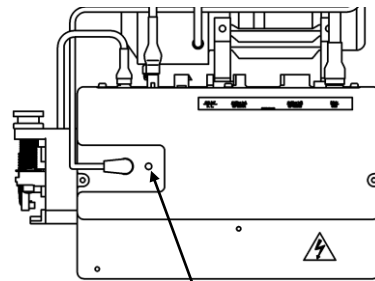


Status indication LED

(2) Is the control switch panel LED turning ON?
(When control switch panel is connected)




Control switch panel

(3) Does the position detector lamp light ?

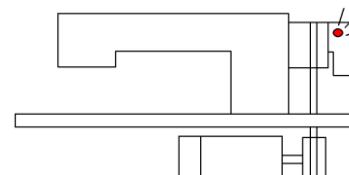


Position detection

(4) Is the sewing machine rotation direction correct? (When control switch panel is connected)

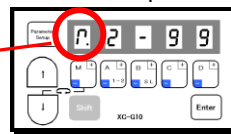


Control switch panel

- For left rotation




- For right rotation




The sewing machine rotates to the left looking from the pulley side. The factory setting is left rotation.

The sewing machine rotates to the right looking from the pulley side.

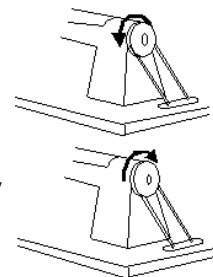

The rotation direction can be changed by pressing the [↓] key and [M] key simultaneously.

(5) Is there any heat, odors or abnormal sounds coming from the motor or control box?

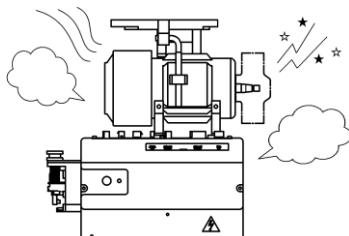

Turn the power OFF and disconnect the power plug from the socket if any heating, abnormal odors or abnormal noise is found. Contact our dealer immediately.

1. Adjustment of stopping position


Adjust this position with the detector installed onto the sewing machine and while stopping at the UP and DOWN positions.
For safety, disconnect the connector for the sewing machine.

(1) Adjustment of UP position




- Loosen the two set screws on the detector joint, and set the stop position by rotating by hand.
- If adjustment is not possible by turning the joint, loosen the cross-recessed screw A shown of the following figure, and turn all detector plates simultaneously to adjust to the designated stop position.

(2) Adjustment of DOWN position

- The relation of the DOWN position and UP position will differ according to the model, so adjust this according to the sewing machine.
- When changing the DOWN position, remove the detector cover, and turn only the red detector plate to adjust to the designated stop position.
(The cross-recessed screw A does not need to be loosened at this time.)
- Always replace the cover after adjustment.

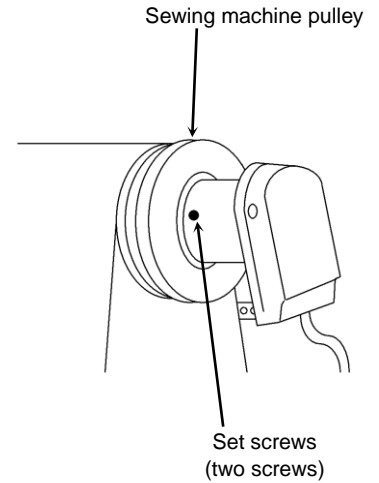


Caution
Refer to the sewing machine instruction manual when adjusting for use with the sewing machine.

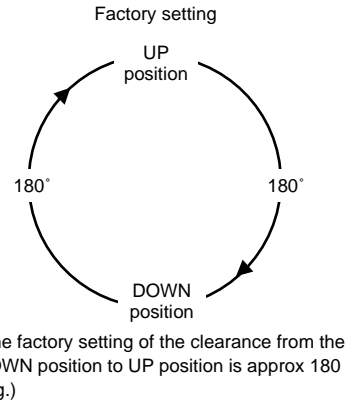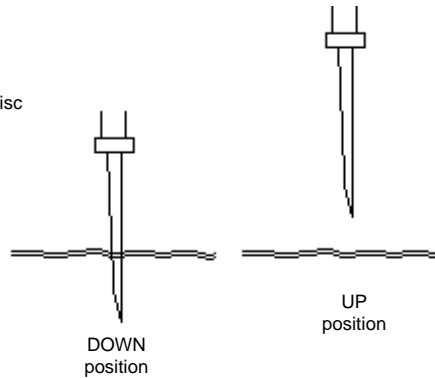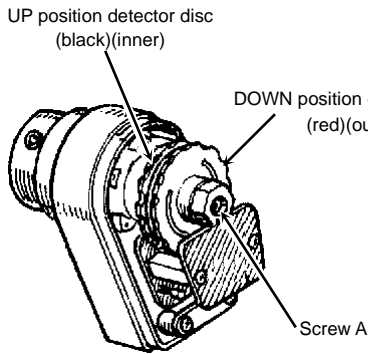


2. Adjustment of pedal toe down pressure, and heeling pressure

The spring A pressure (toe down pressure) can be adjusted in five levels by changing the position spring A which is hooked onto the lever unit. The spring B pressure (heeling pressure) can be adjusted by tightening or loosening the screw bolt.

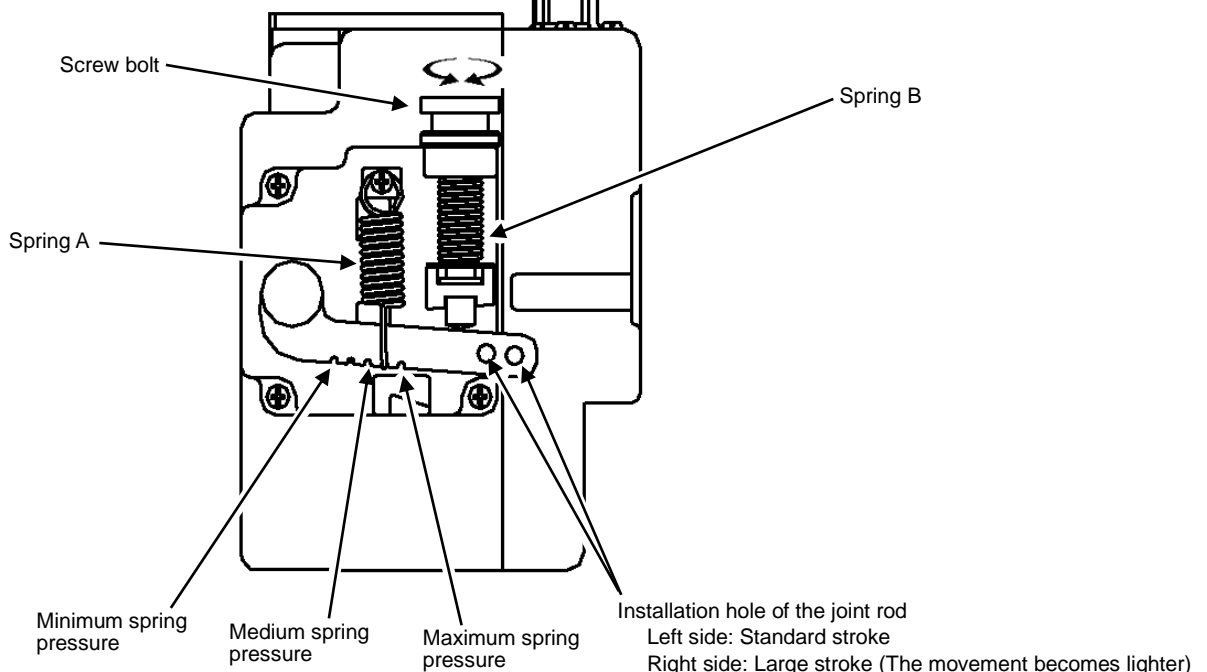

3. Adjustment of operation speed


Adjustment of each speed		Reference	Factory setting (speed)
Maximum speed	H	Page25 "To change the maximum speed"	4000
Low speed	L	-	250
Thread trimming speed	T	-	200
Start tack speed	N	-	1700
End tack speed	V	-	1700
Slow start speed	S	-	250
Operation speed		Adjust between the low speed [L] and high speed [H] using the [C] and [D] keys on the control switch panel.	

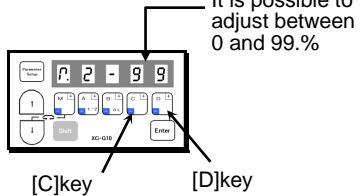

It is possible to adjust between 0 and 99.9%

[C]key

[D]key

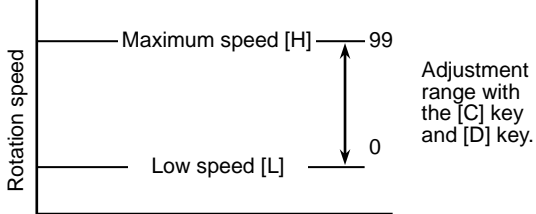

Adjustment range with the [C] key and [D] key.

Caution

No matter how large the motor pulley diameter is, the speed will not rise higher than the maximum speed H and the speed set with the [C] key and [D] key.

9 Changing the solenoid voltage and output voltage


1. To change solenoid voltage DC24V/DC30V

To change solenoid voltage from 24V to 30V

- (1) Remove the cover from the control box.
- (2) Reconnect the connector inserted in JP1 on the PCB to the 30V side.
- (3) Set the cover to the original position after change.

To change solenoid voltage from 30V to 24V

- (1) Remove the cover from the control box.
- (2) Reconnect the connector inserted in JP1 on the PCB to the 24V side.
- (3) Set the cover to the original position after change.

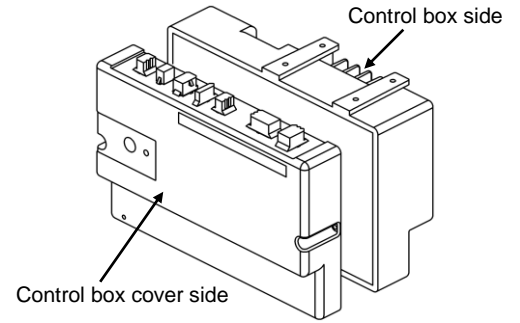


Wait at least 10 minutes after turning the power switch OFF, before opening the control box.

24V setting (factory setting)



30V setting

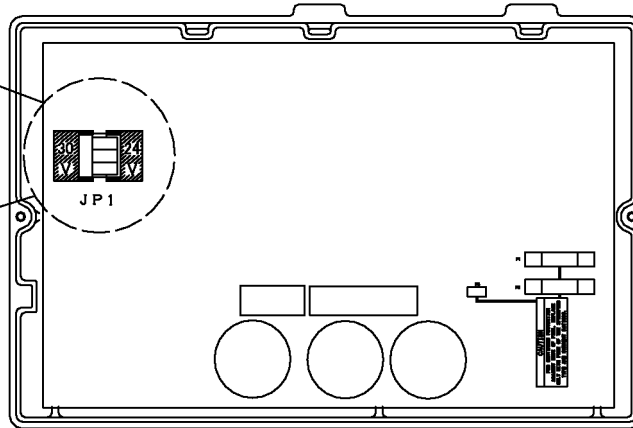


Control box side

2. Changing the output voltage between 0VDC and 5VDC

- (1) Remove the control box cover.
- (2) Change the output voltage 5/12VDC with the jumper JP3 and JP4 on the cover PCB as shown on the right. Change the output voltage 0/5VDC with the jumper JP5 on the cover PCB.
- (3) The output voltage can be changed by reconnecting the connector as shown on the right.


(4) The factory setting

Connector	factory setting	Connector (Pin No.)
JP3	+12V	No.3 pin of the option A
JP4	+5V	No.7 pin of the option B
JP5	0V	No.10 pin of the sewing machine

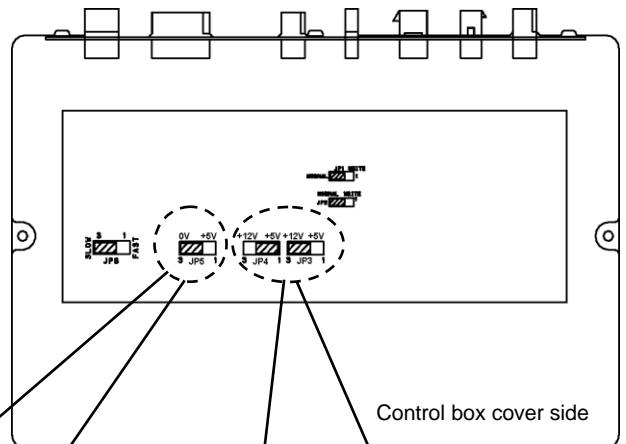


Control box cover side


(5) After change, always set the cover to the control box.

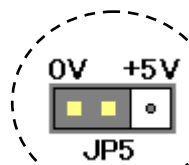


0V setting

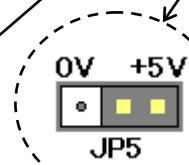

5VDC setting

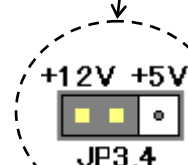

12VDC setting

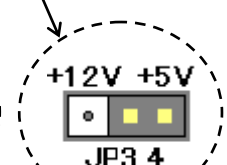

5VDC setting



Wait at least 10 minutes after turning the power switch OFF, before opening the control box.



Do not change the JP1,JP2 and JP6 from the factory setting.

10 Operation of the Control Switch Panel Keys


(When using XC-G10 type control switch panel)

1. Displays during normal mode and functions of each key

When the power supply switch is turned ON, the rotation direction will display on the LED.M shown below.

When the rotation direction is not displayed on LED.M, press the [↓] key any time.

This state is called **the normal mode**, and the following keys can be operated.

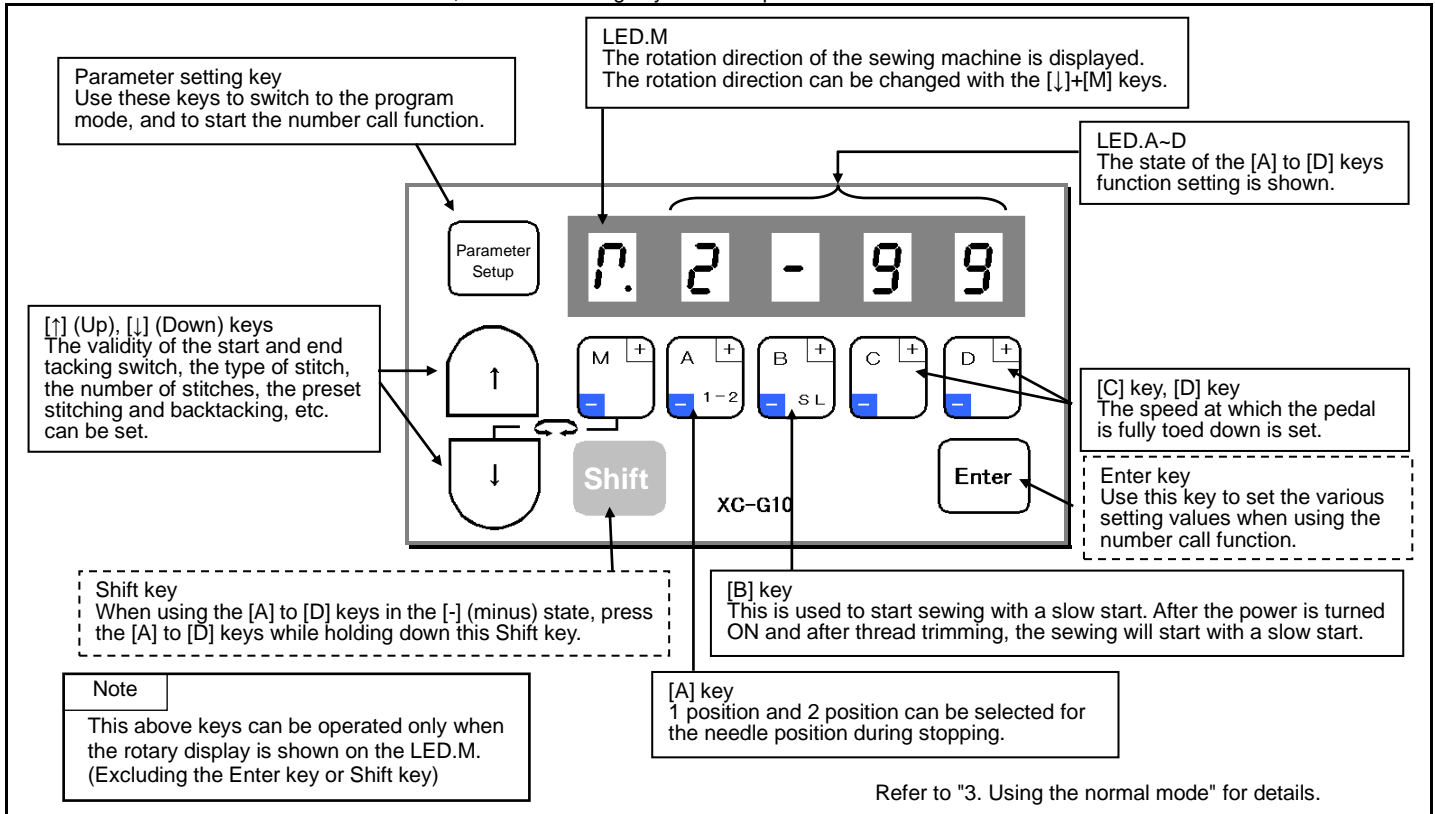


2. Selection of each mode


The modes can be changed from the normal mode to various program modes and various basic functions and application functions set with this control switch panel.

(Refer to the Technical Documents for details on each mode's function.)

(1) Types of program mode

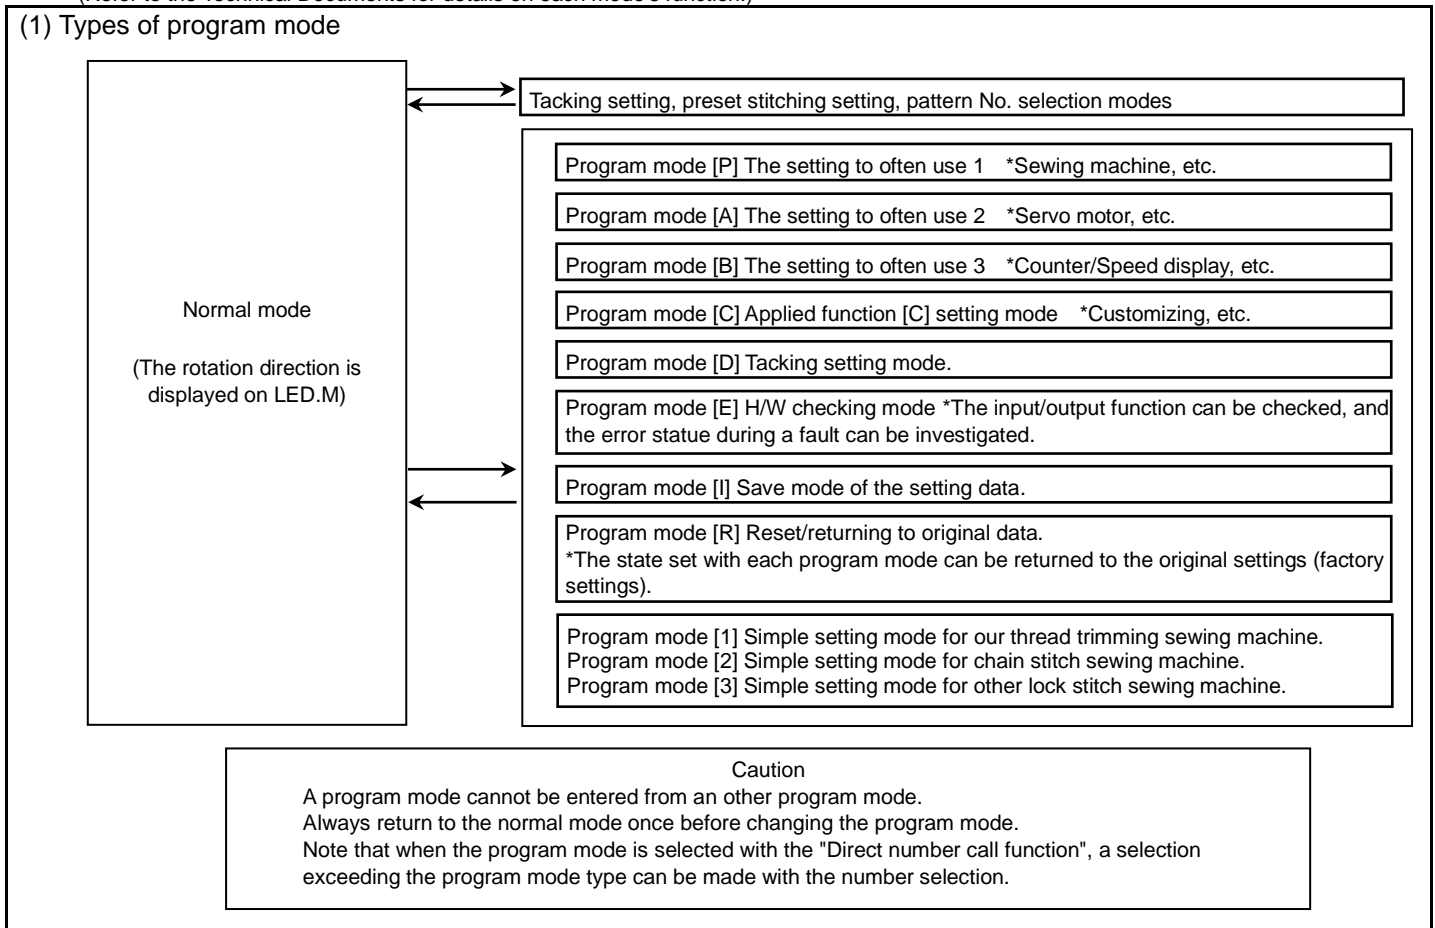

(2) Selection of each program mode from the normal mode.

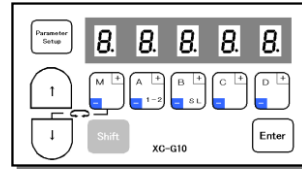


Mode name	Key operation	Digital display	Return to the normal mode
Tacking type setting mode	Press the [↑] key one time from the normal mode.	b. - 2 - 2	*The tacking setting mode will be entered. Press the [↓] key one time.
No. of tacking stitch setting mode	Press the [↑] key two times from the normal mode.	n. 4 4 4 4	*The tacking stitches setting mode will be entered. Press the [↓] key two times.
Preset stitching setting mode	Press the [↑] key three times from the normal mode.	- 4 4	*The preset stitching setting mode Press the [↓] key three times.
Pattern No. selection mode	Press the [↑] key four times from the normal mode.	P. 5 r r. 1	*The pattern No. selection mode will be entered. Press the [↓] key four times.
Program mode [P]	While holding down the [↓] key, press the [↑] key for 2 seconds or more from the normal mode.	[] P - P H. 4 0 0 0	*The display will flicker. *The program mode [P] will be entered. Switch the function item with the [↓] or [↑] key. Press down [↓] key, press [↑] key.
Program mode [A]	While holding down the [↓] key, press the [A] key for 2 seconds or more from the normal mode.	[] P - A C A . . L	*The display will flicker. *The program mode [A] will be entered. Switch the function item with the [↓] or [↑] key. Press down [↓] key, press [↑] key.
Program mode [B]	While holding down the [↓] key, press the [B] key for 2 seconds or more from the normal mode.	[] P - b S. . . . 0	*The display will flicker. *The program mode [B] will be entered. Switch the function item with the [↓] or [↑] key. Press down [↓] key, press [↑] key.
Program mode [C]	While holding down the [↓] key, press the [C] key for 2 seconds or more from the normal mode.	[] P - C I. A. P S U	*The display will flicker. *The program mode [C] will be entered. Switch the function item with the [↓] or [↑] key. Press down [↓] key, press [↑] key.
Program mode [D]	While holding down the [↓] key, press the [D] key for 2 seconds or more from the normal mode.	[] P - d d l . . n	*The display will flicker. *The program mode [D] will be entered. Switch the function item with the [↓] or [↑] key. Press down [↓] key, press [↑] key.
Program mode [E]	While holding down the [↓] key, press the [A] key and the [↑] key for 2 seconds or more from normal mode.	[] P - E l . E - -	*The display will flicker. *The program mode [E] will be entered. Switch the function item with the [↓] or [↑] key. Press down [↓] key, press [↑] key.
Program mode [I]	While holding down the [↓] key, press the [↑] key and the [B] and the [C] key for 2 seconds or more from normal mode.	[] P - I S A U E .	*The display will flicker. *The program mode [I] will be entered. Press [D] key for 2 seconds or more. [*1]
Program mode [R]	While holding down the [↓] key, press the [B] and the [C] key for 2 seconds or more from normal mode.	[] P - r r E S E r.	*The display will flicker. *The program mode [R] will be entered. Press [D] key for 2 seconds or more. [*1]
Program mode [1] Simple setting	While holding down the [↓] key, press the [A] and the [B] key for 2 seconds or more from normal mode.	[] P - 1 2 8 0 n	*The display will flicker. *The program mode [1] will be entered. Switch the function item with the [↓] or [↑] key. Press [D] key for 2 seconds or more. [*1]
Program mode [2] Simple setting	While holding down the [↓] key, press the [C] and the [D] key for 2 seconds or more from normal mode.	[] P - 2 P U 2 . .	*The display will flicker. *The program mode [2] will be entered. Switch the function item with the [↓] or [↑] key. Press [D] key for 2 seconds or more. [*1]
Program mode [3] Simple setting	While holding down the [↓] key, press the [A] and the [D] key for 2 seconds or more from normal mode.	[] P - 3 d 6 9 7 .	*The display will flicker. *The program mode [3] will be entered. Switch the function item with the [↓] or [↑] key. Press [D] key for 2 seconds or more. [*1]


The mode can also be selected with the "Direct number call operation". (Refer to the next page.)





[*1] To return to the normal mode without executing each function in mode [I], [R], [1], [2] or [3], press the [↓] and [↑] keys simultaneously.


(3) Direct number call function (Directly selecting program mode function item from normal mode)
 The number of each function listed in section "13 Function list" can be directly designated to call the function item.




[Basic procedures]

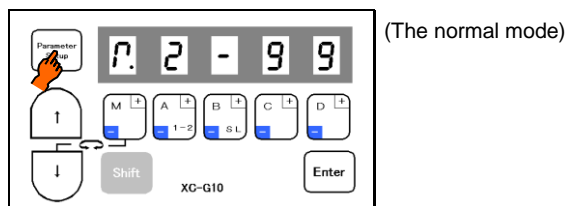
(1) Press  in the normal mode and switch to the number selection mode.




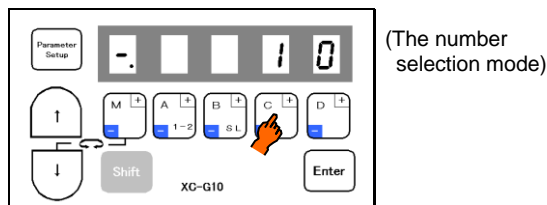(2) Press the , , , and  keys to display the target function item number.




(To use the above "+/-" key as a "-" key, press  to  while holding down .)

(3) When the target function item number appears, press .
 (Number 33 as shown on page 38 is called out in this example.)


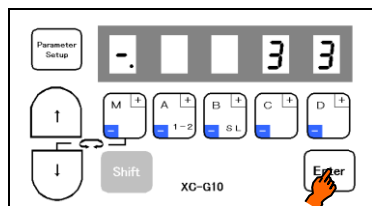






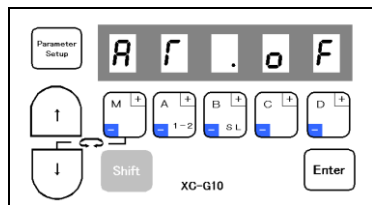(4) This completes calling of the function item.
 (In this example, function name [AT.] was called out.)




13 Function list			
name	Function	No.	
H.	Maximum speed	0000	
L.	Low speed	0001	
⋮	⋮	⋮	
S6L.	Thread trimming protection signal (S6) logical changeover	0032	
AT.	Automatic operation	0033	
TL.	Thread trimmer cancel	0034	

[Miscellaneous/Precautions]

- Press  to return to the normal mode.
 The display will return in the order of [Function item] → [number selection mode] → [normal mode].
- Press  after changing the setting for each function item.
 The display LED will flicker, and after the changed items are set, the mode will change to the [number selection mode].
 (The changed items will be canceled if the normal mode is returned to without pressing .)
- The display LED will flicker if a function number that does not exist is displayed. Select a number that exists.
- The range of the number designation can be limited as shown below by pressing , entering the [number selection mode] and then pressing the  or  key.

(1) Selection of number for each mode (P, A, B, C...)




(2) Selection of all mode numbers




* Refer to the status transition diagram given on the next page.

Status transition diagram (Direct number call operation)

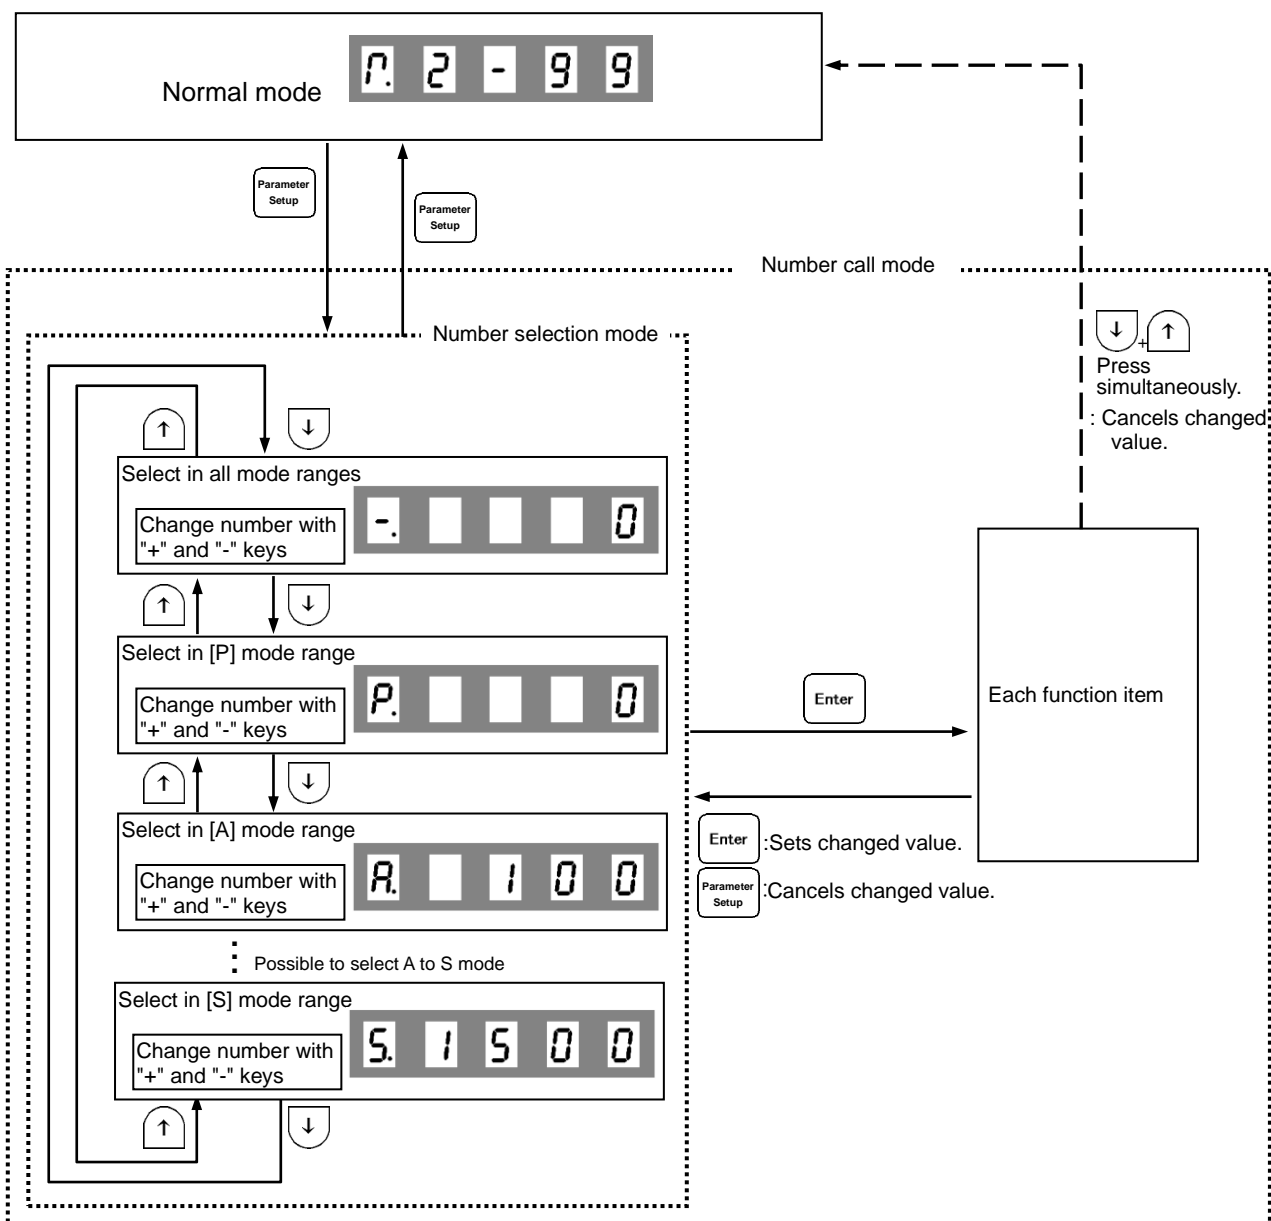

3. Using the normal mode

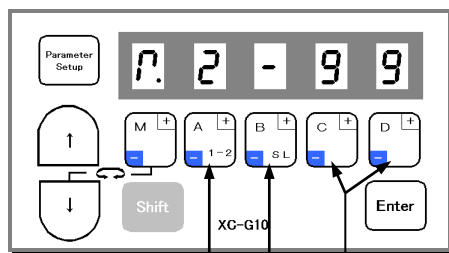

Speed adjustment
 The operation speed will drop when the [C] key is pressed.
 If the [D] key is pressed, the operation speed will increase when the pedal is pressed down to the fullest.
 The speed ratio is displayed with the two digits LED.C and LED.D, and can be set in the range of 0 to 99.


Changing between position 1 and position 2
 The position can be changed between position 1 and position 2 with the [A] key. The needle position (position 1/position 2) when stopping can be changed. Position 1 and position 2 are indicated with LED.A.
 When position 1 is set, the needle stops at the UP position.
 When position 2 is set, the needle stops at the DOWN position, and moves to and stops at the UP position after the thread is trimmed.

1 indicates position 1.
 2 indicates position 2.

Slow start ON/OFF
 Slow start can be turned ON or OFF with the [B] key.
 Turn this function ON to start stitching with slow start.
 Stitching will start slowly after the power is turned ON or after the thread is trimmed.
 The slow start ON/OFF state is indicated with LED.B.

- indicates OFF.
 0 indicates ON.

4. Changing to the tacking, preset, pattern NO. selection mode

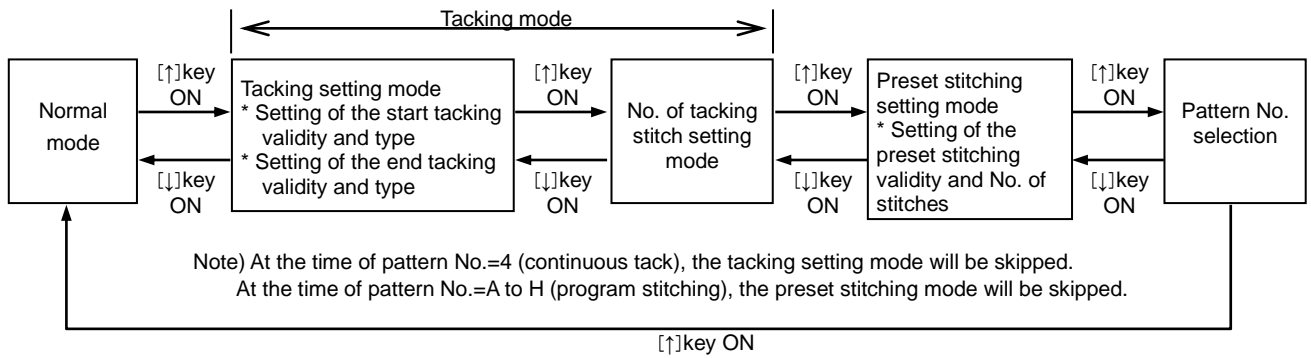

(1) Tacking setting mode (At the time of pattern No.=4, this mode will be skipped.)

When the [↑] key is turned ON, **b** will display above the [M] key, and the tacking setting mode will be entered. The validity and type of start and tacking can be set here.

Setting of tacking type	start tacking	end tacking
0 : No tacking
1 : V tacking (Once tacking)	<.....>
2 : N tacking (Double tacking)	Z.....Z
3 : M tacking (Triple tacking)	W.....W
4 : W tacking (4 repeat tacking)	W.....W
5 : 5 repeat tacking	W.....W
6 : 6 repeat tacking	W.....W

(2) No. of tacking stitches setting mode

When the [↑] key is turned ON again, **n** will display above the [M] key indicator, and the No. of stitches can be set.

(1) When the except pattern No.4

(2) When the pattern No.4 (continuous tack stitching)

'A' means 10 stitches
'B' means 11 stitches
'C' means 12 stitches
'D' means 13 stitches
'E' means 14 stitches
'F' means 15 stitches

Each setting value can be changed from 0 to 9 stitches, A,B,C,D,E,F stitches.

(3) Preset stitching setting mode

The preset stitching setting mode is entered when the [↑] key is turned ON again. The validity of preset stitching and the number of stitches N can be set.

(1) When the pattern is the time except pattern No.4

Setting of preset stitching
<Display ex.>
 Valid
 Invalid

Setting of No. stitches N
(0 to 9999 stitches)

Start tacking (S)

N stitches

End tacking (E)

Start tacking that is in the tacking mode will start at the (S) position.

End tacking that is in the tacking mode will start at the (E) position.

(2) When the pattern is No.4 (continuous tack stitching)

Setting of continuous tack stitching validity
<Display ex.>
 Valid
 Invalid

Setting of No. times N
(0 to 9999 stitches)

In the No. of times (N) setting is N=3, the stitching will be in the order of A,B and C. If the setting is N=5, the stitching will be in the order of A,B,C,D,C. If the N is 6 or more, the order will be A,B,C,D,C,D....(If N=0, tacking will continue in the order ABCDCD... while the pedal is pressed down.)

(4) Pattern No. selection mode

When the [↑] key is turned ON again, and the pattern No. selection mode will be entered. Selecting of preset stitching setting (pattern 1 to 3), continuous tack stitching (pattern 4), program stitching (pattern No. A to H).

(1) Display of preset stitching (Pattern 1 to 3)

← Display of pattern 1. When pattern 2 or 3, display show 2 or 3.

(2) Display of continuous tack stitching (Pattern 4)

(3) Display of program stitching (Pattern A to H)


← Display of pattern A. When pattern B, C, D, E, F, G or H, display show B, C, D, E, F, G or H.

a. Patterns A to H correspond to the programs and teaching patterns A to H input with the XC-G500 type control panel. The control switch panel is used to change and confirm the settings.
(Refer to the XC-G500 type control switch panel instruction manual for details on the program and teaching.)


Caution
For safety purposes, always turn off the power switch and confirm to turn off the display when connecting or disconnecting the control panel.

5. Using the program mode [1] simple setting


To set the settings to a specific machine in simple setting.
(For example, to set to "LU2-4410-B1T" ... Function setting [410B])

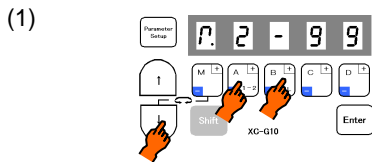


*Enter the program mode [1].
([↓] + [A] + [B] keys)

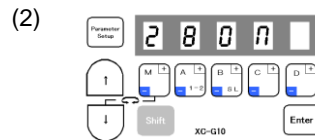


*The mode will change to the program mode [1].

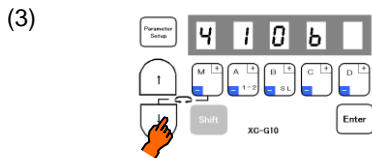

*Press the [↓] key or [↑] key to change the function to [410B].

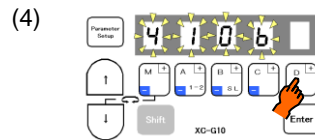

*When the [D] key is held down, [410B] will flicker, and the changes to the setting will be set.

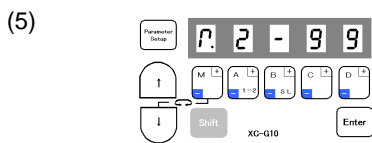

*The mode will return to the normal mode when the [D] key is held down over two seconds or more.
(This completes the settings.)

Description


- Select the function name corresponding to the sewing machine model from the following simple setting table. The item will change sequentially each time the [↓] or [↑] key is pressed in step (3). (The factory setting is [280M].)
- After selecting the function name, holds down the [D] key over 2 seconds or more. The function name's set speed and function setting will be set automatically. To return to the normal mode without setting the function name here, press the [↑] key while holding down the [↓] key.

Caution

When this function is set, all previously set details will be cleared. The set speed and function setting corresponding to the selected sewing machine model will be set automatically.


- The set function settings (simple setting value (type)) can be confirmed with the function name corresponding to the set sewing machine model using the following procedures (E mode).

- (1) Call out the program mode [E] function [T].
(The mode can also be called out directly with a number[772]. Refer to pages 14 to 16.)

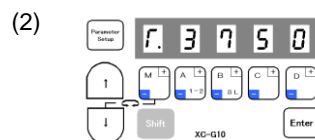

The function name corresponding to the set sewing machine model will appear.
(For example when [3750] is set.)

- (3) Return to the normal mode.

(Press [↓]+[↑] or )

Simple setting table for our thread trimming sewing machine and motor pulley outside diameter

Function name	Digital display	Sewing machine type	Speed setting					Function setting			Motor pulley outside diameter (mm)		
			High speed (H)	Low speed (L)	Thread trimming speed (T)	Start tacking speed (N)	End tacking speed (V)	D mode tack alignment (BM)	A mode weak brake (BK)	A mode gain selection (GA)			
*3 ↓	280M	280M	LS2-1280-M1T (W)	4000	250	200	1700	1700	OFF	OFF	L	85	*1
	280H	280H	LS2-1280-H1T(W)	3000	250	200	1200	1200	OFF	OFF	L		
	280B	280B	LS2-1280-B1T	3000	250	200	1200	1200	OFF	OFF	L		
	380M	380M	LS2-1380-M1T(W)	4000	250	200	1700	1700	OFF	OFF	L		
	380H	380H	LS2-1380-H1T(W)	3000	250	200	1200	1200	OFF	OFF	L		
	380B	380B	LS2-1380-B1T	3000	250	200	1200	1200	OFF	OFF	L		
	210M	210M	LS2-2210-M1T(W)	4000	250	200	1700	1700	OFF	OFF	L		
	230M	230M	LT2-2230-M1TW	3700	250	175	1200	1200	OFF	OFF	H		
	230B	230B	LT2-2230-B1T	3000	250	175	1200	1200	OFF	OFF	H		
	250M	250M	LT2-2250-M1TW	3000	250	175	1200	1200	OFF	OFF	H		
	250B	250B	LT2-2250-B1T	3000	250	175	1200	1200	OFF	OFF	H		
	3310	3310	LY2-3310-B1T	2000	250	225	700	700	ON	OFF	H	65	*2
	3319	3319	LY2-3319-B1T	2000	250	225	700	700	ON	OFF	H		
	3750	3750	LY2-3750-B1T	2000	250	200	700	700	ON	OFF	L		
	6840	6840	LY3-6840-B0T	2000	250	150	700	700	ON	OFF	H		
	6850	6850	LY3-6850-B1T	2000	250	150	700	700	ON	OFF	L		
	410B	410B	LU2-4410-B1T	2000	250	175	700	700	ON	OFF	L		
*8 ↓	412B	412B	LU2-4412-B1T	2000	250	175	700	700	ON	OFF	L	85	
	430B	430B	LU2-4430-B1T	2000	250	175	700	700	ON	OFF	L		
	4650	4650	LU2-4650-B1T	3000	250	175	700	700	ON	OFF	L		
*8 ↓	4652	4652	LU2-4652-B1T	3000	250	175	700	700	ON	OFF	L		
	4710	4710	LU2-4710-B1T	3000	250	175	700	700	ON	OFF	L		
	4730	4730	LU2-4730-B1T	2500	250	175	700	700	ON	OFF	L		
	630	630	LX2-630-M1	800	280	160	500	500	ON	ON	L	65	
	280E	280E	LS2-1280-M1T(W)	5000	250	200	1700	1700	OFF	OFF	H	110	
	FL	FL	*5	5000	250	200	1700	1700	OFF	OFF	L		
	N	n	*6	5000	250	200	1700	1700	OFF	OFF	L		
	LOAD2	Lod2	*7										
*4 ↓	LOAD1	Lod1	*7										

*1 Factory setting is [280M].

*2 The effective diameter of the sewing machine pulley is 70 mm.
(Note : In case of LY2-3310/3319/3750 is 80 mm, LU2-4410/4412/4430/4650/4652/4710/4730 is 85 mm.)

*3 A function name is displayed in order to the direction of ↓ every time it presses a [↓] key.

*4 A function name is displayed in order to the direction of ↑ every time it presses a [↑] key.

*5 For sewing machine with foot lifter, without thread trimmer.

*6 For needle positioner.

7 It is possible to load the saved setting data by the function of [SAVE] in the program mode [I].
(Program mode [I] : [↓]+[↑]+[B]+[C] key)


(The factory setting of [LOAD1] is the setting data of [412B] and the factory setting of [LOAD2] is the setting data of [280M].)

*8 The short remaining thread trimming function is set.


6. Using the program mode [2] simple setting (for chain stitch trimming machine)

To set the function for chain stitch sewing machine in simple setting.


(Ex. To set for the VC2800, VC3800 class, "YAMATO") Function setting [YU4]

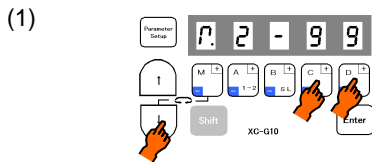


*Enter the program mode [2].
([↓] + [C] + [D] keys)

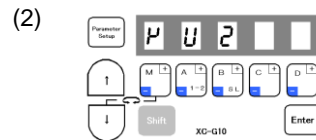


*The mode will change to the program mode [2].

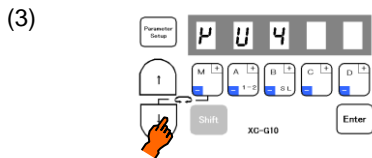

*Press the [↓] key or [↑] key to change the function to [YU4].

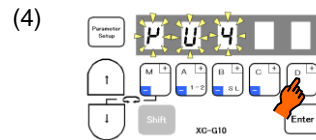

*When the [D] key is held down, [YU4] will flicker, and the changes to the setting will be set.

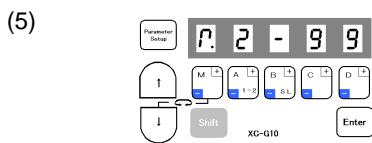

*The mode will return to the normal mode when the [D] key is held down over two seconds or more.
(This completes the settings.)

Description

- A. Select the function that corresponds to the sewing machine model for "Simple setting table for chain stitch sewing machine" on the page 22. After selecting the function name, holds down the [D] key over 2 seconds or more. The function name's set speed and function setting will be set automatically (Refer to the simple setting table for "YAMATO" on page 22.)
- B. To return to the normal mode from the [YU4] display, press the [↑] key while holding down [↓]. In this case, [YU4] will not be set, and the last settings will be used.
- C. Each time the [↓] key is pressed in step (3), the function will change in order from [YU2], [YU3], [YU4].....[JMH].

Caution

To use this mode, please ask your dealer or look at "TECHNICAL INFORMATION MANUAL" about simple setting, I/O signal, Junction wiring in detail.

Simple setting table for chain stitch sewing machine

Function name	Digital display	Sewing machine maker	Model name of sewing machine and device	Needle position	High speed (H)	Low speed (L)	Thread trimming speed (T)	Start condensed speed (N)	End condensed speed (V)
*1 ↓ YU2	PU2	YAMATO	VC2600, VC2700 class Solenoid-operated under thread trimmer	2	6000	200	200	1400	1400
YU3	PU3	YAMATO	VC2600, VC2700 class Air-operated under thread trimmer with air wiper	2	6000	200	200	1400	1400
YU4	PU4	YAMATO	VC3845P,2845P,2840P class Air-operated under thread trimmer with air wiper	2	6000	200	200	1400	1400
YU5	PU5	YAMATO	Solenoid-operated under thread trimmer with solenoid wiper	2	6000	200	200	1400	1400
NO1	no 1	PEGASUS	W(T) series /UT device Electric under thread trimmer	1	6000	200	200	1400	1400
NO1A	no 1A	PEGASUS	W(T) series /UT device Pneumatic under thread trimmer with pneumatic top cover thread trimmer	1	6000	200	200	1400	1400
NO2	no 2	PEGASUS	Do not use !!						
NO3	no 3	PEGASUS	FW series /UT device Electric under thread trimmer	1	4500	200	200	1400	1400
NO3A	no 3A	PEGASUS	FW series /UT device Pneumatic under thread trimmer	1	4500	200	200	1400	1400
NO4	no 4	PEGASUS	W674/UT device Super tack	1	4000	200	200	1400	1400
NO5	no 5	PEGASUS	W(T)562-82/UT device Angled stitch Electric under thread trimmer	1	6000	200	200	1400	1400
NO5A	no 5A	PEGASUS	W(T)562-82/UT device Angled stitch Pneumatic under thread trimmer with pneumatic top cover thread trimmer	1	6000	200	200	1400	1400
NO6	no 6	PEGASUS	Do not use !!						
NO7	no 7	PEGASUS	W(T)600,200 series /UT device condensed stitch Electric under thread trimmer	1	6000	200	200	1400	1400
NO7A	no 7A	PEGASUS	W(T)600,200 series /UT device condensed stitch Pneumatic under thread trimmer with pneumatic top cover thread trimmer	1	6000	200	200	1400	1400
NO8	no 8	PEGASUS	Do not use !!						
NOD	nod	PEGASUS	W(T) series /SL device Stitch lock Pneumatic under thread trimmer	1	6000	200	200	1400	1400
NOF	no F	PEGASUS	EX/BL500,600 series	1	6000	200	200	1400	1400
KA1	EA1	KANSAI	M, RX series Automatic thread trimmer with solenoid wiper	2	6000	250	250	1400	1400
KA2	EA2	KANSAI	D series Automatic thread trimmer with air wiper	2	6000	250	250	1400	1400
KA3	EA3	KANSAI	F series Air-operated under thread trimmer with air wiper	2	6000	250	250	1400	1400
KA4	EA4	KANSAI	DX series Air-operated under thread trimmer with air wiper	2	6000	250	250	1400	1400
UN1	Un 1	UNION SPECIAL	33700, 34500 class Solenoid-operated under thread trimmer	2	4000	200	200	1400	2999
UN2	Un 2	UNION SPECIAL	34800skcc class Solenoid-operated under thread trimmer	2	5500	200	200	1400	2999
UN3	Un 3	UNION SPECIAL	34700 class Push and Pull air-operated under thread trimmer with air wiper	2	4000	200	200	1400	2999
U345	U345		Do not use !!						
U346	U346		Do not use !!						
U348	U348		Do not use !!						
U347	U347		Do not use !!						
U160	U 160		Do not use !!						
U16	U 16		Do not use !!						
U362	U362		Do not use !!						
UFCW	UFCW		Do not use !!						
*2 ↑ BR1	br 1	BROTHER	FD3, FD4 series	2	6000	200	200	1400	1400
RM1	r 1	RIMOLDI	----	1	6000	200	200	1400	1400
SRB1	Srb 1	SIRUBA	----	2	6000	200	200	1700	1700
JMH	JMH	JUKI	MH-481-4-4, MH-484-4-4 class	2	5500	200	200	1700	1900


*1 A function name is displayed in order to the direction of [↓] every time it presses a [↓] key.

*2 A function name is displayed in order to the direction of [↑] every time it presses a [↑] key.


Note : Please refer to the "TECHNICAL INFORMATION MANUAL" for the Junction wiring, I/O signals and details.

7. Using the program mode [3] simple setting (for lock stitch trimming machine except sewing machine)


To set the function for DÜ RKOPP ADLER thread trimming sewing machine in simple setting.
 (For example, to set for the 271 class, "DÜ RKOPP ADLER") Function setting [D271]

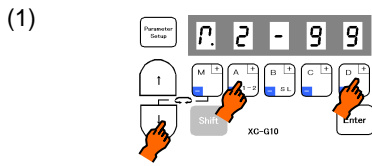


*Enter the program mode [3].
 ([↓] + [A] + [D] keys)

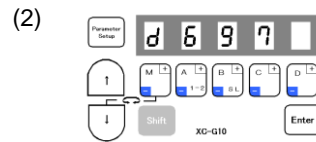


*The mode will change to the program mode [3].

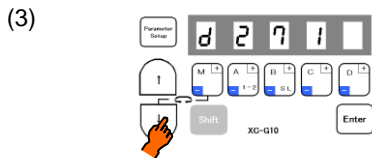

*Press the [↓] key or [↑] key to change the function to [D271].

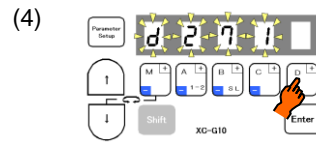

*When the [D] key is held down, [D271] will flicker, and the changes to the setting will be set.

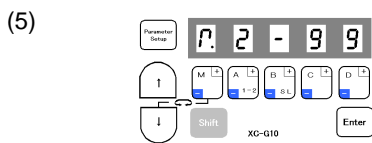

*The mode will return to the normal mode when the [D] key is held down over two seconds or more.
 (This completes the settings)

Description

- Select the model name that corresponds to the sewing machine model for the simple setting values for the DÜ RKOPP ADLER thread trimming sewing machine on the "Technical manual". After selecting the function name, holds down the [D] key over 2 seconds or more. The function name's set speed and function will be set automatically.
- To return to the normal mode from the [D271] display, press the [↑] key while holding down [↓]. In this case, [D271] will not be set, and the last settings will be used.
- Each time the [↓] key is pressed in step 3, the function will change in order from [D697], [D271], [D273].....[750].

Caution

To use this mode, please ask your dealer or look at "TECHNICAL INFORMATION MANUAL" about simple setting, I/O signal, Junction wiring in detail.

Simple setting table for thread trimming sewing machine

Function name	Digital display	Sewing machine maker	Model name of sewing machine and device	Needle position	High speed (H)	Low speed (L)	Thread trimming speed (T)	Start tacking speed (N)	End tacking speed (V)
*1 ↓ D697	697	DÜRKOPP ADLER	697-15000 class	2	1500	250	150	700	700
D271	271	DÜRKOPP ADLER	271-14000,272-14000 class	2	3000	170	250	1500	1500
D273	273	DÜRKOPP ADLER	273-14000,274-14000 class	2	3000	170	250	1500	1500
B715	715	BROTHER	DB2-B705,DB2-B707,DB2-B715 class	2	4300	215	215	1800	1800
B716	716	BROTHER	DB2-B716-?,DB2-B716-1,DB2-B716-?,DB2-B716-5 class	2	3500	215	215	1800	1800
B737	737	BROTHER	DB2-B737-1,DB2-B737-3,DB2-B737-5 class	2	4000	215	215	1800	1800
B740	740	BROTHER	DB2-B746-5,DB2-B746-7,DB2-B746-8,DB2-B747-5,DB2-B748-5,DB2-B748-7 class	2	2000	215	215	1800	1800
B757	757	BROTHER	DB2-B757 class	2	5000	215	215	1800	1800
B770	770	BROTHER	DB2-B772,DB2-B774,DB2-B7740,DB2-B778 class	2	4500	215	215	1800	1800
B790	790	BROTHER	DB2-B790,DB2-B791-3,DB2-B791-5,DB2-B7910-3,DB2-B7910-5,DB2-B792,DB2-B793-403,DB2-B795,DB2-B798 class	2	3500	215	215	1800	1800
B830	830	BROTHER	DB2-B837,DB2-B838 class	2	3000	215	215	1800	1800
BLT	6L7	BROTHER	LT2-B841-1,LT2-B841-3,LT2-B841-5,LT2-B842-1,LT2-B842-3,LT2-B842-5,LT2-B845,LT2-B8450,LT2-B8480,LT2-B847,LT2-B848,LT2-B872,LT2-B875,LT2-B8750 class	2	3000	185	185	1000	1000
BLZ	6LZ	BROTHER	LZ2-B852,LZ2-B853,LZ2-B854,LZ2-B856,LZ2-B857 class	2	3000	185	185	1800	1800
J500	J500	JUKI	DDL-500,DMN-5420NFA-6-WB class	2	5000	200	200	1700	1900
J505	J505	JUKI	DDL-505,DDL-505A,DDL-506,DDL-506A,DDL-506E,DDL-560-5,DDL-5600,DLU-5494NBB-6-WB,PLW-1245-6,PLW-1246-6,PLW-1257-6,PLW-1264-6,PLW-1266-6 class	2	4000	200	200	1700	1900
J555	J555	JUKI	DDL-555-2-2B,DDL-555-2-4B,DDL-555ON,DDL-5570,DDL-5571,DDL-5580 class	2	4000	200	200	1700	1900
JDL	JDL	JUKI	DLN-432-5,DLN-436-5,DLM-5400N-6,DLM-5400-6,DLN-415-5,DLN-5410N-6,DLN-5410-6,DLU-450,DLU-490-5,DLU-491-5,DLU-5490BB-6-OB,DLU-5490BB-6-WB,DLU-5490N-6,DMN-530-5,DMN-531-5 class	2	4200	200	200	1700	1900
JDU	JDU	JUKI	DNU-241H-5,DNU-241H-6,DSC-244-6,DSC-244V-6,DSC-245-5,DSC-245-6,DSC-246-6,DSC-246V-6,DSU-142-6,DSU-144-6,DSU-145-5,DSU-145-6,DU-141H-4,DU-141H-5,DU-141H-6,DU-161H-6 class	2	2000	200	200	1700	1900
JLH	JLH	JUKI	LH-1172,LH-1180-5,LH-1182-5,LH-1150,LH-1152,LH-1160,LH-1162 class	1	2300	200	200	1700	1900
JLU1	JLU1	JUKI	DDL-5560NL-6,LU-1114-5,LU-1114-6,LZH-1290-6 class	2	2800	200	200	1700	1900
JLU2	JLU2	JUKI	LU-2210-6-0B class	2	3500	200	200	1700	1900
T100	T100	TOYOTA	AD1012,AD1012B,AD1012G,AD1013,AD1013A,AD1013G,AD1020,AD1102,AD1102B,AD1102G,AD1103,AD1103A,AD1202,AD1203,AD1204S,AD1205,AD1205S,AD1212G,AD1213,AD2200,AD5010S class	2	3500	200	200	1700	1700
T157	T157	TOYOTA	AD157,AD157G class	2	4000	200	200	1700	1700
T158	T158	TOYOTA	AD158,AD158-2,AD158-22,AD158A-3,AD158A-32,AD158B-2,AD158B-22,AD158G-2,AD158G-22,AD158-3,AD158-32 class	2	3500	200	200	1700	1700
T300	T300	TOYOTA	AD3110,AD3110P,AD320-2,AD320-22,AD320-202,AD331,AD3310,AD3310P,AD332,AD340-2,AD340-22,AD340-202,AD340B-2,AD340B-22,AD340B-202,AD341-2,AD341-22,AD341-202,AD345-2,AD345-22,AD345-202,AD352 class	2	1900	200	200	1700	1700
U639	U639	UNION SPECIAL	Class 63900 Solenoid-operated needle feed under trimmer	2	4000	250	180	1700	1700
SLH2	SLH2	SEIKO	SLH-2B	2	570	100	100	1700	1700
457G	457G	SINGER	457 Wiper	2	4000	250	160	1500	1500
457F	457F	SINGER	457 Thread pull	2	4000	250	160	1500	1500
591	591	SINGER	591, 1591	2	4000	250	200	1500	1500
211A	211A	SINGER	211A	2	2300	200	180	1000	1000
212A	212A	SINGER	212A	2	3500	200	180	1000	1000
411U	411U	SINGER	411U	2	4000	250	180	1500	1500
412U	412U	SINGER	412U	2	4500	250	180	1500	1500
591V	591V	SINGER	591V	2	4000	250	200	1500	1500
691A	691A	SINGER	1691D250	2	4000	250	200	1500	1500
691B	691B	SINGER	1691D210, 1691D200	2	4000	250	200	1500	1500
*2 ↑ 750	750	SINGER	750	2	4500	250	215	1500	1500

*1 A function name is displayed in order to the direction of [↓] every time it presses a [↓] key.

*2 A function name is displayed in order to the direction of [↑] every time it presses a [↑] key.

Note : Please refer to the "TECHNICAL INFORMATION MANUAL" for the Junction wiring, I/O signals and details.

11 Function List

Refer to the Technical Documents for details on each function.
The numbers in the table are used with the direct number call function.

name	Function	No.
H.	Maximum speed	0000
L.	Low speed	0001
T.	Thread trimming speed	0002
N.	Start tacking speed	0003
V.	End tacking speed	0004
M.	Medium speed	0005
S.	Slow start speed	0006
SLN.	No. of slow start stitches	0007
SLM.	Slow start operation mode	0008
SLP.	Slow start when power is turned ON	0009
SH.	One shot	0010
SHM.	One shot operation mode	0011
PSU.	No. of stitches after PSU input	0012
PSD.	No. of stitches after PSD input	0013
PS1.	Sensor input signal PS1 operation mode	0014
1.	No. of stitches after PS1 input	0015
PS2.	Sensor input signal PS2 operation mode	0016
2.	No. of stitches after PS2 input	0017
PSN.	Restart after PSD,SEN input PSN	0018
SEN.	Input sensor function valid / invalid	0019
SE.	Setting stitch amount to stop by "SEN"	0020
FUM.	Presser foot lift momentary	0021
FU.	FUM operation mode	0022
FCT.	Time setting for FUM operation mode	0023
FD.	Time to motor drive after presser foot lifter bring down	0024
FO.	Full wave time of presser foot lifter output	0025
S3D.	Delay time of presser foot signal S3 input	0026
FUD.	Presser foot lifting output chopping duty	0027
PFU.	Presser foot lifting output when power is turned ON	0028
FL.	Cancel the presser foot lifting with full heeling	0029
S3L.	Cancel presser foot lifting with light heeling	0030
S2L.	Cancel of thread trimming operation	0031
S6L.	Thread trimming protection signal (S6) logical changeover	0032
AT.	Automatic operation	0033
TL.	Thread trimmer cancel	0034
TLS.	Auto-stop of preset stitch sewing before trim	0035
RU.	Reverse run needle lifting after thread trimming	0036
R8.	RU reverse run angle	0037
TB.	Thread trimming with reverse feed	0038
TBJ.	Not used.	0039
S2R.	Full heeling, S2 signal operation mode	0040
IL.	Cancel of interlock after full pedal heeling	0041
TR.	Thread trimming mode	0042
POS.	Thread trimming validity at neutral pedal	0043
P1P.	Operation when power is turned ON during 1 position setting.	0044
P2P.	Operation when power is turned ON during 2 position setting.	0045
C8.	Needle stop position before fabric	0046
K8.	Reverse run angle from DOWN position to UP position	0047
E8.	On angle of virtual "TM"	0048
S8.	On start angle of virtual "TM"	0049
SNM.	Setting sensor "SEN" input function	0050
KD.	Virtual down setting	0051
KDU.	Virtual width of up and down signal	0052
PSJ.	Not used.	0053
D8.	Needle DOWN position stop angle	0054
U8.	Needle UP position stop angle	0055

P mode (For sewing machine): [↓]+[↑] key

name	Function	No.
GA.	Gain high/low selection	0100
PDC.	Pedal curve	0101
AC.	Acceleration time simple setting	0102
ACT.	Acceleration time	0103
DC.	Deceleration time simple setting	0104
DCT.	Deceleration time	0105
SC.	S-character cushion	0106
SCT.	S-character cushion time setting	0107
S2M.	Full heeling S2 signal operation mode when power is turned on or after thread trimming	0108
PL.	Sewing machine shaft/motor shaft speed setting selection	0109
MR.	Setting motor pulley diameter	0110
SR.	Setting sewing machine pulley diameter	0111
NOS.	Random stop is available without thread trimming.	0112
STM.	First priority stop => speed control	0114
BKT.	Brake time	0115
B8.	Weak brake angle	0116
BNR.	Reduction of weak brake sound	0117
BKS.	Weak brake force	0118
BKM.	Weak brake mode	0119
BK.	Weak brake	0120
S.	Display sewing speed	0200
N.	Down counter setting count amount	0201
D.	Down counter display count amount	0202
P.	Up counter setting count amount	0203
U.	Up counter display count amount	0204
CUP.	Up counter the selection of setting mode	0205
USC.	Up counter the selection of counter operation	0206
UCM.	Up counter changing sewing pattern	0207
UPC.	Up counter valid / invalid	0208
NXU.	Up counter operation after counting over	0209
CDN.	Down counter the selection of setting mode	0210
DSC.	Down counter the selection of counter operation	0211
DCM.	Down counter changing sewing pattern	0212
DNC.	Down counter valid / invalid	0213
NXD.	Down counter operation after counting over	0214
PCM.	Counter condition turning on power switch	0215
PRN.	Setting Thread trimming times "N"	0216
CNU.	Setting Number of stitches "N"	0217
CCI.	Count modification (to use IO1, IO2)	0218
PMD.	Display condition turning on power switch	0219
CCM.	Reset for Up / Down counter during operation	0220

A mode (For servo motor) : [↓]+[A] key

B mode (For counter/speed display) : [↓]+[B] key

Program mode [I] (Save mode of the setting data) : [↓]+[↑]+[B]+[C] key

name	Function	No.
SAVE1	Save mode of the setting data 1	-
SAVE2	Save mode of the setting data 2	-
CCR	Copy of the current data	-
CU1	Copy of user's 1 data	-
CU2	Copy of user's 2 data	-

Program mode [R] (Reset): [↓]+[B]+[C] key

name	Function	No.
RESET.	Reset	-

Program mode [1] (sewing machine): [↓]+[A]+[B] key

name	Function	No.
280M	LS2-1280-M1T(W)	-
:	:	-
LOD1	Load of the saved setting data 1	-

Program mode [2] (Chain stitch sewing machine): [↓]+[C]+[D] key

name	Function	No.
YU2	YAMATO VC2600,VC2700 class	-
:	:	-
JMH	JUKI	-

Program mode [3] (other lock stitch sewing machine): [↓]+[A]+[D] key

name	Function	No.
D697	DÜRKOPP ADLER 697-15000 class	-
:	:	-
750	SINGER	-

	name	Function	No.
	IA.	IA input function selection	0300
	IAL.	IA input logic changeover	0301
	IAA.	IA input alternating operation	0302
	IB.	IB input function selection	0303
	IBL.	IB input logic changeover	0304
	IBA.	IB input alternating operation	0305
	IC.	IC input function selection	0306
	ICL.	IC input logic changeover	0307
	ICA.	IC input alternating operation	0308
	ID.	ID input function selection	0309
	IDL.	ID input logic changeover	0310
	IDA.	ID input alternating operation	0311
	IE.	IE input function selection	0312
	IEL.	IE input logic changeover	0313
	IEA.	IE input alternating operation	0314
	IF.	IF input function selection	0315
	IFL.	IF input logic changeover	0316
	IFM.	Setting the function for IF	0317
	RFS.	Set condition of RS F/F for IF	0318
	RFR.	Reset condition of RS F/F for IF	0319
	RFN.	RS F/F reset stitch amount for IF	0320
	IG.	IG input function selection	0321
	IGL.	IG input logic changeover	0322
	IGA.	IG input alternating operation	0323
	IH.	IH input function selection	0324
	IHL.	IH input logic changeover	0325
	IHA.	IH input alternating operation	0326
	II.	II input function selection	0327
	IIL.	II input logic changeover	0328
	IIA.	II input alternating operation	0329
	IJ.	Not used.	0330
	IJL.	Not used.	0331
	IJA.	Not used.	0332
	IK.	Not used.	0333
	IKL.	Not used.	0334
	IKA.	Not used.	0335
	IL.	Not used.	0336
	ILL.	Not used.	0337
	ILA.	Not used.	0338
	IM.	IM input function selection	0339
	IML.	IM input logic changeover	0340
	IMA.	IM input alternating operation	0341
	IN.	IN input function selection	0342
	INL.	IN input logic changeover	0343
	INA.	IN input alternating operation	0344
	IO.	IO input function selection	0345
	IOL.	IO input logic changeover	0346
	IOA.	IO input alternating operation	0347
	IP.	IP input function selection	0348
	IPL.	IP input logic changeover	0349
	IPA.	IP input alternating operation	0350
	IQ.	IQ input function selection	0351
	IQL.	IQ input logic changeover	0352
	IQA.	IQ input alternating operation	0353
	IR.	IR input function selection	0354
	IRL.	IR input logic changeover	0355
	IRA.	IR input alternating operation	0356
	I1.	I1 input function selection	0357
	I1L.	I1 input logic changeover	0358
	I1M.	Setting the function for I1	0359
	I1O	Special setting for input signal "I1"	0360
	I1F	Special setting for input signal "I1" is ON	0361
	I1C	RS F/F clear setting	0362
	1CT	RS F/F delay time setting	0363
	F1P	Input signal I1 virtual F/F circuit operation 1	0364
	F1C	Input signal I1 virtual F/F circuit operation 2	0365
	F1S	Input signal I1 virtual F/F circuit operation 3	0366
	R1S	Set condition of RS F/F for I1	0367
	R1R	Reset condition of RS F/F for I1	0368
	R1N	RS F/F reset stitch amount for I1	0369
	I2.	I2 input function selection	0370
	I2L.	I2 input logic changeover	0371
	I2M.	Setting the function for I2	0372
	I2C	RS F/F clear setting	0373
	2CT	RS F/F delay time setting	0374
	R2S	Set condition of RS F/F for I2	0375
	R2R	Reset condition of RS F/F for I2	0376
	R2N	RS F/F reset stitch amount for I2	0377

C mode (For setting input/output signal to function): [↓]+[C] key

	name	Function	No.
	I4.	I4 input function selection	0378
	I4L.	I4 input logic changeover	0379
	I4A.	I4 input alternating operation	0380
	I5.	I5 input function selection	0381
	I5L.	I5 input logic changeover	0382
	I5A.	I5 input alternating operation	0383
	I6.	I6 input function selection	0384
	I6L.	I6 input logic changeover	0385
	I6A.	I6 input alternating operation	0386
	I7.	I7 input function selection	0387
	I7L.	I7 input logic changeover	0388
	I7A.	I7 input alternating operation	0389
	OA.	OA output function selection	0390
	OAL.	OA output logic changeover	0391
	OAC.	OA output chopping operation	0392
	OAT.	OA output forced OFF	0393
	DA.	OA output delay time	0394
	OB.	OB output function selection	0395
	OBL.	OB output logic changeover	0396
	OBC.	OB output chopping operation	0397
	OBT.	OB output forced OFF	0398
	DB.	OB output delay time	0399
	OC.	OC output function selection	0400
	OCL.	OC output logic changeover	0401
	OCC.	OC output chopping operation	0402
	OCT.	OC output forced OFF	0403
	DC.	OC output delay time	0404
	OD.	OD output function selection	0405
	ODL.	OD output logic changeover	0406
	ODC.	OD output chopping operation	0407
	ODT.	OD output forced OFF	0408
	DD.	OD output delay time	0409
	OF.	OF output function selection	0410
	OFL.	OF output logic changeover	0411
	FUD.	Presser foot lifter output chopping duty	0412
	FO.	Presser foot lifter FU full wave output time	0413
	FU.	Presser foot lifter FU momentary mode	0414
	DF.	OF output delay time	0415
	O1.	O1 output function selection	0416
	O1L.	O1 output logic changeover	0417
	O1C.	O1 output chopping function	0418
	O1T.	O1 output forced OFF	0419
	D1.	O1 output delay time	0420
	O2.	O2 output function selection	0421
	O2L.	O2 output logic changeover	0422
	O2C.	O2 output chopping function	0423
	O2T.	O2 output forced OFF	0424
	D2.	O2 output delay time	0425
	O3.	O3 output function selection	0426
	O3L.	O3 output logic changeover	0427
	O3C.	O3 output chopping function	0428
	O3T.	O3 output forced OFF	0429
	D3.	O3 output delay time	0430
	O4.	O4 output function selection	0431
	O4L.	O4 output logic changeover	0432
	O4T.	O4 output forced OFF	0433
	D4.	O4 output delay time	0434
	O5.	O5 output function selection	0435
	O5L.	O5 output logic changeover	0436
	O5T.	O5 output forced OFF	0437
	D5.	O5 output delay time	0438
	O6.	O6 output function selection	0439
	O6L.	O6 output logic changeover	0440
	O6C.	O6 output chopping function	0441
	O6T.	O6 output forced OFF	0442
	D6.	O6 output delay time	0443
	O7.	O7 output function selection	0444
	O7L.	O7 output logic changeover	0445
	O7C.	O7 output chopping function	0446
	O7T.	O7 output forced OFF	0447
	D7.	O7 output delay time	0448
	OM.	OM output function selection	0449
	OML.	OM output logic changeover	0450
	OMT.	OM output forced OFF	0451
	DM.	OM output delay time	0452
	ON.	ON output function selection	0453
	ONL.	ON output logic changeover	0454
	ONT.	ON output forced OFF	0455

C mode (For setting input/output signal to function): [↓]+[C] key

	name	Function	No.
C mode (For setting input/output signal to function): [↓]+[C] key	DN.	ON output delay time	0456
	OO.	OO output function selection	0457
	OOL.	OO output logic changeover	0458
	OOT.	OO output forced OFF	0459
	DO.	OO output delay time	0460
	OP.	OP output function selection	0461
	OPL.	OP output logic changeover	0462
	OPT.	OP output forced OFF	0463
	DP.	OP output delay time	0464
	OQ.	OQ output function selection	0465
	OQL.	OQ output logic changeover	0466
	OQT.	OQ output forced OFF	0467
	DQ.	OQ output delay time	0468
	O.R.	OR output function selection	0469
	O.RL.	OR output logic changeover	0470
	O.RT.	OR output forced OFF	0471
	DR.	OR output delay time	0472
	PO.	Full wave output time for each output	0473
	POD.	Output chopping duty except of FU output	0474
	OTT.	Forced OFF timer setting function for each output	0475
	FCT.	Time setting for FUM operation mode	0476
	A1.	Logic [AND] module input function selection	0477
	A1L.	Logic [AND] module setting of Hi/Low logic	0478
	A1A.	Logic [AND] module Alternate	0479
	N1.	Logic [AND] module output function selection	0480
	N1L.	Logic [AND] module setting of Hi/Low logic	0481
	N2.	Logic [AND] module output function selection	0482
	N2L.	Logic [AND] module setting of Hi/Low logic	0483
	A2.	Logic [AND] module input function selection	0484
	A2L.	Logic [AND] module setting of Hi/Low logic	0485
	A2A.	Logic [AND] module Alternate	0486
	N3.	Logic [AND] module output function selection	0487
	N3L.	Logic [AND] module setting of Hi/Low logic	0488
	N4.	Logic [AND] module output function selection	0489
	N4L.	Logic [AND] module setting of Hi/Low logic	0490
	A3.	Logic [AND] module input function selection	0491
	A3L.	Logic [AND] module setting of Hi/Low logic	0492
	A3A.	Logic [AND] module Alternate	0493
	N5.	Logic [AND] module output function selection	0494
	N5L.	Logic [AND] module setting of Hi/Low logic	0495
	N6.	Logic [AND] module output function selection	0496
	N6L.	Logic [AND] module setting of Hi/Low logic	0497
	OR.	Logic [OR] module input function selection	0498
	ORL.	Logic [OR] module setting of Hi/Low logic	0499
	ORA.	Logic [OR] module Alternate	0500
	R1.	Logic [OR] module output function selection	0501
	R1L.	Logic [OR] module setting of Hi/Low logic	0502
	R2.	Logic [OR] module output function selection	0503
	R2L.	Logic [OR] module setting of Hi/Low logic	0504
	CSP.	Variable speed command for digital input	0505
CSG.	Variable speed command for digital input (Gray code)	0506	
LB.	Thread release + backstitch output	0507	
T1C.	Virtual output OT1 forced OFF function	0508	
T1T.	Forced OFF timer setting function for virtual output OT1	0509	
T2C.	Virtual output OT2 forced OFF function	0510	
T2T.	Forced OFF timer setting function for virtual output OT2	0511	
T3C.	Virtual output OT3 forced OFF function	0512	
T3T.	Forced OFF timer setting function for virtual output OT3	0513	
D11.	ON delay time setting function for virtual output OT1	0514	
D12.	OFF delay time setting function for virtual output OT1	0515	
D21.	ON delay time setting function for virtual output OT2	0516	
D22.	OFF delay time setting function for virtual output OT2	0517	
D31.	ON delay time setting function for virtual output OT3	0518	

	name	Function	No.
C mode : [↓]+[C] key	D32.	OFF delay time setting function for virtual output OT3	0519
	CPK.	Feed pulse output (CP) cancel function	0520
	CP.	Setting CP pulse amount	0521
	CPC.	Prohibited angle of output CP pulse	0522
	PSW.	Panel switch operation prohibit	0523
	CKB.	O4, O5 output cancel during backtack term	0524
	CPB.	CP output cancel during backtack term	0525
	C.	Speed setting for the [SPC] output	0526
	D.	Speed setting for the [SPD] output	0527
	E.	Speed setting for the [SPE] output	0528
	CNF.	F key function on control panel	0529
	PDS.	Variable speed pedal changeover setting	0530
	V2C.	Speed instruction VC2 cancellation	0531

	name	Function	No.
D mode (For tacking setting mode): [↓]+[D] key	D1.	Operation mode during tacking	0600
	D2.	Operation mode during start tack completion	0601
	CT.	Stop time at each corner during start and backtacking	0602
	BM.	Tack alignment	0603
	BT1.	No. of stitch compensation for start tacking alignment	0604
	BT2.	No. of stitch compensation for start tacking alignment	0605
	BT3.	No. of stitch compensation for end tacking alignment	0606
	BT4.	No. of stitch compensation for end tacking alignment	0607
	BTP.	No. of tacking stitches (+) 15 stitches function	0608
	BTO.	No. of tacking stitches addition stitches function	0609
	BTT.	Full heeling function immediately after start tacking stop	0610
	CSJ.	Not used.	0611
	SPN.	The speed operation mode when both the medium speed signal and S5V signal is ON	0612
	BTM.	Set table types of tacking	0613
	S7M.	Input signal S7 operation mode during preset stitching	0614
	S7U.	Manual backstitch ON timing 1	0615
	S7D.	Manual backstitch ON timing 2	0616
	7BD.	The OFF timing setting of output B when the backstitching signal (S7) is OFF setting.	0617
	BTN.	The maximum tacking stitches (maximum stitches is 99 stitches)	0618
	BCC.	No. of end tacking stitches during direct heeling	0619
	TLS.	Operation mode during thread trimmer cancel signal [TL] setting	0620
	BTS.	Input signal BTL quick pressing operation	0621
	BS.	Input signal SB and EB quick pressing operation	0622
	BTD.	Operation when input signal BTL is ON	0623
	BD.	Operation when input signal SB and EB tacking OFF are set	0624
	PNE.	End tacking cancel mode with input signal PSU	0625
	BZ.	The buzzer of control panel validity	0626


	name	Function	No.
E mode (For H/W checking mode): [↓]+[r]+[A] key	1.	Error code (The last error code)	0700
	2.	Error code (The second to last code)	0701
	3.	Error code (The third to last code)	0702
	4.	Error code (The fourth to last code)	0703
	P.	Total integration time of power on	0704
	M.	Total integration time of motor run	0705
	IA.	Input display	0706
	IB.	Input display	0707
	IC.	Input display	0708
	ID.	Input display	0709
	IE.	Input display	0710
	IF.	Input display	0711
	IG.	Input display	0712
	IH.	Input display	0713
	II.	Input display	0714
	IJ.	Input display	0715
	IK.	Input display	0716
	IL.	Input display	0717
	IP.	Input display	0718
	IQ.	Input display	0719
	IR.	Input display	0720
	I1.	Input display	0721
	I2.	Input display	0722
	I4.	Input display	0723
	I5.	Input display	0724
	ECA.	Encoder signal display (A phase)	0725
	ECB.	Encoder signal display (B phase)	0726
	UP.	Detector signal display (UP signal)	0731
	DN.	Detector signal display (DN signal)	0732
	DR.	Display the angle from down position	0733
	VC.	Display the voltage of VC	0734
	V2.	Display the voltage of VC2	0736
	OAD.	Output signal display	0737
	OBD.	Output signal display	0738
	OCD.	Output signal display	0739
	ODD.	Output signal display	0740
	OFD.	Output signal display	0741
	O1D.	Output signal display	0742
	O2D.	Output signal display	0743
	O3D.	Output signal display	0744
	O4D.	Output signal display	0745
	O5D.	Output signal display	0746
	O6D.	Output signal display	0747
	O7D.	Output signal display	0748
	OPD.	Output signal display	0749
	OQD.	Output signal display	0750
	ORD.	Output signal display	0751
	OA0.	Solenoid output	0752
	OBO.	Solenoid output	0753
	OCO.	Solenoid output	0754
	ODO.	Solenoid output	0755
	OFO.	Solenoid output	0756
	O1O.	Solenoid output	0757
	O2O.	Solenoid output	0758
	O3O.	Solenoid output	0759
	O4O.	Solenoid output	0760
	O5O.	Solenoid output	0761
	O6O.	Solenoid output	0762
	O7O.	Solenoid output	0763
	OPO.	LED output for G500 type control panel	0764
	OQO.	LED output for G500 type control panel	0765
	ORO.	LED output for G500 type control panel	0766
	WT.	Rated output display	0767
	VL.	Voltage display	0768
	TP.	Model display	0769
	DV.	Data version No.	0770
	RV.	Software version No.	0771
	T.	Display previous simple setting selected.	0772

12 How to Use the Option Connector

Variable operations are possible by adding external signals to the option connector.


A current of approximately 1.5 mA flows through the switches used for the input signal, so please use switch for minute current.

1. Connector Layout

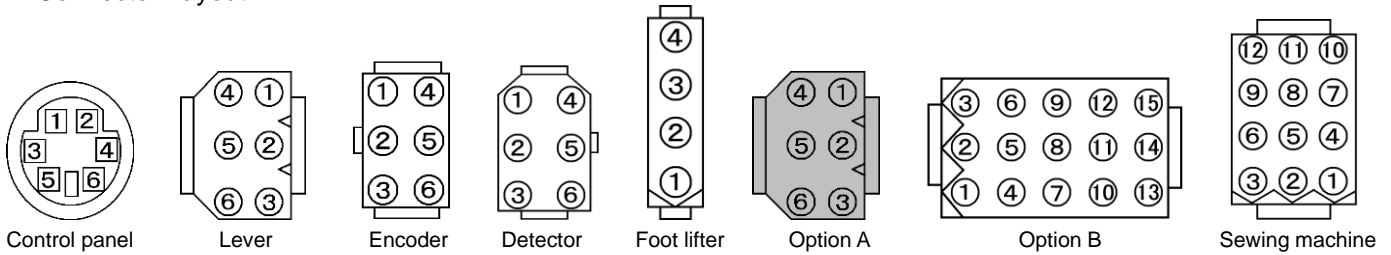

Lever

Signal name	Factory setting	
0V	0V	1
IG	S1 : Run (Variable speed)	2
IH	S2 : Thread trimming	3
II	S3 : Presser foot lifter	4
VC	VC : Variable speed command	5
+12V	+12V	6

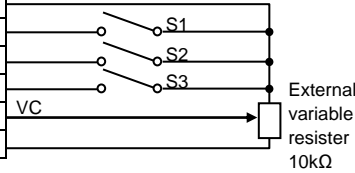

Communication /

Control panel (Note 4)


RXD1	1
RXD0	2
TXD1	3
0V	4
+12V	5
TXD0	6

Encoder (Note 4)

0V	1
EA	2
EB	3
+12V	4
Ground	5
-	6

Presser foot lifter

0V	0V	1
IF	F : presser foot input	2
OF	FU+ : presser foot lifter output +	3
	FU- : presser foot lifter output -	4




Detector (Note 4)

0V	1
-	2
Ground	3
UP	4
DN	5
+12V	6


Sewing machine

Ground	Ground	1
OB	W : Wiper output	2
+24V/(+30V)	+24V	3
OA	T : Thread trimming output	4
0V	0V	5
ID	TL : Thread trimmer cancel input	6
OD	L : Thread release output	7
+24V/(+30V)	+24V	8
IE	S7 : Backstitch input	9
0V/(+5V)	0V	10
+24V/(+30V)	+24V	11
OC	B : Backstitch output	12

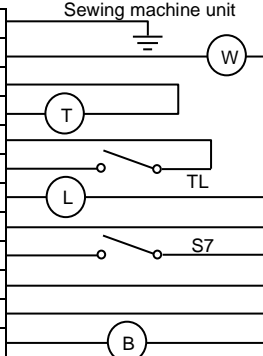

Option A (Black)


0V	0V	1
IA	PSU : Up position stop input	2
+12V/(+5V)	+12V	3
IB	PSD : Down position stop input	4
O4	UPW : Needle Up position output	5
IC	S0 : Low speed input	6

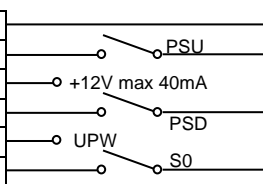

Note 1 : Pin number 5 is for the signal output.

Option B

0V	0V	1
I4	No setting	2
O1	OT1 : Output	3
VC2	VC2 : Variable speed command	4
I5	No setting	5
I1	(*) IO1 : Input	6
+5V/(+12V)	+5V	7
+24V/(+30V)	+24V	8
I2	(*) U : Needle lift signal	9
0V	0V	10
+24V/(+30V)	+24V	11
O2	NCL : Needle cooler output	12
O7	No setting	13
O6/CP	No setting	14
O3	TF : "TF" output	15

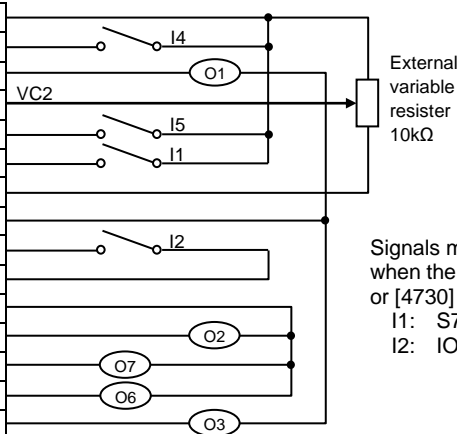

Note 2 : Pin number 3,12,15 are for the solenoid output.

Note 3 : Pin number 13,14 are for the air valve output. (not for the solenoid output)

Note4 : Please do not connect the connector of the control panel /communication, the encoder, and detector excluding our company's products with the above connectors. Moreover, please do not take out these signals besides an original usage, and do not connect them with other devices. It causes the malfunction and the control box breakdown, and our company doesn't assume the responsibility.

Note5 : Function name +24V/(+30V) is a solenoid and a power supply for the electromagnetic valve. Please do not connect other devices. It malfunctions, and it causes the trouble such as control box, and we do not take responsibility.

Signals marked (*) will be changed as follows when the function of name [4650], [4652], [4710] or [4730] is selected in simple setting.

- I1: S7 Backstitch input
- I2: IO1input

2. To use as a standing work type sewing machine. (Turn the program mode [C] function [PDS] ON.)

The sewing machine can be used as a standing work type sewing machine with the three connections below using the lever connector. However, take special care to the intrusion of noise, and use the shortest wiring possible.

[Note: Procedure for changing the lever connector]

- Be sure to turn OFF the power switch when connecting or disconnecting the lever connector.
- Do not connect the lever connector when you set the function [PDS] to ON in the program mode [C] (Direct call number = "530")



[Basic procedure]

- (1) Disconnect the lever connector after turning OFF the power switch
- (2) Turn ON the power switch and then, set the function [PDS] to ON. The lever connector still disconnects.
- (3) Connect the lever connect after turning OFF the power switch.
- (4) Turn ON the power switch and confirm the operation.

※ When the error code MA is displayed, press D key and then, it is released.

(1) When operating with an external variable resistor.
("XC-G500" Control switch panel [auto] and AT in [P] mode is OFF)

(2) For operating with a high speed.
("XC-G500" Control switch panel [auto] or AT in [P] mode is ON)

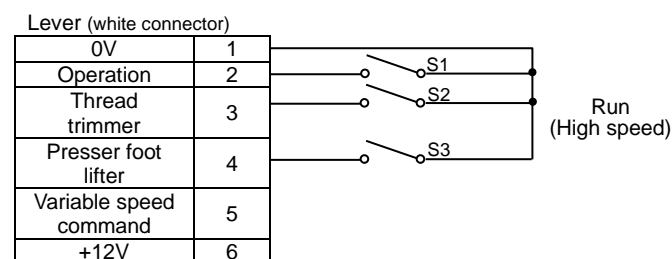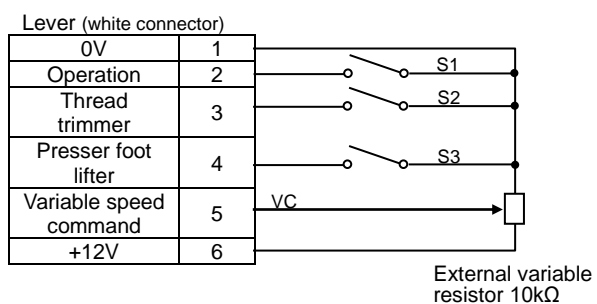

When the control box detects an error, the error code is flickered on the control switch panel display. Confirm the error code, and investigate with the following table.

Error code	Probable cause	Inspection
Pwr.OF /POWER.OF	Is the power voltage too low? Is the power supply capacity too small? <div style="border: 1px dashed black; padding: 5px; margin-top: 5px;">Note: It does this display when power supply is turned OFF, but this is not an error.</div>	Check the power voltage. Check the power supply capacity.
E1 / E1	Is the wire to the motor short-circuited? Is the sewing machine load torque too high?	Check the motor wiring. Check the sewing machine.
E2 / E2	Is the power voltage too high? Is the sewing machine inertia too high?	Check the power voltage. Lengthen the deceleration time.
E3 / E3	Is the connector to the motor encoder securely inserted? Are the signals from the motor encoder broken? Is the sewing machine locked? Is the motor locked?	Check the connector insertion. Check the ECA and ECB signal. (Refer to the E mode.) Check the sewing machine. Check the motor.
E4 / E4	Is the motor connector securely inserted? Are the signals from the motor connector correct?	Check the motor connector insertion. Check the motor connector.
E6 / E6	Is an extraordinary signal inputted? (The signal as it repeats ON/OFF at the high frequency.) Does the noise from outside enter an input signal?	Check the input signal. Remove a noise source.
E8 / E8	Is the position detector connector securely inserted? Are the signals from the detector broken? (UP/DOWN signal interruption)	Check the detector connector insertion. Check the detector UP/DOWN signals. (Refer to the E mode.)
E9 / E9	Is the solenoid wiring short-circuited? Solenoid defect (coil defect)	Check the solenoid wiring. Replace the solenoid.
E11 / E11	Is the fuse for +12V power supply broken?	Check the fuse for the 12V power supply.
*E11 error code is not confirmed on the control switch panel when it happens because the LEDs on the control switch panel is turned OFF, but the status display LED on the control box flickers in orange colored as the interval of 0.3 sec. It will be confirmed in error code history after returning to a normal condition.		

M5 / M5	An error of the copy mode using the control switch panel. Is the control switch panel connector securely inserted? The voltage or the type of control switch panel is difference.	Check the connector insertion. Check the voltage and the type are right.
MA / MA	The position data of the lever unit is defective. When power supply is turned ON, the pedal is not neutral position. (The status display LED on the control box turn on in orange colored.)	The pedal is neutralized. (It returns automatically 1 second later.)

Others	Probable cause	Inspection
The sewing machine does not run when the pedal pressed.	Are the operation signals from the lever unit broken? Is the input signal S6 broken?	Check the lever unit signal. (Refer to [E] mode S1 signal.) Check the status display LED. If flickering, reset the signal. Confirm the sewing machine connector.
The sewing machine does not run at the high speed.	It does not display 99 in normal mode. Is the variable speed voltage with the pedal toed down low? Is the motor pulley diameter too small?	Change 99 using control box [D] key. Check the variable speed voltage. (Refer to [E] mode.) Check the motor pulley diameter.(Refer to [5]-3)
The thread is not trimmed even with heeling.	Is the thread trimming signal (S2) from the lever unit broken? Is the cancel thread trimmer operation S2L(mode[P]) ON? Is the trim key of the control switch panel OFF?	Check the signal S2. (Refer [E] mode.) Set S2L(mode[P]) to OFF. Set the trim key to ON.
The presser foot lifter output does not operate.	Is the light heeling signal (S3) or the thread trimming signal (S2) from the lever unit broken? Is the presser foot lift signal (F) broken? Is the presser foot output (FU) broken?	Check signals S2 and S3. (Refer [E] mode.) Check signal F. (Refer [E] mode.) Check FU output. (Refer [E] mode.)

Specifications		Voltage and Frequency		
		110V single phase 50/60 Hz	230V single phase, 3-phase 50/60 Hz	
Motor	Model name	XL-G554-10Y	XL-G554-20Y XL-G754-20Y	
	Voltage	100 to 120 V	200 to 240 V	
	Rated output	550W		
	Rated torque	1.47Nm		
	Rated speed	3,600 rpm		
	Weight	6.9 kg (Main unit)		
Control box	Model name	General purpose automatic thread trimmer	XC-GMFY-10-05 XC-GMFY-20-05 XC-GMFY-20-07	
	Voltage	100 to 120 V	200 to 240 V	
	Speed control range	Sewing machine shaft	70 to 4,000 (MAX 8,999) rpm	
		Motor shaft	50 to 3,600 rpm	
	Solenoid voltage	DC 24 V / 30 V		
	Range of rating Voltage	±10%		
	Ambient temperature	5 to 35 °C		
	Ambient humidity	45 to 85%RH (with no dew condensation)		
	Storage temperature	-25 to 55°C (no freezing)		
	Altitude	Under 1000m above mean sea level		
	Weight	3.5kg (Main unit)		
	Position detector	XC-KE-01P		

Solenoid output

Solenoid	Impedance (Ω)	
	24VDC Setting	30VDC Setting
OF (Presser foot lifter output FU)	8 or more (continuous time rating)	10 or more (continuous time rating)
OA (Thread trimming output T)	4 or more (short time rating)	5 or more (short time rating)
OB (Wiper output W)	4 or more (short time rating)	5 or more (short time rating)
OC (back stitch output B)	4 or more (short time rating)	5 or more (short time rating)
OD (Thread release L)	4 or more (short time rating)	5 or more (short time rating)
O1 (Output)	4 or more (short time rating)	5 or more (short time rating)
O2 (Needle cooler output NCL)	4 or more (short time rating)	5 or more (short time rating)
O3 (TF output TF)	4 or more (short time rating)	5 or more (short time rating)

- Note 1. In the brackets of solenoid output, it is a factory setting.
 2. The continuous time rating of "OF" output is 50 percentage of chopping duty.
 3. The maximum output current rating is 2.0A for 24VDC and 1.6A for 30VDC.
 4. 24VDC setting is a factory setting.

Rated output current of value output


Rated maximum output current	O6, O7 : Total maximum current is 0.3 A.
------------------------------	--

<Reference> Table of digital display

No.	0	1	2	3	4	5	6	7	8	9
Digital display	0	1	2	3	4	5	6	7	8	9
No.	A	B	C	D	E	F	G	H	I	J
Digital display	A	b	C	d	E	F	G	H	I	J
No.	K	L	M	N	O	P	Q	R	S	T
Digital display	k	L	M	N	O	P	Q	R	S	T
No.	U	V	W	X	Y	Z				
Digital display	U	v	W	X	Y	Z				

<Reference> Dimensions

*MOTOR and CONTROL BOX (Unit: [mm])

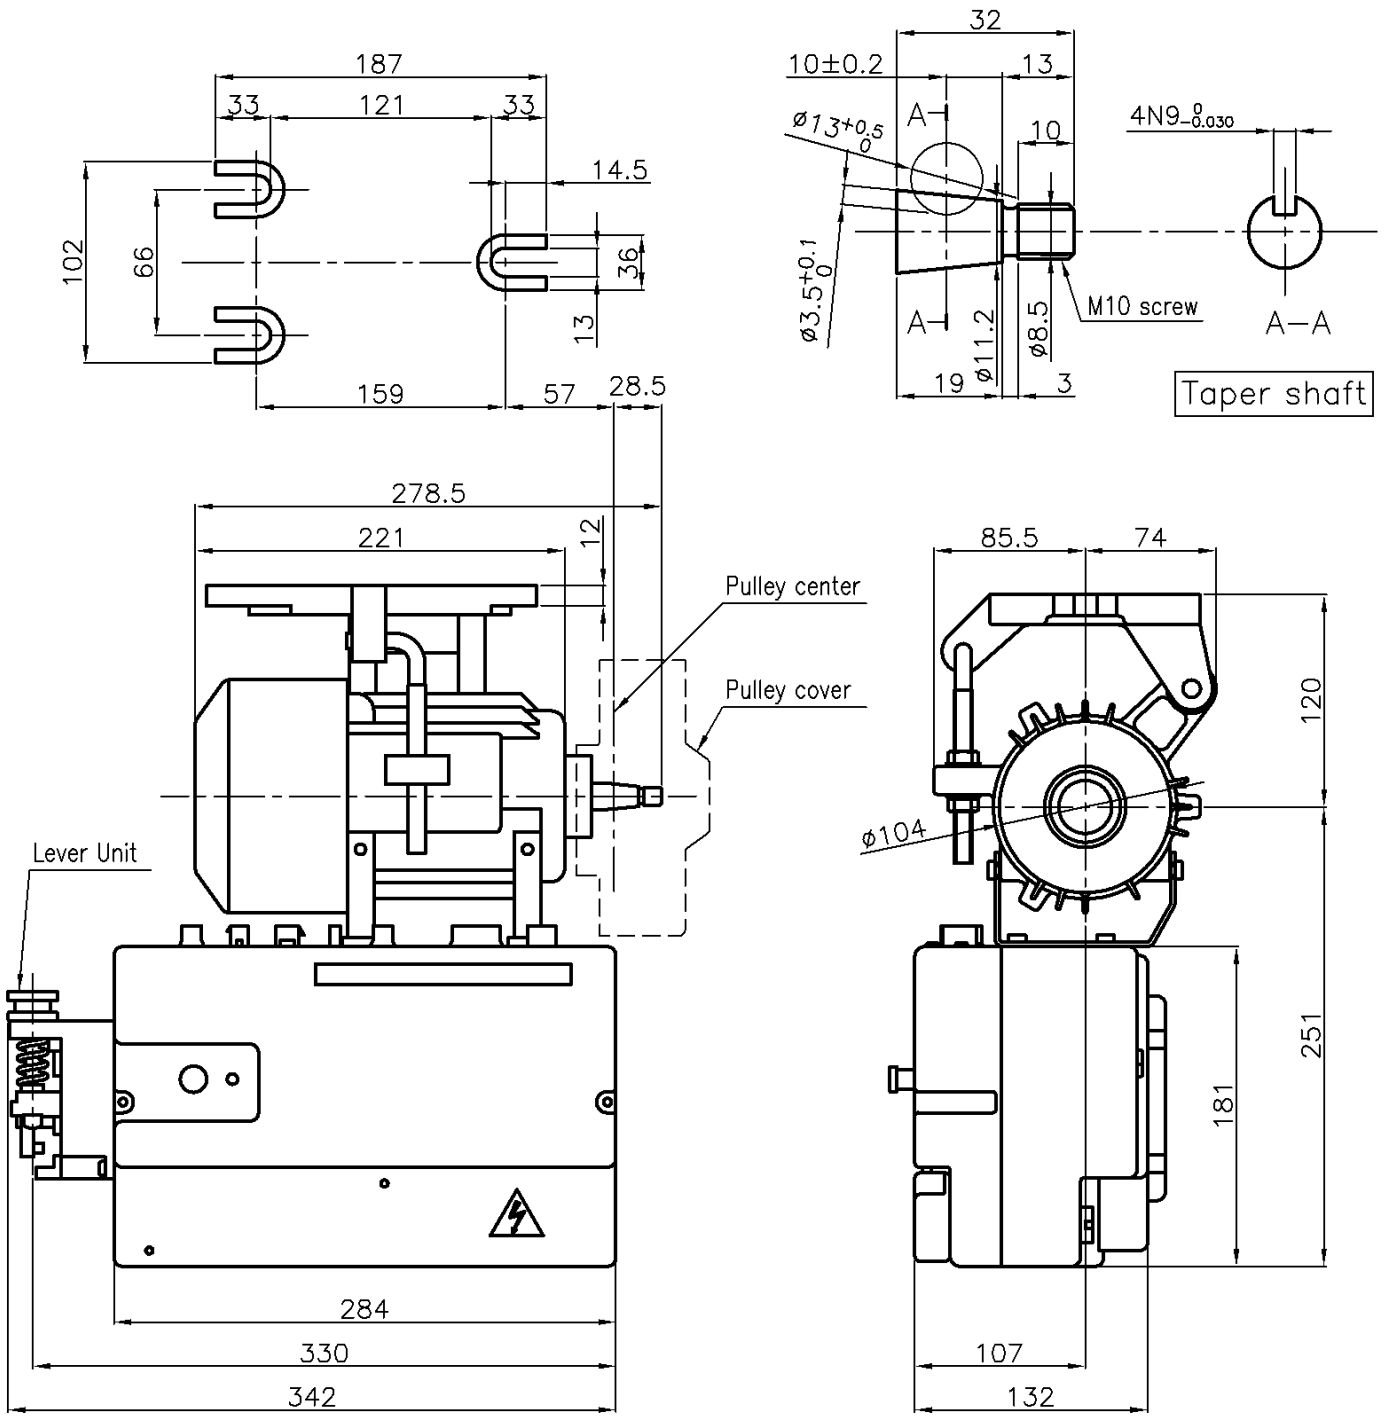

JUKI CORPORATION

Printed in Japan