

ENGLISH

**AMS-221RCHS / IP-420
INSTRUCTION MANUAL**

* "CompactFlash(TM)" is the registered trademark of SanDisk Corporation, U.S.A.

CONTENTS

I. MECHANICAL SECTION (WITH REGARD TO THE SEWING MACHINE)	1
1. SPECIFICATIONS	1
2. CONFIGURATION	2
3. INSTALLATION	3
3-1. Installing the panel	3
3-2. Installing the thread stand	3
3-3. Installing the air hose	4
3-4. Cautions for the compressed air supply (source of supply air) facility	5
4. PREPARATION OF THE SEWING MACHINE	6
4-1. Lubrication	6
4-2. Attaching the needle	7
4-3. Threading the machine head	7
4-4. Installing and removing the bobbin case	8
4-5. Installing the bobbin	8
4-6. Adjusting the thread tension	9
4-7. Intermediate presser height	10
4-8. Adjusting the thread take-up spring	10
5. OPERATION OF THE SEWING MACHINE	11
5-1. Sewing	11
5-2. Adjusting the wiper	12
5-3. How to replace the needle hole guide	13
5-4. Replacing the presser device	13
5-5. Information related to the making of the presser frame	15
II. OPERATION SECTION (WITH REGARD TO THE PANEL)	16
1. PREFACE	16
2. WHEN USING IP-420	20
2-1. Name of each section of IP-420	20
2-2. Buttons to be used in common	21
2-3. Basic operation of IP-420	22
2-4. LCD display section at the time of sewing shape selection	24
(1) Sewing shape data input screen	24
(2) Sewing screen	26
2-5. Performing sewing shape selection	28
2-6. Changing item data	30
2-7. Checking pattern shape	32
2-8. Performing modification of needle entry point	33
(1) Editing the thread tension	33
(2) Editing the intermediate presser height	34
2-9. How to use temporary stop	35
(1) To continue performing sewing from some point in sewing	35
(2) To perform re-sewing from the start	36
2-10. When setting of sewing product is difficult because of interruption of needle tip	37
2-11. Winding bobbin thread	38
(1) When performing winding bobbin thread while performing sewing	38
(2) When performing winding bobbin thread only	38

2-12. Using counter	39
(1) Setting procedure of the counter	39
(2) Count-up releasing procedure	41
(3) How to change the counter value during sewing	41
2-13. Performing new register of users' pattern.....	42
2-14. Naming users' pattern	43
2-15. Performing new register of pattern button	44
2-16. LCD display section at the time of pattern button selection	45
(1) Pattern button data input screen	45
(2) Sewing screen.....	47
2-17. Performing pattern button No. selection	49
(1) Selection from the data input screen.....	49
(2) Selection by means of the shortcut button	50
2-18. Changing contents of pattern button.....	51
2-19. Copying pattern button	52
2-20. Changing sewing mode.....	53
2-21. LCD display section at the time of combination sewing.....	54
(1) Pattern input screen	54
(2) Sewing screen.....	56
2-22. Performing combination sewing	58
(1) Selection of combination data.....	58
(2) Creating procedure of the combination data	59
(3) Deleting procedure of the combination data	60
(4) Deleting procedure of the step of the combination data	60
(5) Setting of the skip of steps.....	61
2-23. Using the simple operation mode	61
2-24. LCD display when the simple operation is selected.....	62
(1) Data input screen (individual sewing)	62
(2) Sewing screen (individual sewing)	65
(3) Data input screen (combination sewing).....	68
(4) Sewing screen (combination sewing).....	70
2-25. Changing memory switch data	72
2-26. Using information	73
(1) Information screen	73
(2) Maintenance and inspection information screen	74
(3) Production management information screen	75
(4) Setting the production control information	77
(5) Displaying the operation measurement	79
2-27. Using communication function	81
(1) Handling possible data	81
(2) Performing communication by using the media	81
(3) Performing communication by using USB.....	81
(4) Take-in of the data	82
(5) Taking in plural data together.....	83
2-28. Performing formatting of the media	85
2-29. Operation at the time of X/Y motor position slip.....	86
(1) When the error is displayed during sewing	86
(2) When the error is displayed after end of sewing	87
(3) When the rest switch is not displayed.....	87
3. MEMORY SWITCH DATA LISTTION	88


3-1. Data list	88
3-2. Initial value list	93
4. ERROR CODE LIST	95
5. MESSAGE LIST	102
III. MAINTENANCE OF SAWING MACHINE.....	105
1. MAINTENANCE.....	105
1-1. Adjusting the height of the needle bar (Changing the length of the needle)	105
1-2. Needle and hook	106
1-3. Adjusting the vertical stroke of the intermediate presser.....	108
1-4. The moving knife and counter knife.....	108
1-5. Thread breakage detector plate	109
1-6. Amount of oil supplied to the hook	109
1-7. Replenishing the designated places with grease	111
1-8. Cleaning the inside of the throat plate auxiliary cover.....	114
1-9. Draining waste oil	115
1-10. Replacing the fuse	115
1-11. Changing the voltage of 100 ⇔ 200V.....	116
1-12. Troubles and corrective measures (Sewing conditions).....	117
2. OPTIONAL	119
2-1. Table of Needle hole guide.....	119

I. MECHANICAL SECTION (WITH REGARD TO THE SEWING MACHINE)

1. SPECIFICATIONS

1	Sewing area	X (lateral) direction Without the standard feeding frame : 420 mm × Y (longitudinal) direction 150 mm
2	Max. sewing speed	2,300 sti/min (When sewing pitch is 3.5 mm or less)
3	Stitch length	0.1 to 12.7 mm (Min. resolution : 0.05 mm)
4	Feed motion of feeding frame	Intermittent feed (2-shaft drive by stepping motor)
5	Needle bar stroke	41.2 mm
6	Needle	135×17 110/18 (DP×17 #18)
7	Intermediate presser stroke	4 mm (Standard) (0 to 10 mm)
8	Lift of intermediate presser	20 mm
9	Intermediate presser DOWN position variable	Standard 0 to 3.5 mm (Max. 0 to 7.0 mm)
10	Shuttle	Full-rotary double capacity hook
11	Lubricating oil	New Defrix Oil No. 2 (Supplied by oiler)
12	Memory of pattern data	Main body, Media • Main body : Max. 999 patterns (Max. 50,000 stitches/pattern) • Media : Max. 999 patterns (Max. 50,000 stitches/pattern)
13	Temporary stop facility	Used to stop machine operation during a stitching cycle.
14	Enlarging / Reducing facility	Allows a pattern to be enlarged or reduced on the X axis and Y axis independently when sewing a pattern. Scale : 1% to 400% times (0.1% steps)
15	Enlarging / Reducing method	Pattern enlargement / reduction can be done by increasing / decreasing either stitch length or the number of stitches. (Increasing/decreasing stitch length only can be performed when pattern button is selected.)
16	Max. sewing speed limitation	200 to 2,300 sti/min (Scale : 100 sti/min steps)
17	Pattern selection facility	Pattern No. selection method (Main body : 1 to 999, Media : 1 to 999)
18	Bobbin thread counter	UP/DOWN method (0 to 9,999)
19	Sewing counter	UP/DOWN method (0 to 9,999)
20	Memory back-up	In case of a power interruption, the pattern being used will automatically be stored in memory.
21	2nd origin setting facility	Using jog keys, a 2nd origin (needle position after a sewing cycle) can be set in the desired position within the sewing area. The set 2nd origin is also stored in memory.
22	Sewing machine motor	Servo-motor
23	Dimensions	AMS-221RCHS : 1,045mm (W) x 1,050mm (L) x 1,280mm (H) (Excluding thread stand)
24	Mass (gross mass)	AMS-221RCHS : 247kg
25	Power consumption	550 VA
26	Operating temperature range	5°C to 35°C
27	Operating humidity range	35 % to 85 % (No dew condensation)
28	Line voltage	Rated voltage ±10% 50 / 60 Hz
29	Air pressure used	AMS-221RCHS : 0.4~0.55 MPa
30	Needle highest position stop facility	After the completion of sewing, the needle can be brought up to its highest position.
31	Noise	- Equivalent continuous emission sound pressure level (L _{pA}) at the workstation : A-weighted value of 84.5 dB ; (Includes K _{pA} = 2.5 dB) ; according to ISO 10821- C.6.2 -ISO 11204 GR2 at 2,300 sti/min. - Sound power level (L _{WA}) : A-weighted value of 92.5 dB ; (Includes K _{WA} = 2.5 dB) ; according to ISO 10821- C.6.2 -ISO 3744 GR2 at 2,300 sti/min.


2. CONFIGURATION

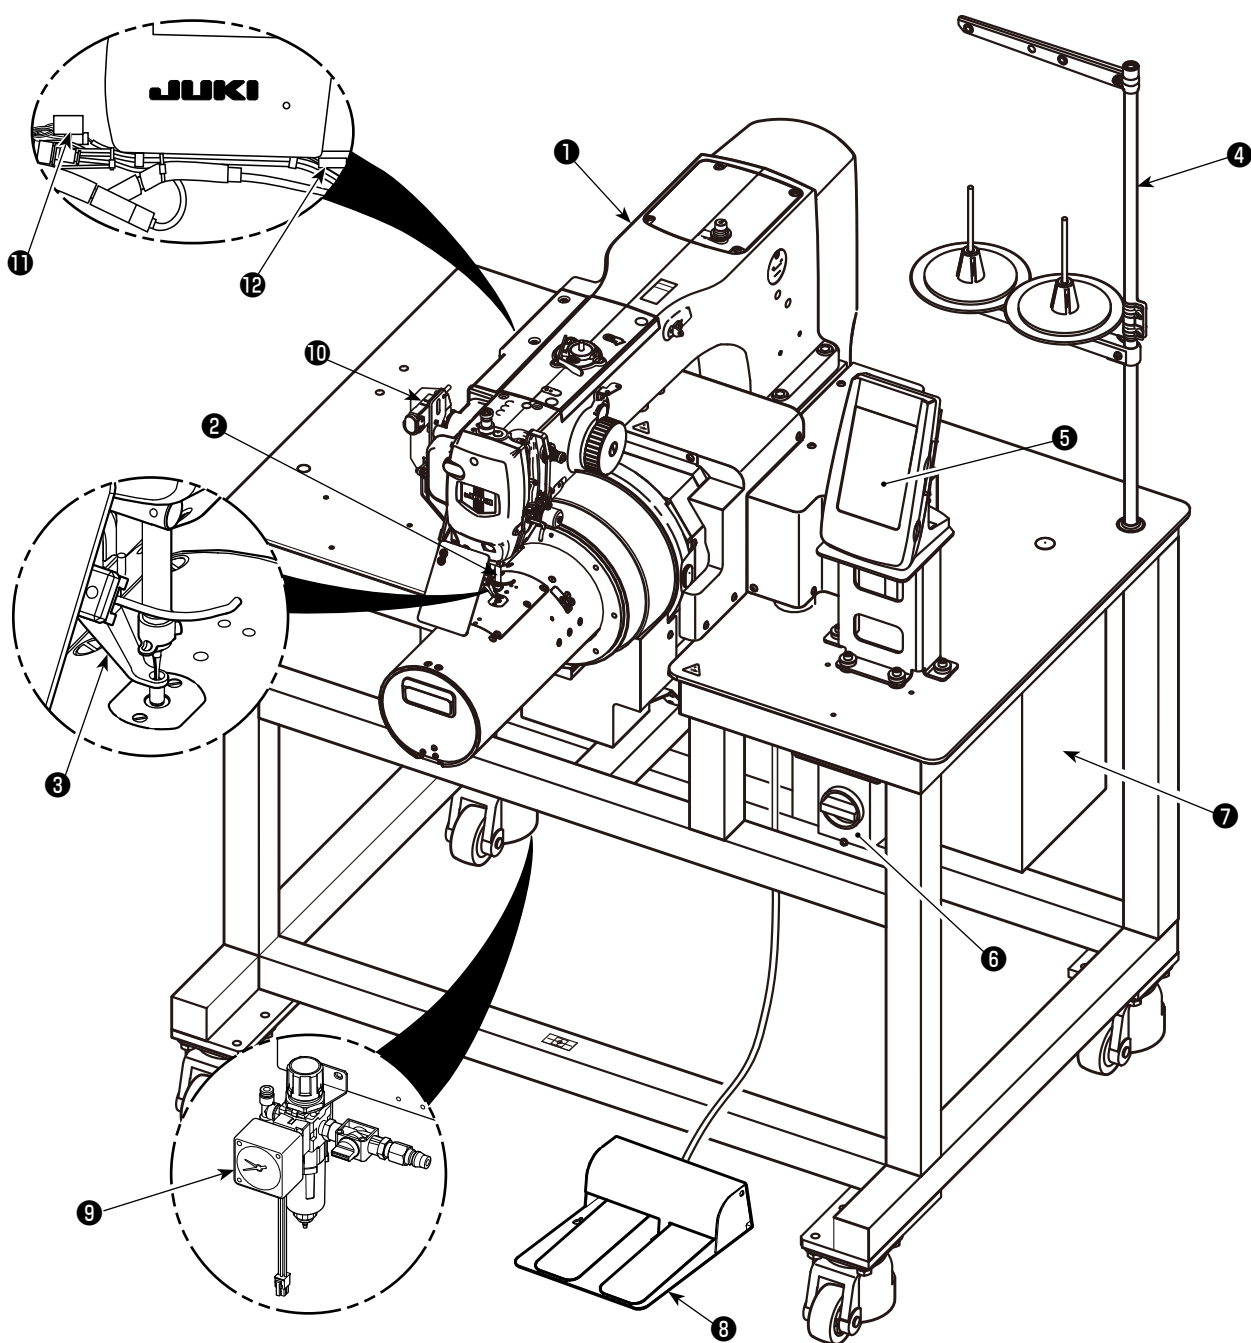


- ① Machine head
- ② Wiper
- ③ Intermediate presser
- ④ Thread stand
- ⑤ Operation panel (IP-420)
- ⑥ Power switch (also used as the emergency stop switch)
- ⑦ Control box
- ⑧ Foot pedal
- ⑨ Air control device
- ⑩ Temporary stop switch
- ⑪ CN791 (Connect this connector only when the optional eye protection cover sensor is used)
- ⑫ CN100 (Connect this connector only when the optional signal light is used)

3. INSTALLATION

3-1. Installing the panel

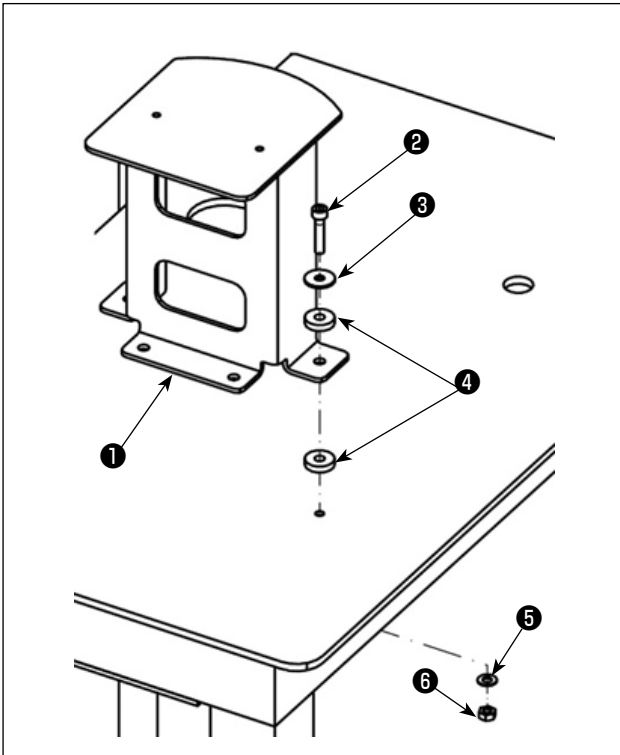


1) Secure panel base ① to the table with four screws ②.

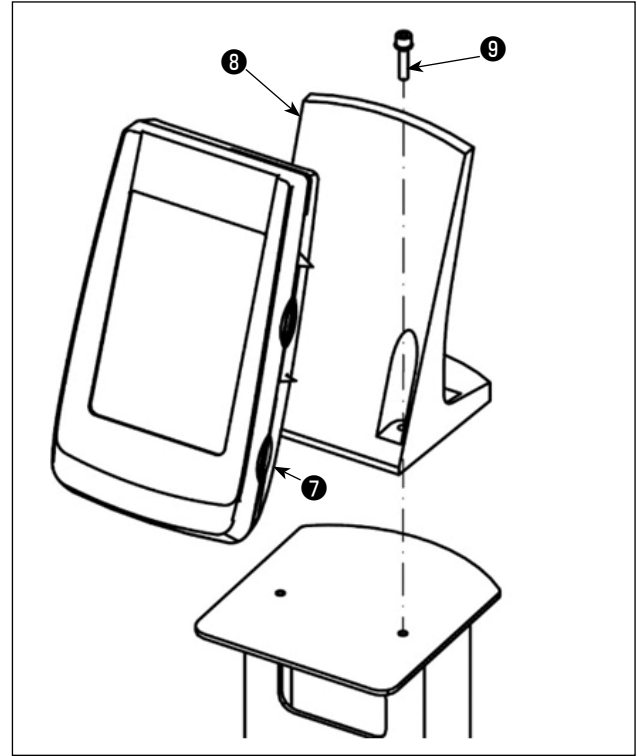

2) Open cover ⑦ and connect the cable to the operation panel.

3) Fix operation panel mounting plate ⑧ to the operation panel base with two screws ⑨.

3-2. Installing the thread stand

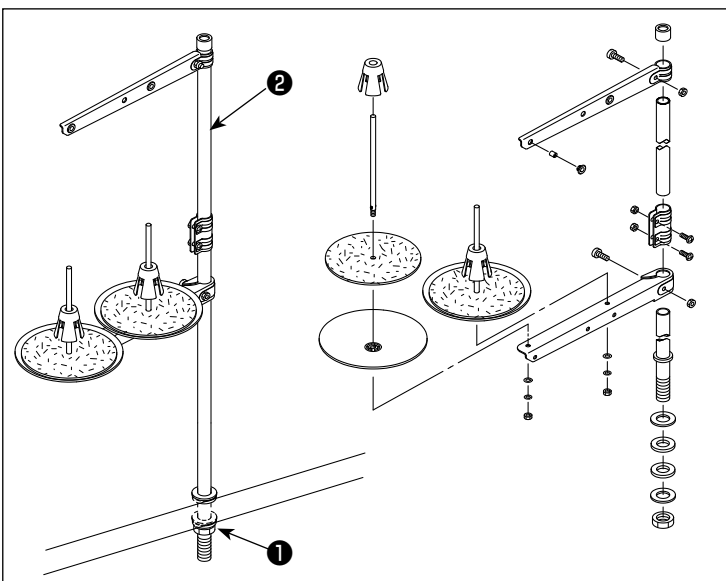


1) Assemble the thread stand, and put it in the hole in the top left corner of the machine table.

2) Tighten locknut ① to fix the thread stand.

3) When ceiling wiring is possible, pass the power cord through spool rest rod ②.

3-3. Installing the air hose

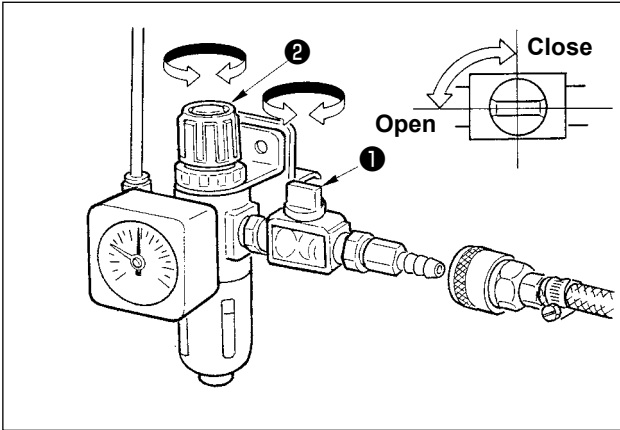


- 1) Connecting the air hose
Connect the air hose to the regulator .
- 2) Adjustment of air pressure
Open air cock ❶, pull up and turn air adjustment knob ❷ and adjust so that air pressure indicates 0.4 to 0.55 MPa Then lower the knob and fix it.
* Close air cock ❶ to expel air.

3-4. Cautions for the compressed air supply (source of supply air) facility

As large as 90 % of failures in pneumatic equipment (air cylinders, air solenoid valves) are caused by "contaminated air."

Compressed air contains lots of impurities such as moisture, dust, deteriorated oil and carbon particles. If such "contaminated air" is used without taking any measures, it can a cause of troubles, inviting reduction in productivity due to mechanical failures and reduced availability.

Be sure to install the standard air supply facility shown below whenever the machine provided with pneumatic equipment is used.

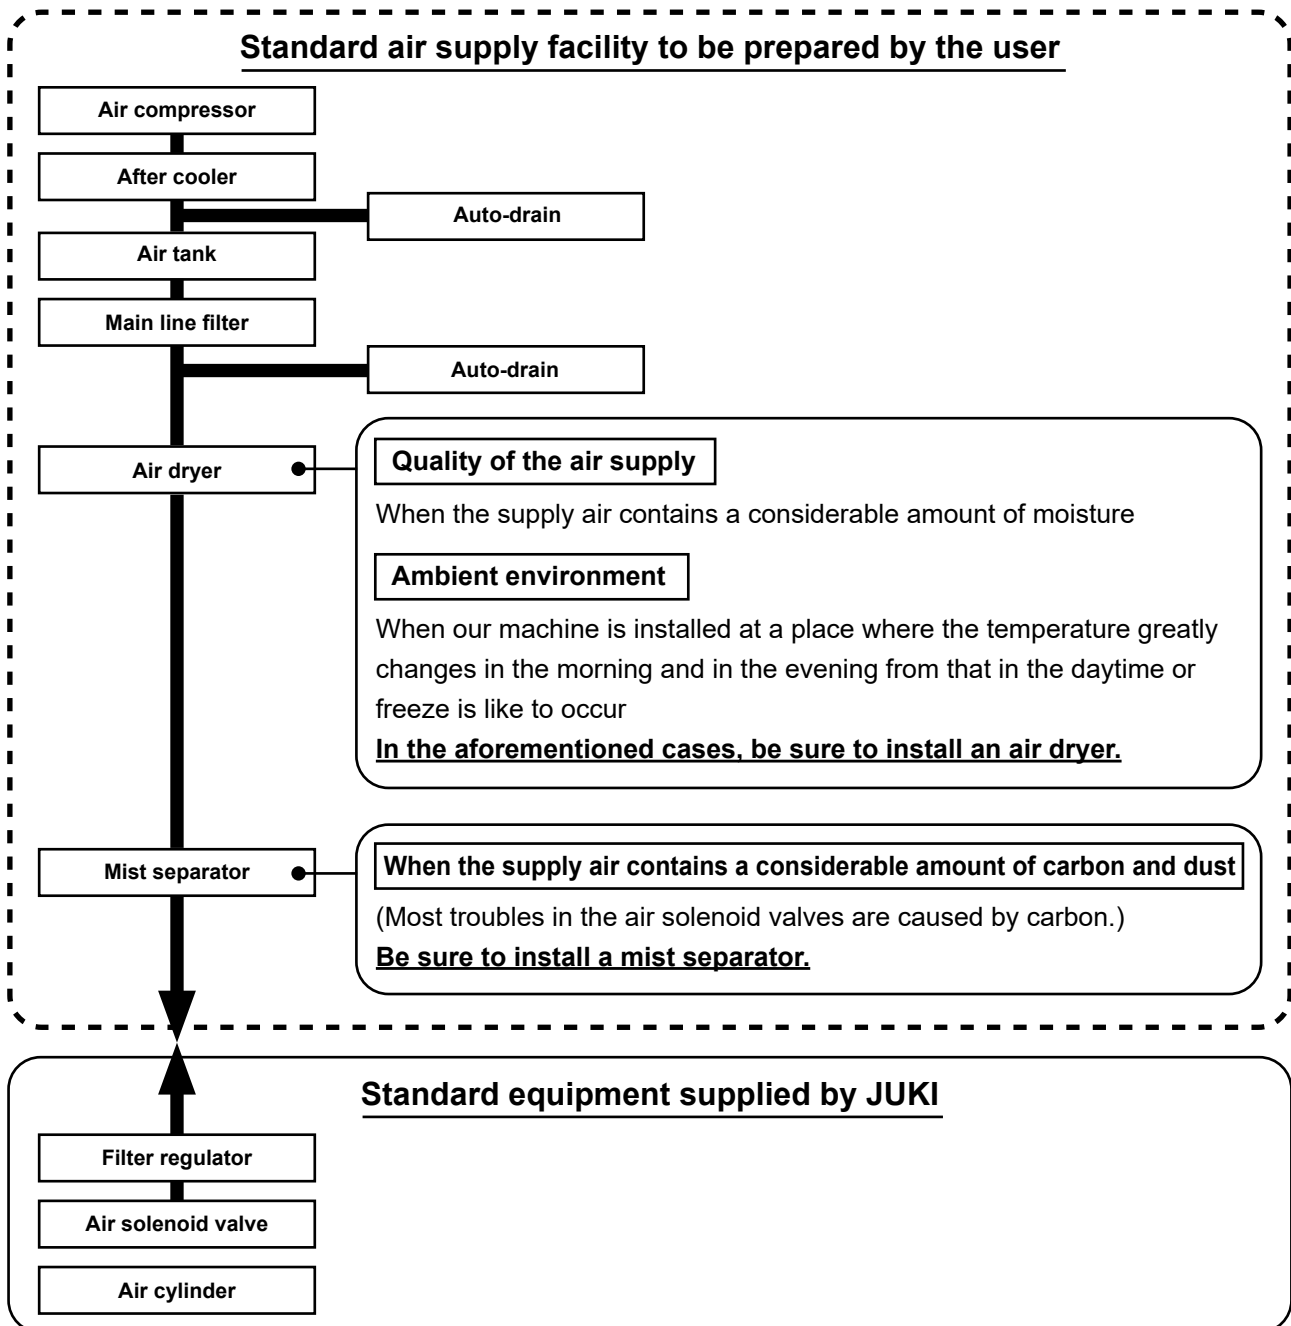

Cautions for main piping

- Be sure to slope main piping by a falling gradient of 1 cm per 1 m in the direction of air flow.
- If the main piping is branched off, the outlet port of the compressed air should be provided at the top part of the piping using a tee in order to prevent drain settling inside the piping from flowing out.
- Auto drains should be provided at all lower points or dead ends in order to prevent the drain from settling in those parts.




4. PREPARATION OF THE SEWING MACHINE

4-1. Lubrication




WARNING :

Turn OFF the power before starting the work so as to prevent accidents caused by abrupt start of the sewing machine.

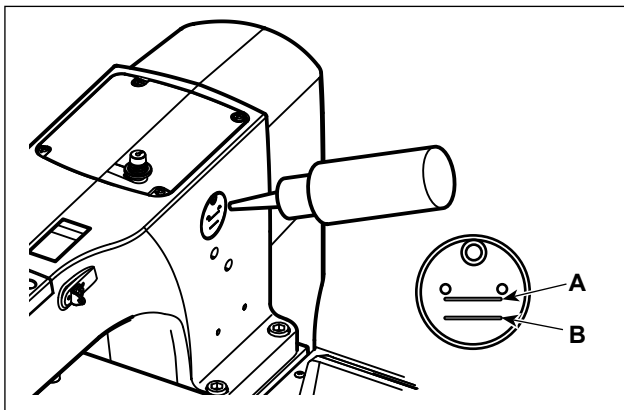

1) Check that the place between lower line **B** and upper line **A** is filled with oil. Fill there with oil using the oiler supplied with the machine as accessories when oil is short.

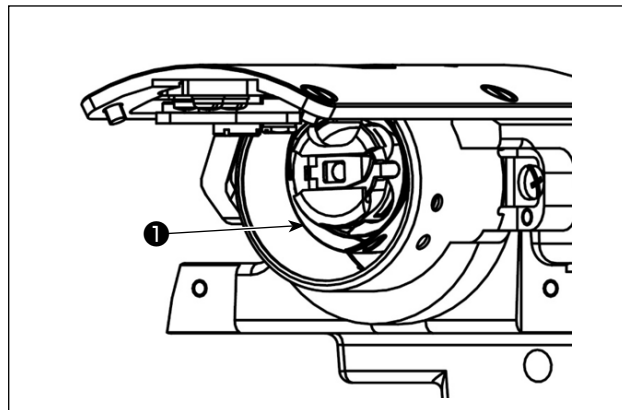

2) Apply one drop of oil to the hook race **1** part to spread on it.



The oil tank which is filled with oil is only for lubricating to the hook portion. It is possible to reduce the oil amount when the number of rotation used is low and the oil amount in the hook portion is excessive. (Refer to “III-1-6. Amount of oil supplied to the hook” p.109 .)



1. Do not lubricate to the places other than the oil tank and the hook of Caution 2 below.
Trouble of components will be caused.


2. When using the sewing machine for the first time or after an extended period of disuse, use the machine after lubricating a small amount of oil to the hook portion.

4-2. Attaching the needle



WARNING :

Turn OFF the power before starting the work so as to prevent accidents caused by abrupt start of the sewing machine.

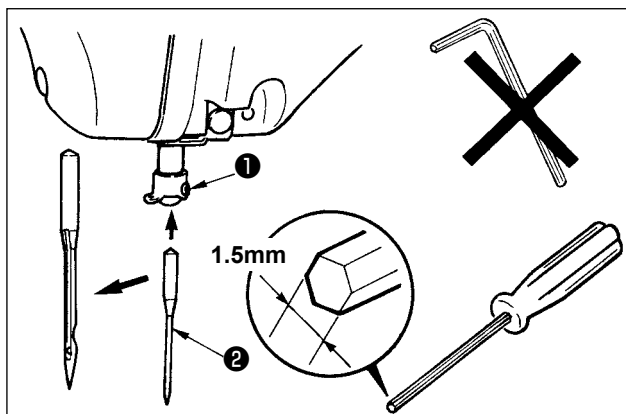

Loosen setscrew ❶ and hold needle ❷ with the long groove facing toward you. Then fully insert it into the hole in the needle bar, and tighten setscrew ❶ .




When tightening setscrew ❶ , be sure to use the screwdriver (Part No. : 40032763) supplied as accessories. Do not use L-shaped hexagon wrench key. There is a danger of breaking setscrew ❶ .

4-3. Threading the machine head



WARNING :

Turn OFF the power before starting the work so as to prevent accidents caused by abrupt start of the sewing machine.

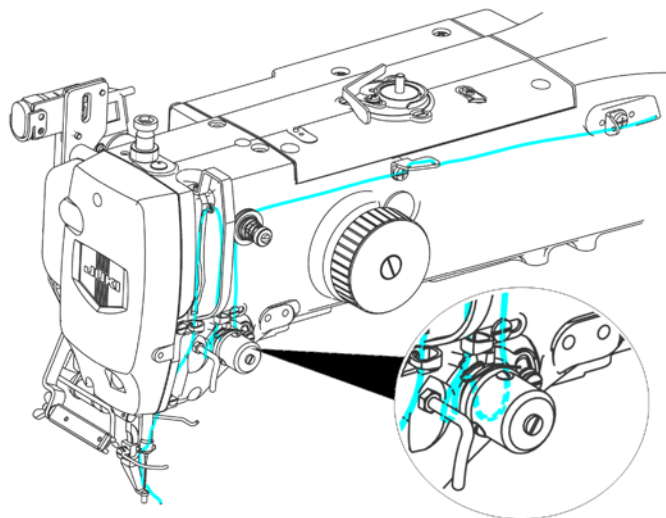


4-4. Installing and removing the bobbin case



WARNING :

Turn OFF the power before starting the work so as to prevent accidents caused by abrupt start of the sewing machine.

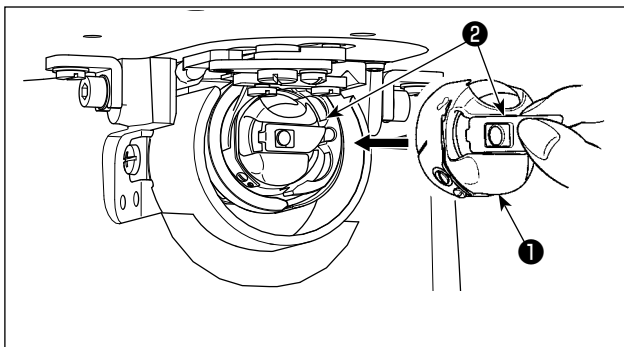

- 1) Open hook cover. (Refer to “III-1-8. Cleaning the inside of the throat plate auxiliary cover” p.114 .)
- 2) Raise latch ② of bobbin case ①, and remove the bobbin case.
- 3) When entering bobbin case, insert it with the latch tilted until "click" sounds.




If it is not fully inserted, bobbin case ① may slip off during sewing.

4-5. Installing the bobbin



WARNING :

Turn OFF the power before starting the work so as to prevent accidents caused by abrupt start of the sewing machine.

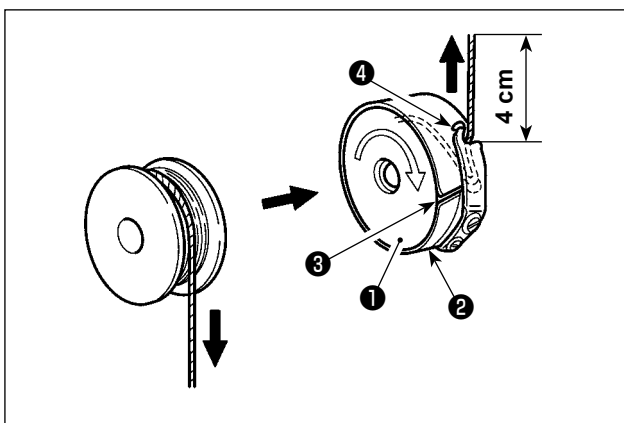


- 1) Set the bobbin ① into bobbin case ② in the direction shown in the figure.
- 2) Pass the thread through thread slit ③ of bobbin case ②, and pull the thread as it is. By so doing, the thread will pass under the tension spring and be pulled out from thread hole ④.
- 3) Pull out the thread by 4 cm from thread opening ④.



If the bobbin is installed in the bobbin case orienting the reverse direction, the bobbin thread pulling out will result in an inconsistent state.

4-6. Adjusting the thread tension

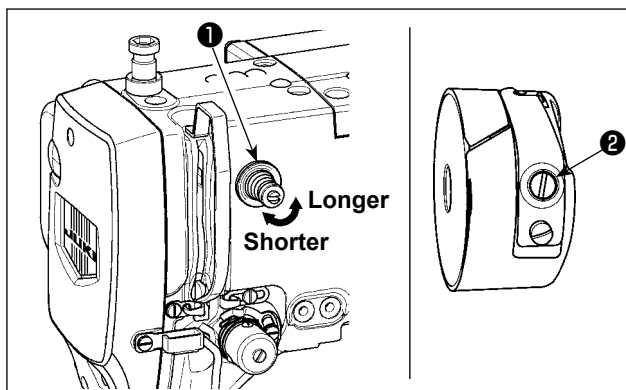


If thread tension controller No. 1 **1** is turned clockwise, the length of remaining thread on the needle after thread trimming will be shorter. If it is turned counterclockwise, the length will be longer.

Shorten the length to an extent that the thread is not slipped off.

Adjust needle thread tension from the operation panel and bobbin thread tension with **2**.

Adjusting the needle thread tension

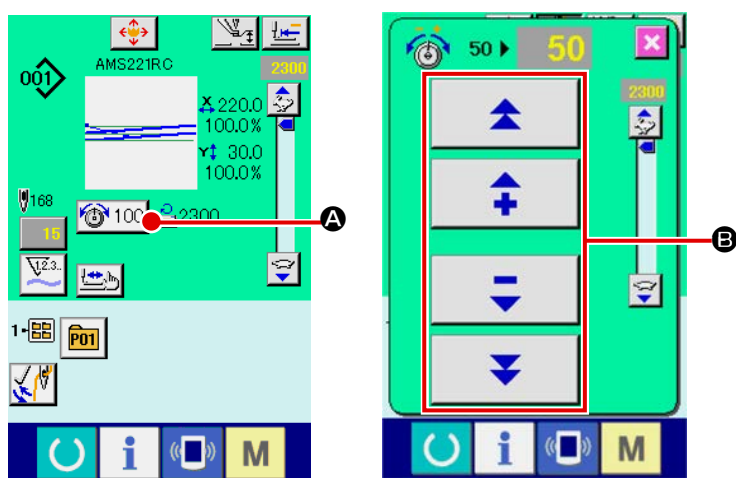

1) Select THREAD TENSION button **A** in the sewing screen.

2) Set a needle thread tension using PLUS/MINUS (+/-) button **B**. There is a setting range of 0 to 200. When the set value is increased, the tension becomes higher.


* When the set value is 50 at the time of standard delivery, the thread tension is adjusted so that H type is 2.35N (spun thread #50).

(When thread tension No. 1 is released)



4-7. Intermediate presser height



1. When raising the intermediate presser height, turn the pulley by hand to lower the needle bar, and confirm that the needle bar does not interfere with the intermediate presser. (When using DP X 5 needle, use the sewing machine with the height of 3.5 mm or less.)
2. Take care not to get your hands and fingers caught in the feeding frame or intermediate presser.

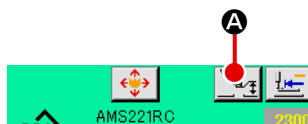


Press INTERMEDIATE PRESSER SETTING button **A** and adjust with TEN keys **B** so that the clearance between the bottom end of intermediate presser and the cloth is 0.5 mm (thickness of thread used).

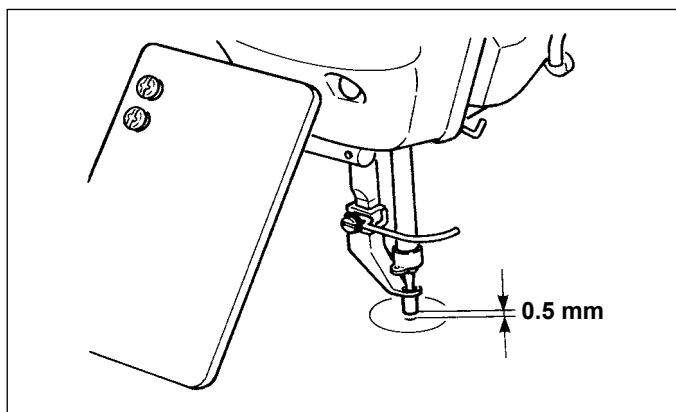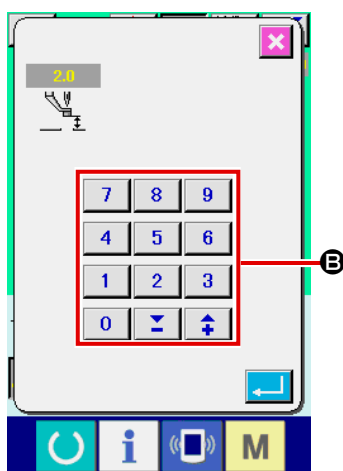

1. Setting range of the intermediate presser is up to the standard of 3.5 mm. However, when using DP X 17 needle for H type or the like, the setting range can be changed up to max. 7 mm with memory switch **U012**.
2. When increasing the height of intermediate presser or making the needle size thicker, confirm the clearance between the wiper and the components. Wiper cannot be used unless the clearance is secured. Turn OFF the wiper switch. Besides, note that the wiper is set so as to sweep at the position where the intermediate presser is in the lowest position in spite of the setting of intermediate presser height at the time of delivery. (Memory switch **U105**)

4-8. Adjusting the thread take-up spring

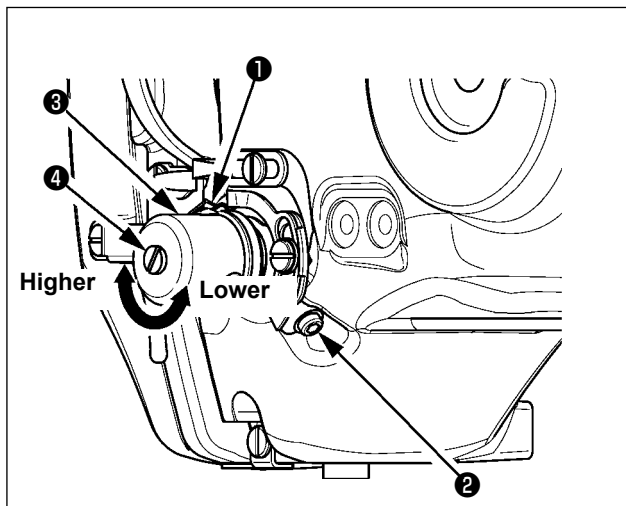


- 1) Adjusting the stroke
Loosen setscrew **2**, and turn thread tension asm. **3**.
Turning it clockwise will increase the moving amount and the thread drawing amount will increase.
- 2) Adjusting the pressure
To change the pressure of the thread take-up spring **1**, insert a thin screwdriver into the slot of thread tension post **4** while screw **2** is tightened, and turn it. Turning it clockwise will increase the pressure of the thread take-up spring. Turning it counterclockwise will decrease the pressure.

5. OPERATION OF THE SEWING MACHINE

5-1. Sewing

The feeding frame shown here is intended only to give an image. This feeding frame is not included with shipment.


2P pedal

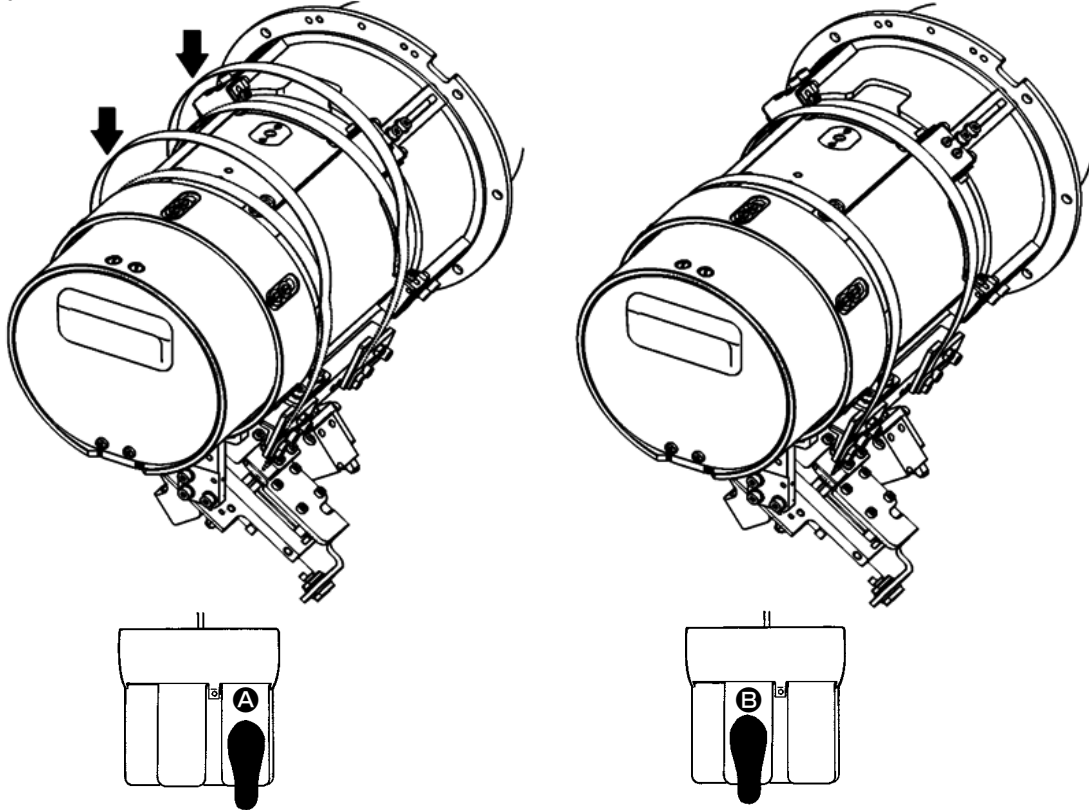

[In case of 2P pedal]

- 1) Set a workpiece on the sewing machine.
- 2) Depress the pedal switch **A**, and the feeding frame will come down. Depress it again, and the feeding frame will go up.
- 3) Depress the pedal switch **B** after the feeding frame has come down and the sewing machine will start sewing.
- 4) After the sewing machine completes sewing, the needle point will return to the start point and the feeding frame will go up.


5-2. Adjusting the wiper

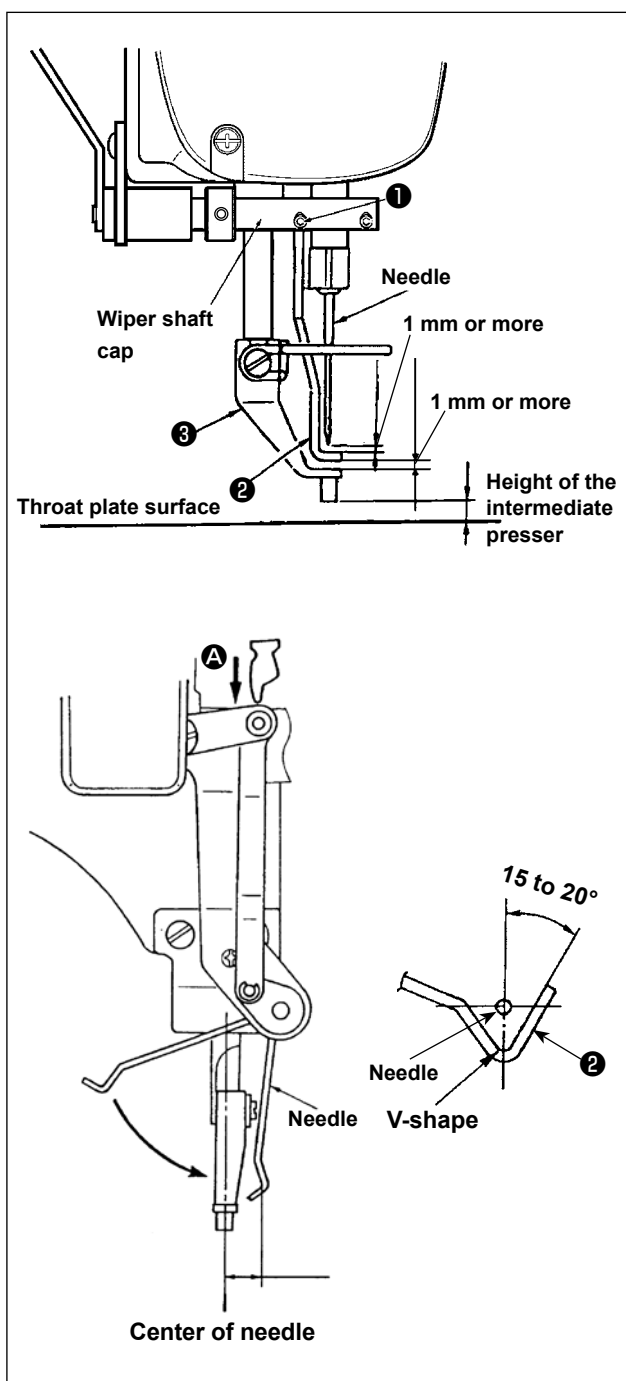

1) Lower the intermediate presser when the sewing machine has stopped after thread trimming and push wiper link part **A** to the halfway point to place wiper **2** under intermediate presser **3**. At this time, secure the wiper with wiper setscrew **1** so that a clearance of 1 mm or more is provided between the wiper and the needle tip as shown in the figure on the left.

2) The angle of the wiper tip should be 15° to 20° when it passes the needle tip. Adjust the clearance provided between the center of the needle and the inside of the V-shape part of the wiper when you push the wiper link part **A** to 10 mm.

5-3. How to replace the needle hole guide

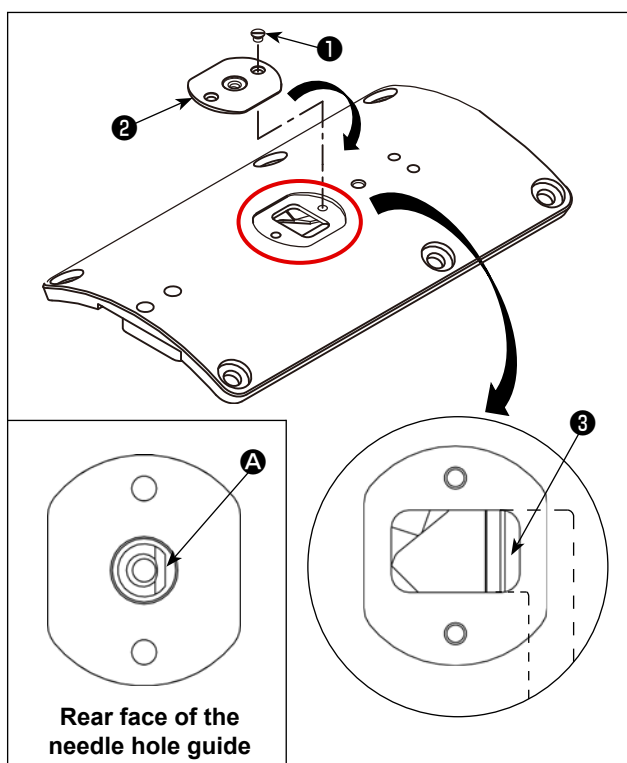


- 1) Remove screws **1** (two pieces) to remove the old needle hole guide.
- 2) Replace the old needle hole guide with a new needle hole guide **2**. After the replacement, tighten screws **1**.



Side A of the needle hole guide should face counter knife 3.


5-4. Replacing the presser device

The feeding frame shown here is intended only to give an image. This feeding frame is not included with shipment.

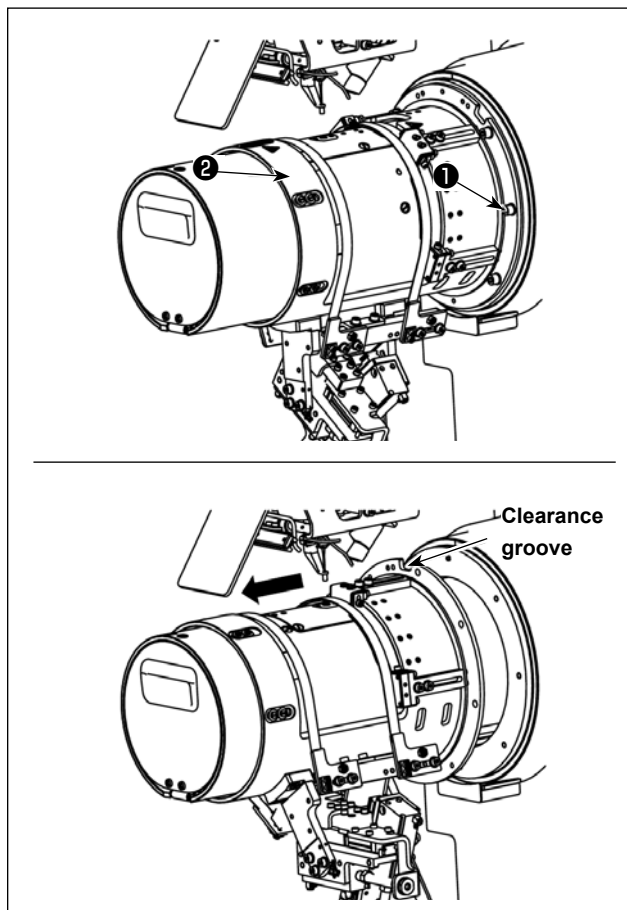


Removing the presser device

- 1) Remove setscrew **1**.
- 2) Rotate the groove of the presser device **2** upward to remove it toward you.

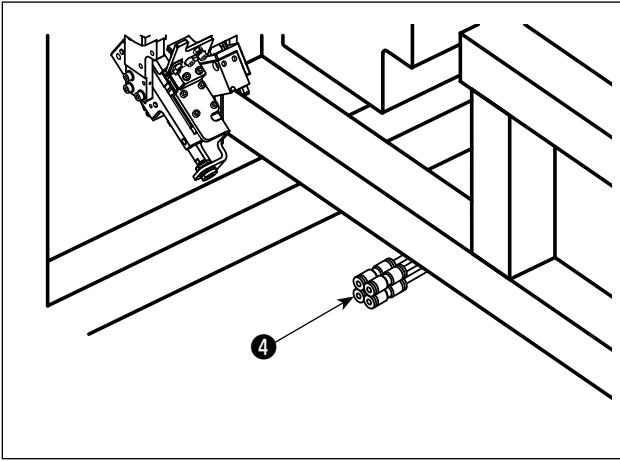


- 3) Disconnecting the air tube
Remove the air tube from the four-straight union
④.

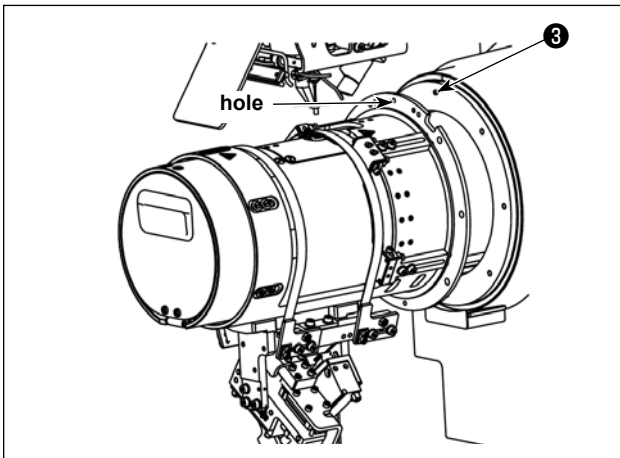

Installing the presser device



- 1) Align the hole in the presser device ② with pin ③.
2) Tighten setscrew ①.

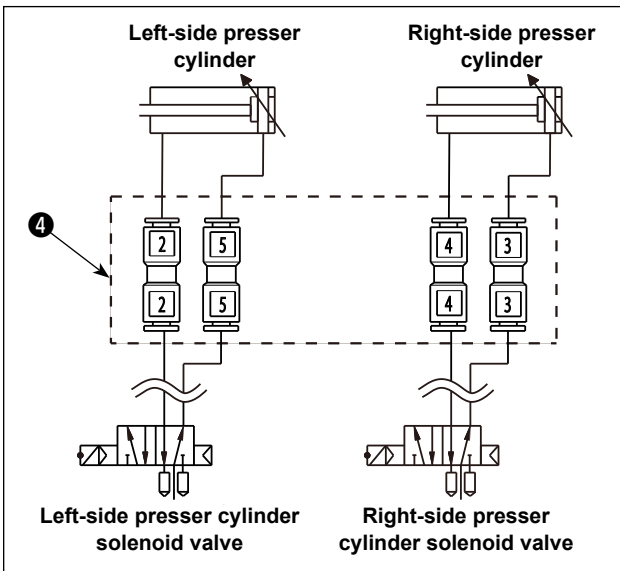

- 3) Connecting the air tube
Connect the air tube to four-straight union ④ according to the figure on the left, while paying attention to the numbers on the marks.

5-5. Information related to the making of the presser frame

If the sewing machine is not provided with the standard presser device, make a new presser frame on the flange part of the existing presser frame (including the inner diameter part of the flange), by referring to the following flange shape dimensions, in order to install another presser device.

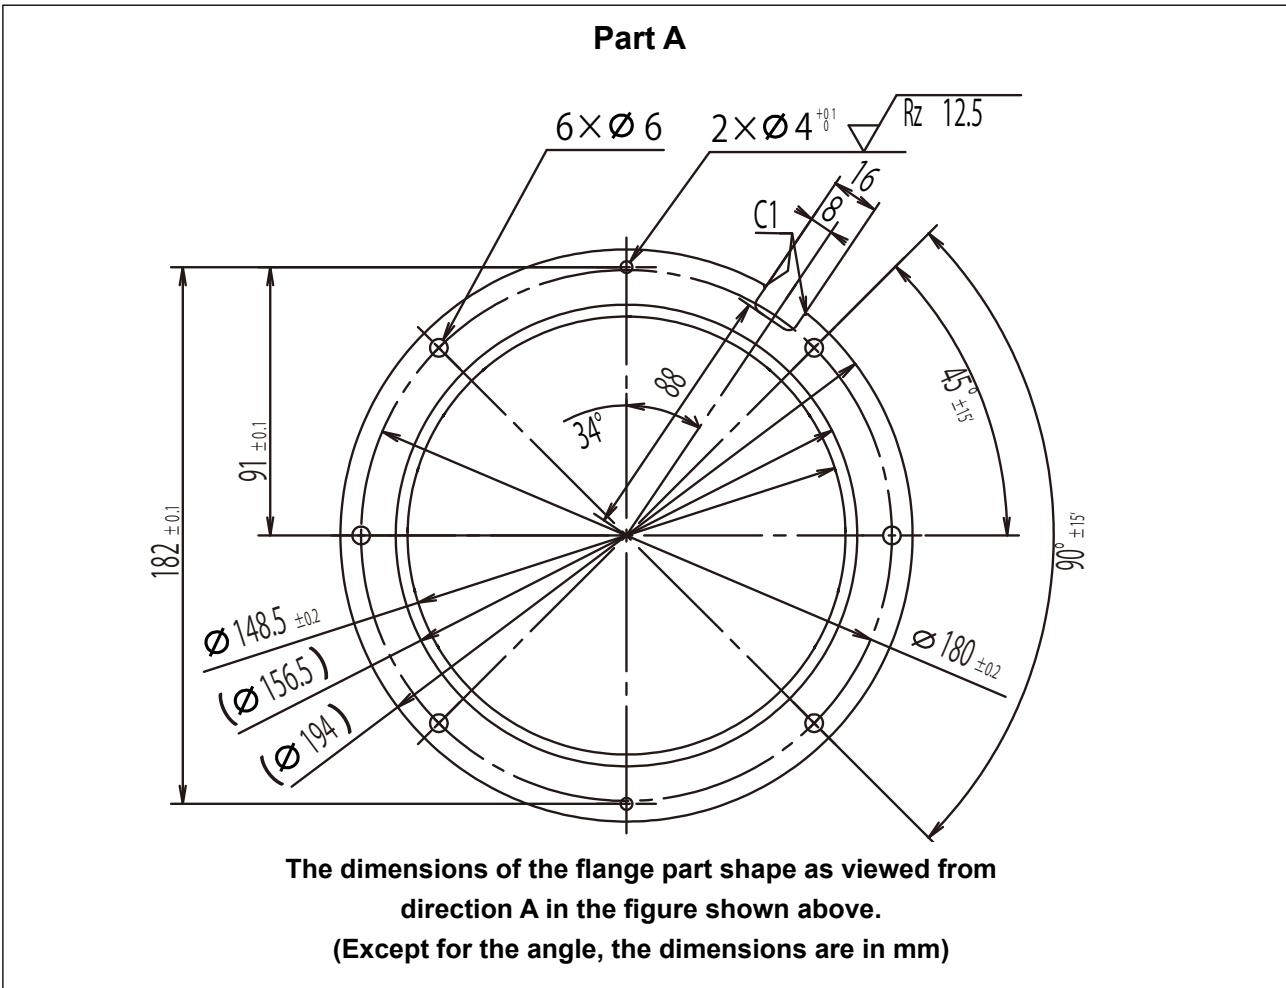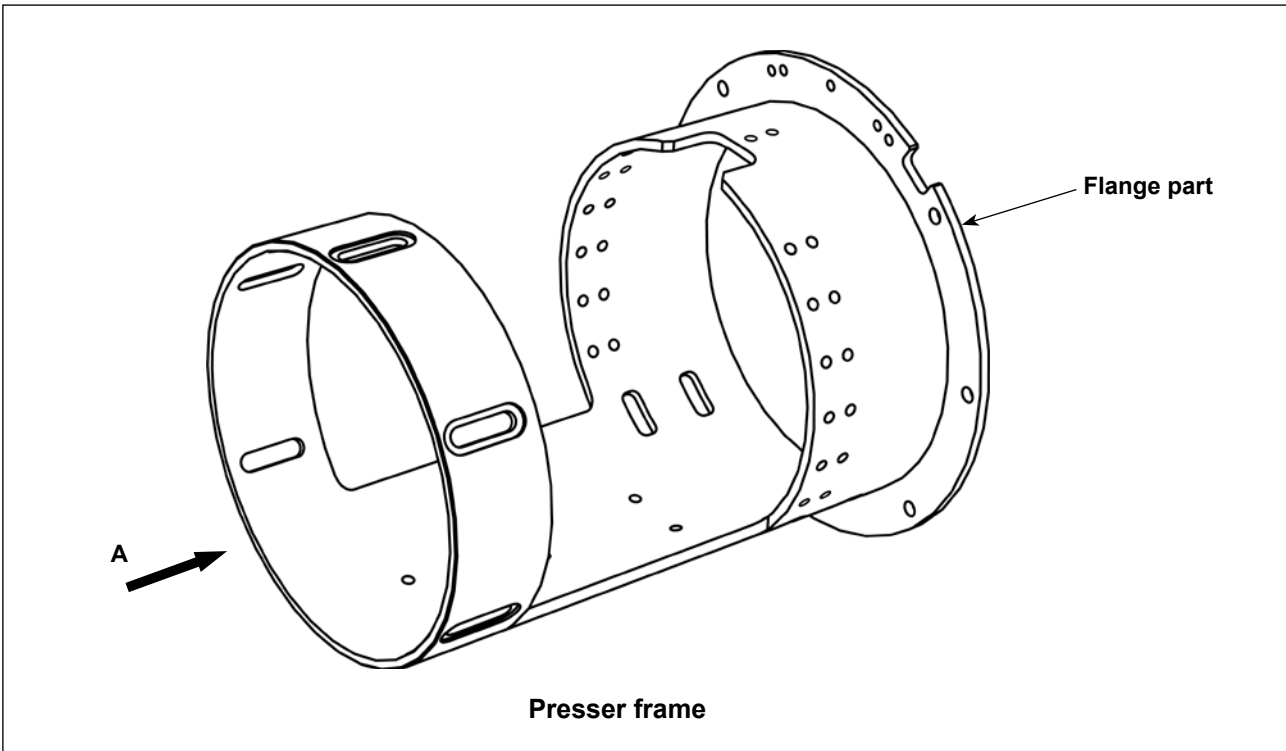

II. OPERATION SECTION (WITH REGARD TO THE PANEL)

1. PREFACE

* Service patterns are stored in the main body of the sewing machine.

X 220 mm, Y 30 mm, pitch 3 mm
Pattern No. 001

1) Kind of sewing data handled with IP-420

Pattern name	Description
Users' pattern	Pattern that can be stored in the body. Max. 999 patterns can be registered.
Vector format data	File that extension is ".VDT" Read from media. Max. 999 patterns can be used.
M3 data	Pattern data of AMS-D series Used by copying from floppy disk of AMS-D series to media. Max. 999 patterns can be used.
Sewing standard format	File that extension is ".DAT" Read from media. Max. 999 patterns can be used.

2) Using the data (M3 data) of AMS-D series with AMS-221RCHS

There are two ways to use M3 data with AMS-221RCHS.

① Reading by using IP-420

Use PC (personal computer) and copy file (¥AMS¥AMS00xxx.M3) of M3 from floppy disk of AMS-D to ¥AMS of media. Insert the media to IP-420, and select Pattern No.xxx from M3 data.

② Changing to vector format data using PM-1


Change to the vector format data with PM-1. (For the details, refer to Help of PM-1.)

Copy the changed vector format data to ¥VDATA folder of the media.

Insert the media to IP-420 and select Pattern No.

3) Folder structure of the media


Store each file in the directories below of the media.

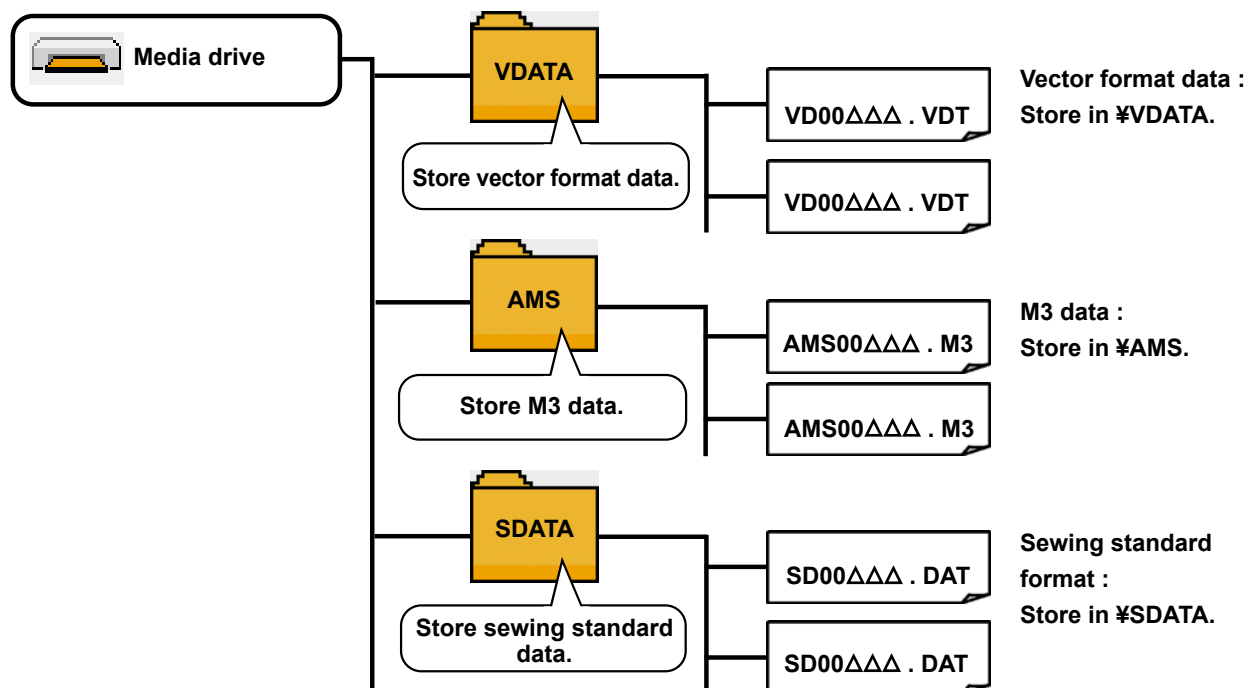

Data that are not stored in the directories above cannot be read. So, be careful.

4) CompactFlash (TM)

■ Inserting the CompactFlash (TM)

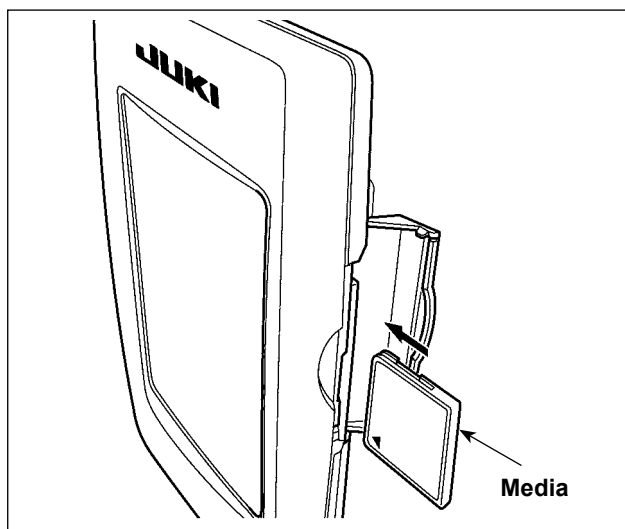


- 1) Turn the label side of the CompactFlash(TM) to this side (place the notch of the edge to the rear.) and insert the part that has a small hole into the panel.
- 2) After completion of setting of the media, close the cover. By closing the cover, it is possible to access. If the media and the cover come in contact with each other and the cover is not closed, check the following matters.
 - Check that the media is securely pressed until it goes no further.
 - Check that the inserting direction of the media is proper.



1. When the inserting direction is wrong, panel or media may be damaged.
2. Do not insert any item other than the CompactFlash (TM).
3. The media slot in the IP-420 accommodates to the CompactFlash (TM) of 2 GB or less.
4. The media slot in the IP-420 supports the FAT16 which is the format of the CompactFlash (TM). FAT32 is not supported.
5. Be sure to use the CompactFlash (TM) which is formatted with IP-420. For the formatting procedure of the CompactFlash (TM), see [“II-2-28. Performing formatting of the media” p.85](#).

■ Removing the CompactFlash (TM)

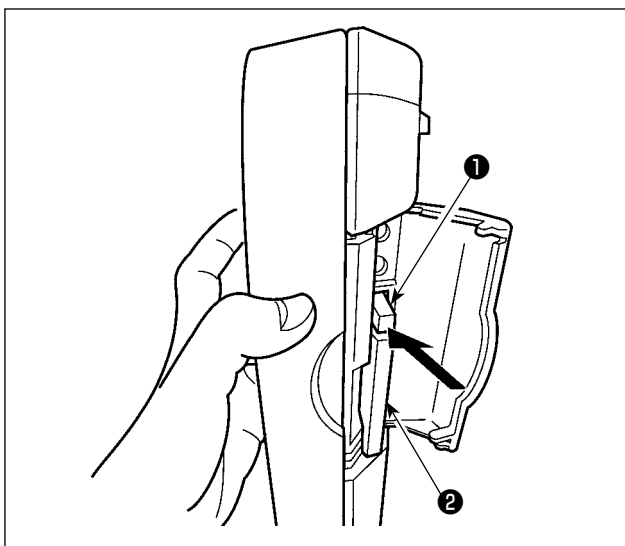

- 1) Hold the panel by hand, open the cover, and press the media ② removing lever ①. The media is eject.




When the lever ① is strongly pressed, the media ② may be broken by protruding and falling.

- 2) When the media ② is drawn out as it is, removing is completed.

5) USB port

■ Inserting a device into the USB port

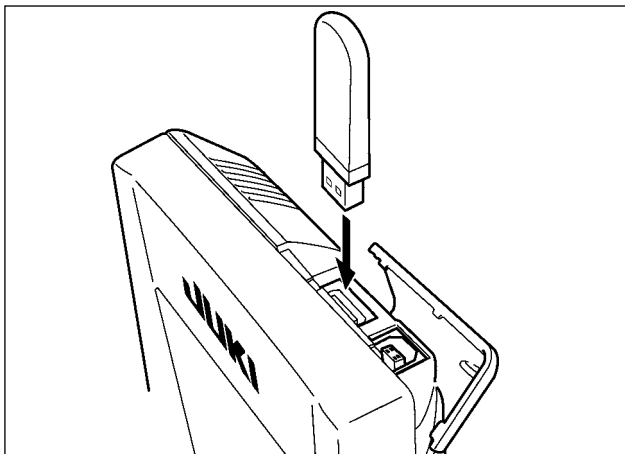


Slide the top cover and insert the USB device into the USB port. Then, copy data to be used from the USB device onto the main body.

After completion of copying the data, remove the USB device.



To protect the USB terminal, do not perform sewing by 10 times or more with the USB thumb drive connected to the sewing machine.

■ Disconnecting a device from the USB port

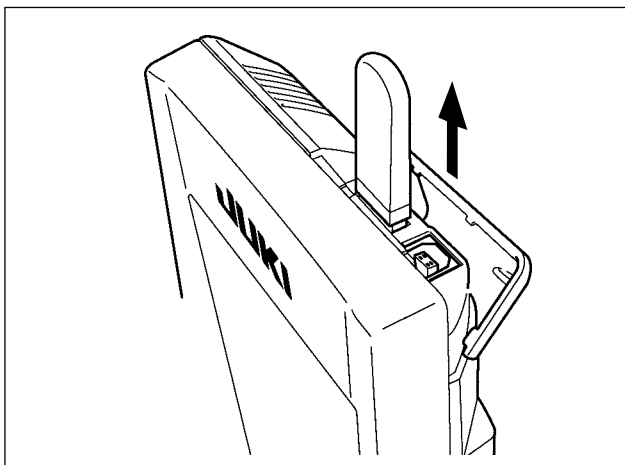

Remove the USB device. Put the cover back in place.

Cautions when using the media



- Do not wet or touch it with wet hands. Fire or electric shock will be caused.
- Do not bend, or apply strong force or shock to it.
- Never perform disassembling or remodeling of it.
- Do not put the metal to the contact part of it. Data may be disappeared.
- Avoid storing or using it in the places below.

Place of high temperature or humidity / Place of dew condensation /

Place with much dust / Place where static electricity or electrical noise is likely to occur

① Precautions to be taken when handling USB devices

- Do not leave the USB device or USB cable connected to the USB port while the sewing machine is in operation. The machine vibration can damage the port section resulting in loss of data stored on the USB device or breakage of the USB device or sewing machine.
- Do not insert/remove a USB device during reading/writing a program or sewing data. It may cause data breakage or malfunction.
- When the storage space of a USB device is partitioned, only one partition is accessible.
- Some type of the USB device may not be properly recognized by this sewing machine.
- JUKI does not compensate for loss of data stored on the USB device caused by using it with this sewing machine.
- When the panel displays the communication screen or pattern data list, the USB drive is not recognized even if you insert a medium into the slot.
- For USB devices and media such as CF cards, only one device/medium should be basically connected/inserted to/into the sewing machine. When two or more devices/media are connected/inserted, the machine will only recognize one of them. Refer to the USB specifications.
- Insert the USB connector into the USB terminal on the IP panel until it will go no further.
- Do not turn the power OFF while the data on the USB flash drive is being accessed.


② USB specifications

- Conform to USB 1.1 standard
- Applicable devices *1___ Storage devices such as USB memory, USB hub, FDD and card reader
- Not-applicable devices___ CD drive, DVD drive, MO drive, tape drive, etc.
- Format supported_____ FD (floppy disk) FAT 12
Others (USB memory, etc.), FAT 12, FAT 16, FAT 32
- Applicable medium size _FD (floppy disk) 1.44MB, 720kB
Others (USB memory, etc.), 4.1MB ~ (2TB)
- Recognition of drives ___ For external devices such as a USB device, the device which is recognized first is accessed. However, when a medium is connected to the built-in media slot, the access to that medium will be given the highest priority. (Example: If a medium is inserted into the media slot even when the USB memory has already been connected to the USB port, the medium will be accessed.)
- Restriction on connection _ Max. 10 devices (When the number of storage devices connected to the sewing machine has exceeded the maximum number, the 11th storage device and beyond will not be recognized unless they are once disconnected and re-connected.)
- Consumption current ___ The rated consumption current of the applicable USB devices is 500 mA at the maximum.





*1: JUKI does not guarantee operation of all applicable devices. Some device may not operate due to a compatibility problem.

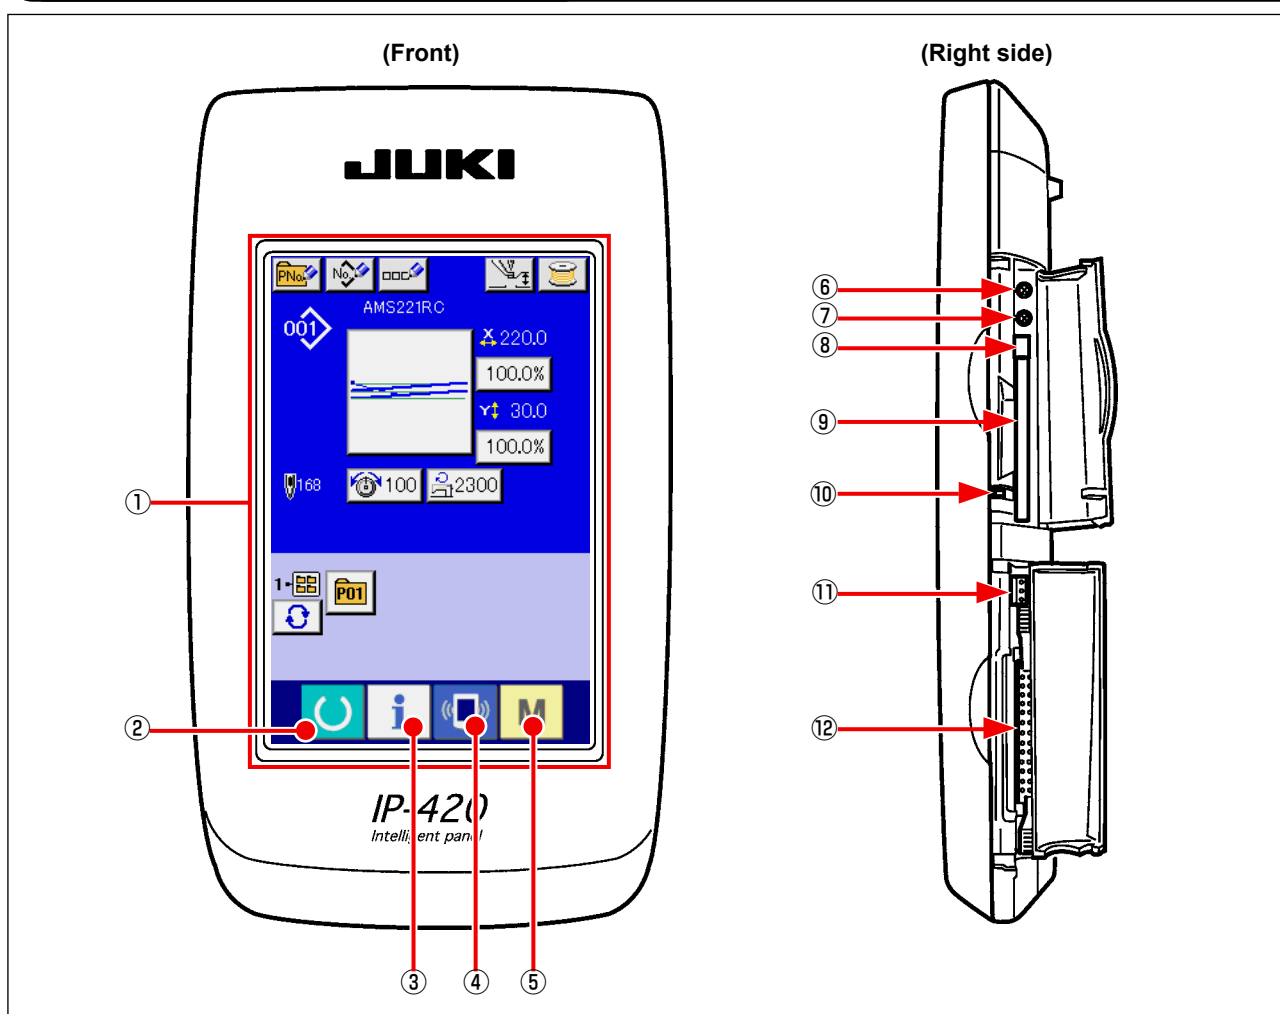2. WHEN USING IP-420

2-1. Name of each section of IP-420



① Touch panel · LCD display section

- | | | | |
|---|---|---|---|
| ② |  READY key | → | Changeover of the data input screen and the sewing screen can be performed. |
| ③ |  INFORMATION key | → | Changeover of the data input screen and the information screen can be performed. |
| ④ |  COMMUNICATION key | → | Changeover of the data input screen and the communication screen can be performed. |
| ⑤ |  MODE key | → | Changeover of the data input screen and the mode changeover screen which performs various detail settings can be performed. |

- ⑥ Contrast control
- ⑦ Brightness control
- ⑧ CompactFlash (TM) eject button
- ⑨ CompactFlash (TM) slot
- ⑩ Cover detection switch
- ⑪ Connector for external switch
- ⑫ Connector for control-box connection

2-2. Buttons to be used in common

The buttons which perform common operations in each screen of IP-420 are as follows :



CANCEL button

→ This button closes the pop-up screen.
In case of the data change screen, the data being changed can be cancelled.



ENTER button

→ This button determines the changed data.



UP SCROLL button

→ This button scrolls the button or the display in the upward direction.



DOWN SCROLL button

→ This button scrolls the button or the display in the downward direction.



RESET button

→ This button performs the release of error.



NUMERAL INPUT button

→ This button displays ten keys and input of numerals can be performed.



CHARACTER INPUT button

→ This button displays the character input screen.
→ Refer to **"II-2-13. Performing new register of users' pattern" p.42.**



RESSER LOWERING button

→ Presser is lowered, and the presser lowering screen is displayed. To lift presser, press presser lift button displayed in the presser lowering screen.



Bobbin winder button

→ Bobbin thread winding is performed.
→ Refer to **"II-2-11. Winding bobbin thread" p.38.**

2-3. Basic operation of IP-420




① Turn ON the power switch

When the power is turned ON first, the language selection screen is displayed. Set the language you use. (It is possible to change with Memory switch **U500**.)




When ending the selection screen with **CANCEL** button or **ENTER** button without performing the language selection, the language selection screen is displayed whenever the power is turned ON.

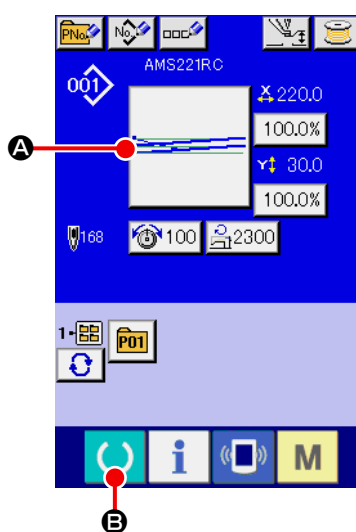


② Select the pattern No. you desire to sew.

When the power is turned ON, the data input screen is displayed. Pattern No. button **A** which is selected at present is displayed in the center of the screen. Press the button to select the sewing shape. For selecting procedure of the sewing shape, refer to “**II-2-5. Performing sewing shape selection**” p.28.

When **READY** key **B** is pressed, the back color of LCD display is changed to green, and the sewing machine is set to the sewing possible state.

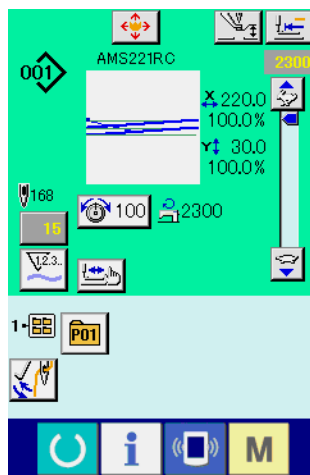

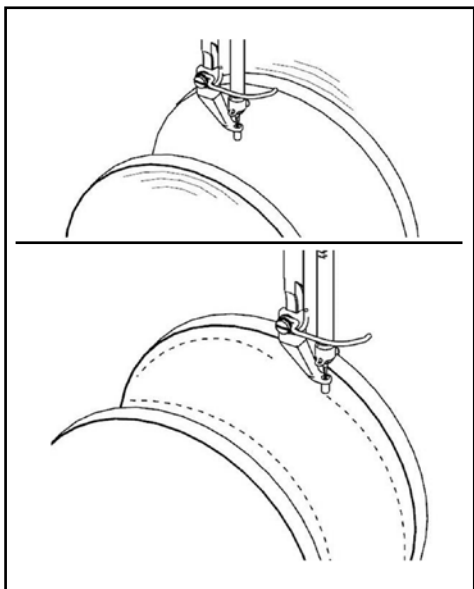


③ Start sewing.

Start sewing referring to **"I-5-1. Sewing" p.11.**


- * For the screen, refer to **"II-2-4. LCD display section at the time of sewing shape selection" p.24.**
- * The image of the side face is given only for the illustrative purpose.







1. When using the exclusive presser, confirm the pattern shape for safety's sake. Should the pattern protrude from the feeding frame, needle interferes with the feeding frame during sewing, and there is a danger of needle breakage or the like.
2. When the presser is going up, be careful that your fingers are caught with the presser since the presser moves after coming down.
3. When turning OFF the power without pressing READY key , the set value of "Pattern No.", "X enlargement/reduction ratio", "Y enlargement/reduction ratio", "Max. sewing speed", "Thread tension" or "Intermediate presser height" is not stored in memory.

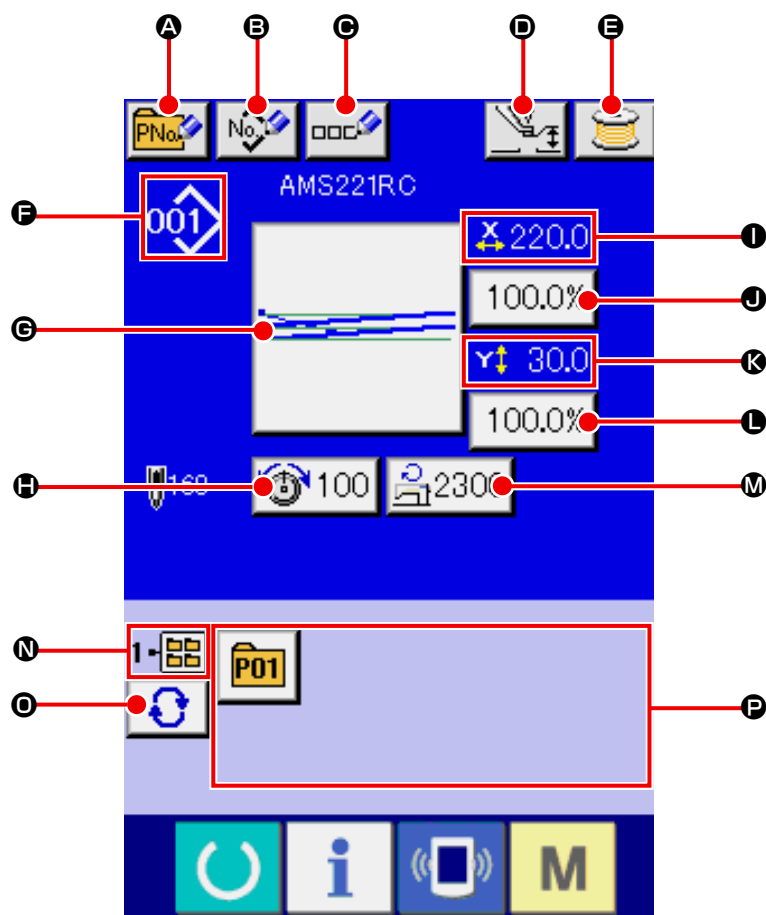2-4. LCD display section at the time of sewing shape selection


(1) Sewing shape data input screen








	Button and display	Description
A	PATTERN BUTTON NEW REGISTER button	Pattern button new register screen is displayed. → Refer to “II-2-15. Performing new register of pattern button” p.44.
B	USERS' PATTERN NEW REGISTER button	Users' pattern new register screen is displayed. → Refer to “II-2-13. Performing new register of users' pattern” p.42.
C	PATTERN BUTTON NAME SETTING button	Pattern button name input screen is displayed. → Refer to “II-2-14. Naming users' pattern” p.43.
D	INTERMEDIATE PRESSER SETTING button	Intermediate presser is lowered and the intermediate presser reference value change screen is displayed. → Refer to “II-2-6. Changing item data” p.30.
E	BOBBIN WINDER button	Bobbin thread can be wound. → Refer to “II-2-11. Winding bobbin thread” p.38.

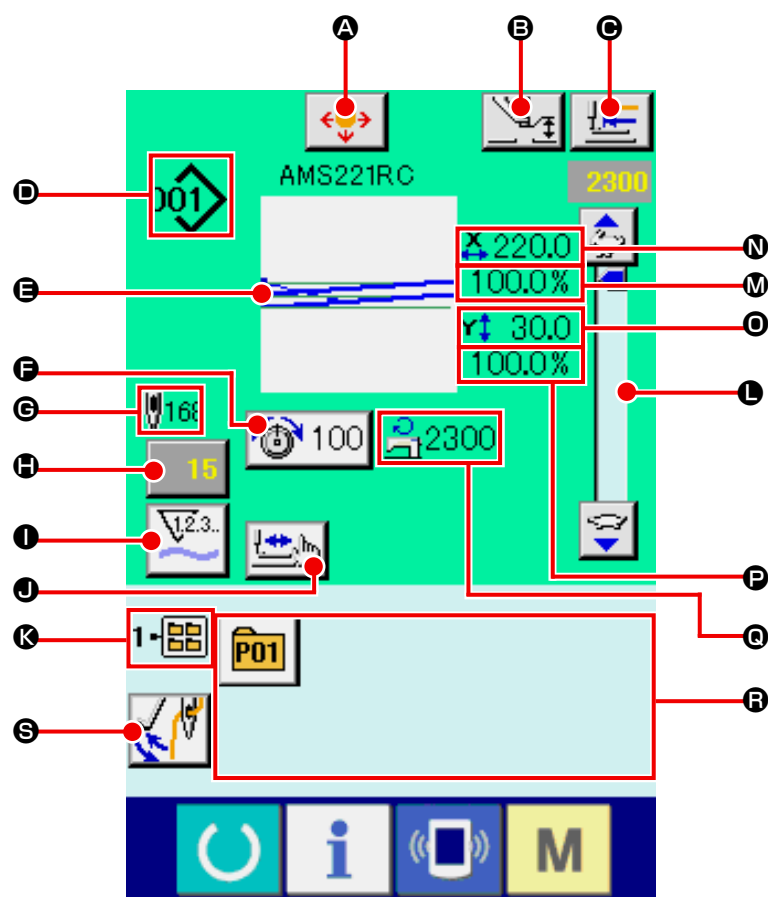	Button and display	Description
F	SEWING SHAPE NO. display	<p>Kind and No. of the sewing shape being selected at present is displayed. There are 4 kinds below of the kinds of sewing shape.</p> <p> : Users' pattern</p> <p> : Vector format data</p> <p> : M3 data</p> <p> : Sewing standard format</p> <p>* Be sure to use the media that has been formatted with IP-420. For the formatting procedure of the media, refer to “II-2-28. Performing formatting of the media” p.85.</p>
G	SEWING SHAPE SELECTION button	<p>Sewing shape being selected at present is displayed on this button and when the button is pressed, the sewing shape selection screen is displayed. → Refer to “II-2-5. Performing sewing shape selection” p.28.</p>
H	NEEDLE THREAD TENSION SETTING button	<p>Needle thread tension value which is set to the pattern data being selected at present is displayed on this button and when the button is pressed, the item data change screen is displayed. → Refer to “II-2-6. Changing item data” p.30.</p>
I	X ACTUAL SIZE VALUE display	<p>Actual size value in X direction of sewing shape being selected at present is displayed. When the actual size value input is selected by setting memory switch U064 , X actual size value setting button is displayed. → Refer to “II-2-6. Changing item data” p.30.</p>
J	X SCALE RATE SETTING button	<p>Scale rate in X direction of sewing shape being selected at present is displayed on this button. When the scale input is set to non-selection by setting memory switch U064 , the button goes out and the X scale is displayed. → Refer to “II-2-6. Changing item data” p.30.</p>
K	Y ACTUAL SIZE VALUE display	<p>Actual size value in Y direction of sewing shape being selected at present is displayed. When the actual size value input is selected by setting memory switch U064 , Y actual size value setting button is displayed. → Refer to “II-2-6. Changing item data” p.30.</p>
L	Y SCALE RATE SETTING button	<p>Scale rate in Y direction of sewing shape being selected at present is displayed on this button. When the scale input is set to non-selection by setting memory switch U064 , the button goes out and the Y scale is displayed. → Refer to “II-2-6. Changing item data” p.30.</p>
M	MAX. SPEED LIMITATION	<p>Maximum speed limitation which is set at present is displayed on this button and when the button is pressed, the item data change screen is displayed. (However, maximum speed limitation which is displayed is different from the maximum number of revolutions in the pattern.) → Refer to “II-2-6. Changing item data” p.30.</p>
N	FOLDER NO. display	<p>Pattern register button which is displayed indicates the folder No. which has been stored.</p>
O	FOLDER SELECTION button	<p>Folders to display the patterns are displayed in order.</p>
P	PATTERN REGISTER button	<p>PATTERN REGISTER buttons stored in N FOLDER NO display are displayed. → Refer to “II-2-14. Naming users' pattern” p.43. * This button is not displayed unless the new register to the pattern button is performed.</p>


(2) Sewing screen




	Button and display	Description
A	PATTERN BUTTON MOVE button	The pattern button move screen is displayed. →Refer to “II-2-10. When setting of sewing product is difficult because of interruption of needle tip” p.37.
B	INTERMEDIATE PRESSER SETTING button	Intermediate presser is lowered and the intermediate presser reference value change screen is displayed. → Refer to “II-2-6. Changing item data” p.30.
C	RETURN TO ORIGIN button	This button returns the presser to the start of sewing and raises the presser at the time of temporary stop.
D	SEWING SHAPE NO. display	<p>Kind and No. of the sewing shape being selected at present is displayed. There are 4 kinds below of the kinds of sewing shape.</p> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">001</div> : Users' pattern </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">VDT</div> : Vector format data </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">M3</div> : M3 data </div> <div style="display: flex; align-items: center;"> <div style="border: 1px solid black; padding: 2px; margin-right: 5px;">DAT</div> : Sewing standard format </div> <p>* Be sure to use the media that has been formatted with IP-420. For the formatting procedure of the media, refer to “II-2-28. Performing formatting of the media” p.85.</p>

	Button and display	Description
E	SEWING SHAPE display	Sewing shape being selected at present is displayed.
F	NEEDLE THREAD TENSION SETTING button	Needle thread tension value which is set to the pattern data being selected at present is displayed on this button and when the button is pressed, the item data change screen is displayed. → Refer to "II-2-6. Changing item data" p.30.
G	TOTAL NUMBER OF STITCHES OF SEWING SHAPE display	Total number of stitches of the sewing shape being selected at present is displayed.
H	COUNTER VALUE CHANGE button	Existing counter value is displayed on this button. When the button is pressed, the counter value change screen is displayed. → Refer to "II-2-12. Using counter" p.39.
I	COUNTER CHANGE OVER button	The counter display can be changed over among the sewing counter, No. of pcs. counter and bobbin counter. Two or more types of counters should be placed in ON. If not, the counter selection cannot be carried out. This pictograph on this button indicates the image of the selected type of the counter. <div style="display: flex; align-items: center; margin-bottom: 5px;">  : Sewing counter </div> <div style="display: flex; align-items: center; margin-bottom: 5px;">  : No. of pcs. Counter </div> <div style="display: flex; align-items: center;">  : Bobbin counter </div> → Refer to "II-2-12. Using counter" p.39.
J	STEP SEWING button	Step sewing screen is displayed. Checking of the pattern shape can be performed. → Refer "II-2-7. Checking pattern shape" p.32.
K	FOLDER NO. display	Pattern register button which is displayed indicates the folder No. which has been stored.
L	SPEED variable resistor	Number of rotations of the sewing machine can be changed.
M	X SCALE RATE display	Scale rate in X direction of sewing shape being selected is displayed.
N	X ACTUAL SIZE VALUE display	Actual size value in X direction of sewing shape being selected is displayed.
O	Y ACTUAL SIZE VALUE display	Actual size value in Y direction of sewing shape being selected is displayed.
P	Y SCALE RATE display	Scale rate in Y direction of sewing shape being selected is displayed.
Q	MAX. SPEED LIMITATION display	Maximum speed limitation which is set at present is displayed. However, the display is different from the maximum number of revolutions in the pattern. However, the display is different from the maximum number of revolutions in the pattern.
R	PATTERN REGISTER button	Pattern register buttons stored in K FOLDER NO. display are displayed. → Refer to "II-2-15. Performing new register of pattern button" p.44. * This button is not displayed in the initial state.
S	WIPER CHANGEOVER button	Enable/disable of the wiper output is selected. <div style="display: flex; align-items: center; margin-bottom: 5px;">  : The wiper output is disabled. </div> <div style="display: flex; align-items: center;">  : The wiper output is enabled. </div>

2-5. Performing sewing shape selection

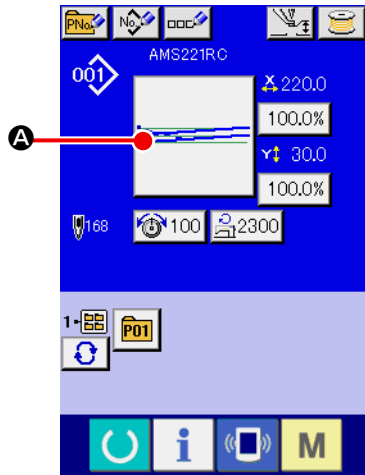

① Display the data input screen.

Only in case of the data input screen (blue), the selection of sewing shape can be performed. In case of the sewing screen (green), press READY key  and display the data input screen (blue).

② Call the sewing shape selection screen.


Press SEWING SHAPE button **A** and the sewing shape selection screen is displayed.


③ Select the sewing shape.

There are 4 kinds of the sewing shape.

Press SEWING SHAPE SELECTION button  **B**.



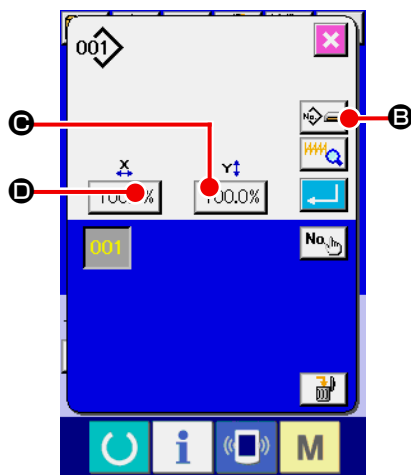

* This button is not displayed in the initial state.




When button **C** or **D**  is pressed in this screen, X or Y enlarging/reducing ratio can be changed. For the details, refer to “II-2-6. Changing item data” p.30.

④ Determine the kind of sewing shape.

There are 4 kinds below of the sewing shape. Select the kind you desire from among them.

Pictograph	Name	Maximum number of patterns
	Users' pattern	999
	Vector format data	999
	M3 data	999
	Sewing standard format	999

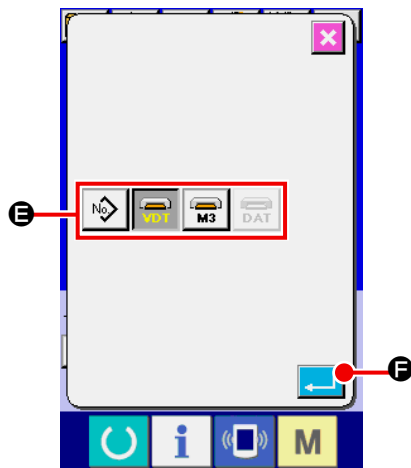


Be sure to use the media that has been formatted with IP-420.


For the formatting procedure of the media, refer to “II-2-28. Performing formatting of the media” p.85.


Select the sewing shape you desire from SEWING SHAPE SELECTION buttons **E** and press ENTER  **F** button.

The sewing shape list screen corresponding to the kind of sewing shape you selected is displayed.

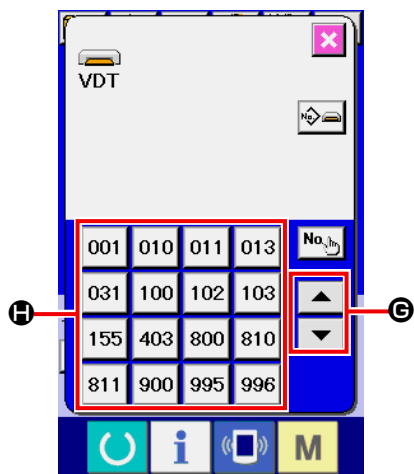


⑤ **Select the sewing shape.**

When UP or DOWN SCROLL button  **G** is pressed, the SEWING SHAPE buttons **H** are changed over in order.

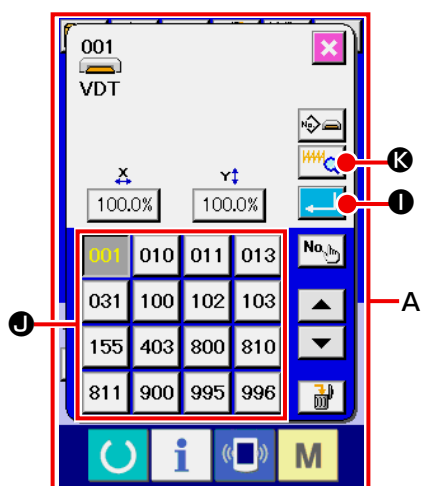



⑥ **Determine the sewing shape.**

When ENTER button  **I** is pressed, the sewing shape is determined and the data input screen is displayed.

When the sewing shape is users' pattern, the screen as **A** is displayed.

PATTERN NO. SELECTION button **I** that is registered to users' pattern is displayed. Press the button of PATTERN NO. you desire to select.

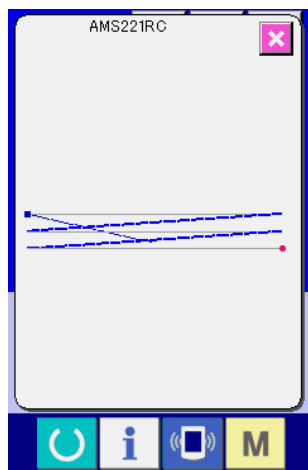


When VIEWER button  **K** is pressed, the shape of the pattern No. selected is displayed and you can confirm it.

2-6. Changing item data



WARNING :

Be sure to confirm the shape of pattern after the change of X/Y enlargement/reduction ratio. There may be a dangerous case such as needle breakage by interference of needle with the presser or the like according to the set value.

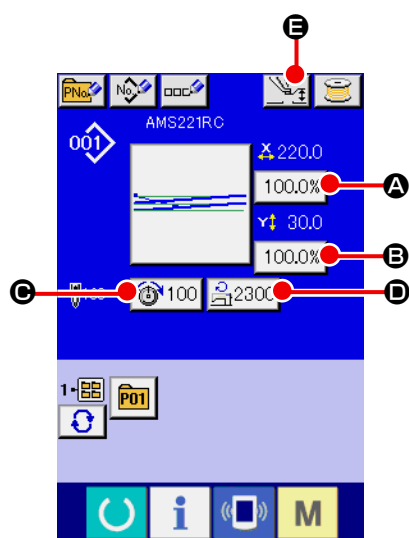

① Display the data input screen.

In case of the data input screen, the change of item data can be changed. In case of the sewing screen (green), press READY switch to display the data input screen (blue).

* The thread tension and the intermediate presser height can be changed even on the sewing screen.

② Display the item data input screen.

When the button of the item data you desire to change is pressed, the item data input screen is displayed.

Item data are 5 items below.

	Item range	Input range	Initial value
A	Scale rate in X direction	1.0 to 400.0 (%)	100.0 (%)
B	Scale rate in Y direction	1.0 to 400.0 (%)	100.0 (%)
C	Thread tension	0 to 200	Pattern set value
D	Max. speed limitation	200 to 2,300 (sti/min)	2,300 (sti/min)
E	Intermediate presser height	0.0 to 3.5 (mm) (Max 0.0 to 7.0 (mm))	Pattern set value

* Thread tension value and intermediate presser reference value will change with every pattern to be selected.

* **A** Scale rate in X direction and **B** Scale rate in Y direction can be changed to actual size value input by selection of the memory switch **U064**.

* There are two ways below to perform X/Y enlargement/reduction.


- The data already read in this data input screen can be repeatedly enlarged or reduced.
- X/Y scale rate can be set and read when selecting the pattern. See “II-2-5. Performing sewing shape selection” p.28.

* In case of the point sewing, even when increase/decrease of number of stitches is set under **U088** Enlargement and reduction function mode, enlargement and reduction can be performed with increase/decrease of pitch.

* When X/Y scale rate is individually set in case of circle or arc, or X/Y enlargement and reduction are repeated, the sewing is changed to point sewing and the shape may not be kept. Enlargement and reduction can be performed by increase/decrease of pitch. In this case, set and read X/Y scale rate in the pattern list screen.

* Max. input range and initial value of max. speed limitation **D** are determined with memory switch **U001**.

* Change of the intermediate presser height cannot be performed immediately after turning ON the power or immediately after moving from the main unit input. Use the machine after pressing READY key and performing the origin retrieval.

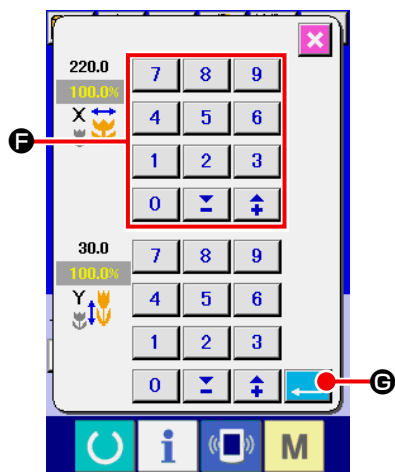

For example, input X scale rate.

Press **100.0%** **A** to display the item data input screen.

③ **Input the data.**

Input the value you desire with ten keys and + / – keys **F**.


④ **Determine the data.**


When ENTER button **G** is pressed, the data is determined.

* **For the other item data, the data can be changed by the same operation.**


* **It is possible to input X/Y value of enlargement/reduction ratio and actual size value with one screen.**



1. When turning OFF the power without pressing READY key , the set value of "Pattern No.", "X enlargement/reduction ratio", "Y enlargement/reduction ratio", "Max. sewing speed", "Thread tension" or "Intermediate presser height" is not stored in memory.
2. When operation processing cannot be performed since the reduction ratio is excessively small, E045 Pattern data error is displayed.
3. When the scale rate is changed with increase/decrease of number of stitches (pitch is fixed), mechanical control command inputted to the points other than the shape point is deleted.

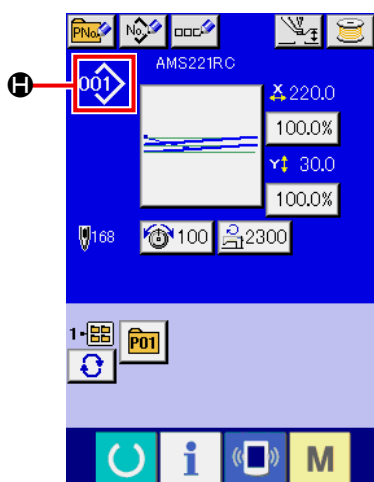

When X/Y enlargement/reduction ratio, thread tension, intermediate presser, adding/deleting of thread tension command, or adding/deleting of increase/decrease value of intermediate presser of users' pattern or media pattern is performed, the pattern kind section becomes change display **H**.

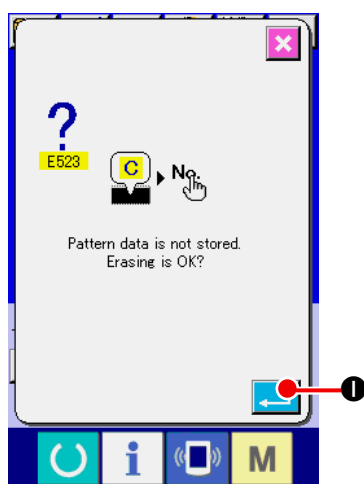

In case of change display **H**, the change confirmation screen is displayed at the time of the change of pattern.

When ENTER button **I** is pressed, the information on the current pattern is invalidated and the pattern No. is changed.


To store the changed pattern, refer to **"II-2-15. Performing new register of pattern button" p.44.**

2-7. Checking pattern shape



WARNING :

Make sure without fail of the contour of the sewing pattern after selection of the sewing pattern. If the sewing pattern extends outside the work clamp feet, the needle will interfere with the work clamp.

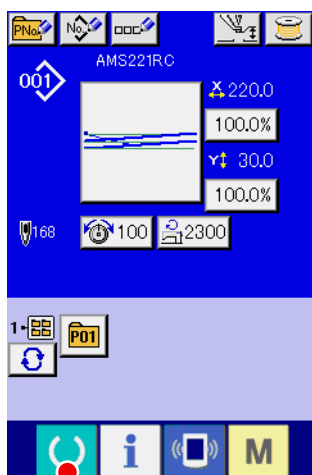

① Display the sewing screen.

Display the data input screen (blue) and press READY key

A. Then the back-light of LCD changes to green and sewing is possible. When the work clamp is in its upper position, the work clamp first comes down to its lower position and then moves to the sewing start point.



Be careful not to get your fingers caught between the work clamp and the throat plate.

② Display the step sewing screen.

When STEP SEWING button **B** is pressed, the step sewing screen is displayed.

③ Lower the presser with the foot switch.



The sewing machine does not start even when the foot switch is depressed with this mode.

④ Proceed stitching with the presser lowered.

The sewing shape is displayed at the center of the screen. The current point, sewing start position and sewing end position are respectively represented by (pink circle), (blue dot) and (pink dot).

Check the sewing shape using ONE-STITCH BACKWARD button



C and ONE-STITCH FORWARD button




D. When two or more commands have been entered, the feed position does not change but the command display **A** is moved forward and backward. When you keep pressing the ONE-STITCH FORWARD or BACKWARD button, the moving speed increases.

When the COMMAND SEARCH FORWARD button **E** is pressed, the feed automatically moves to the sewing end position.

When the COMMAND SEARCH BACKWARD button **F** is pressed, the feed automatically moves to the sewing start position.

To stop the feed, press button **C**, **D**, **E**, **F**, **G** or **H**.

When INTERMEDIATE PRESSER button **G** is pressed, the intermediate presser is raised or lowered. (This button is not displayed when MEMORY switch **U103** is set at 0 (zero).)

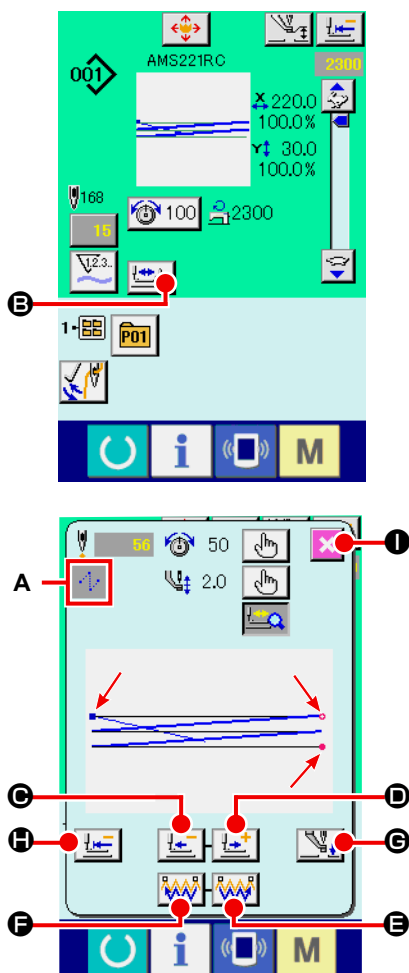


⑤ Finish checking the shape.

When PRESSER INITIAL POSITION button **H** is pressed, the work clamp moves to the sewing start position and the screen is restored to the sewing screen. When CANCEL button **I** is pressed, the screen is also restored to the sewing screen. When the work clamp does not rest at the sewing start or end position, sewing can be started by depressing the foot switch before sewing shape checking is not completed.




2-8. Performing modification of needle entry point

(1) Editing the thread tension




Press STEP SEWING button  **A** on the sewing screen to display the step sewing screen.





When it is necessary to move the feed forward or backward such as in the case of needle checking, the feed does not move unless the work clamp is lowered. Be sure to check the needle or other relevant operation after having lowered the work clamp.

The sewing shape is displayed at the center of the screen. The current point, sewing start position and sewing end position are respectively represented by  (pink circle),  (blue dot) and  (pink dot).


Press the MODE SELECT button  **B** to select the thread tension mode.


When ONE-STITCH BACKWARD button  **C** or FORWARD button  **D** is pressed, the feed (current point ) moves backward or forward by one stitch. When two or more commands have been entered, the feed position does not change but the command display **A** is moved forward and backward. When you keep pressing the button **C** or **D**, the moving speed increases.


Indicated value **B** is the absolute value (Thread tension value + Thread tension command value).


When COMMAND SEARCH FORWARD button  **E** or BACKWARD button  **F** is pressed, the feed moves forward or backward from the current point to reach the needle entry point where the first thread tension command is found.

To stop the feed, press button **C**, **D**, **E**, **F**, **G** or **H**.

When INTERMEDIATE PRESSER button  **G** is pressed, the intermediate presser is raised or lowered. (This button is not displayed when MEMORY switch **U103** is set at 0 (zero).)


When PRESSER INITIAL POSITION button  **H** is pressed, the work clamp moves to its origin and the screen is restored to the sewing screen.


When COMMAND DELETE button  **I** is pressed, the screen for deleting the command as shown in **A** is displayed.

When  **J** is pressed, the thread tension value increase/decrease input screen is displayed.


Input a desired value on the thread tension value increase/decrease input screen using numeric keypad and +/- keys **K**.

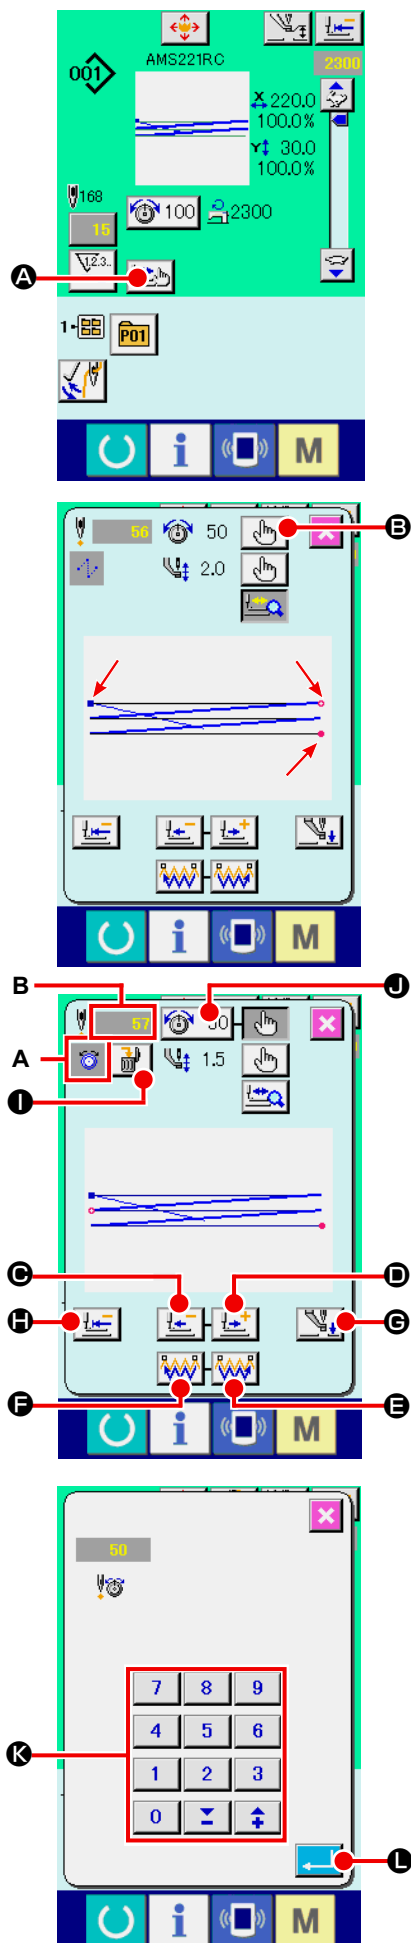


When ENTER button  **L** is pressed, the data is confirmed.

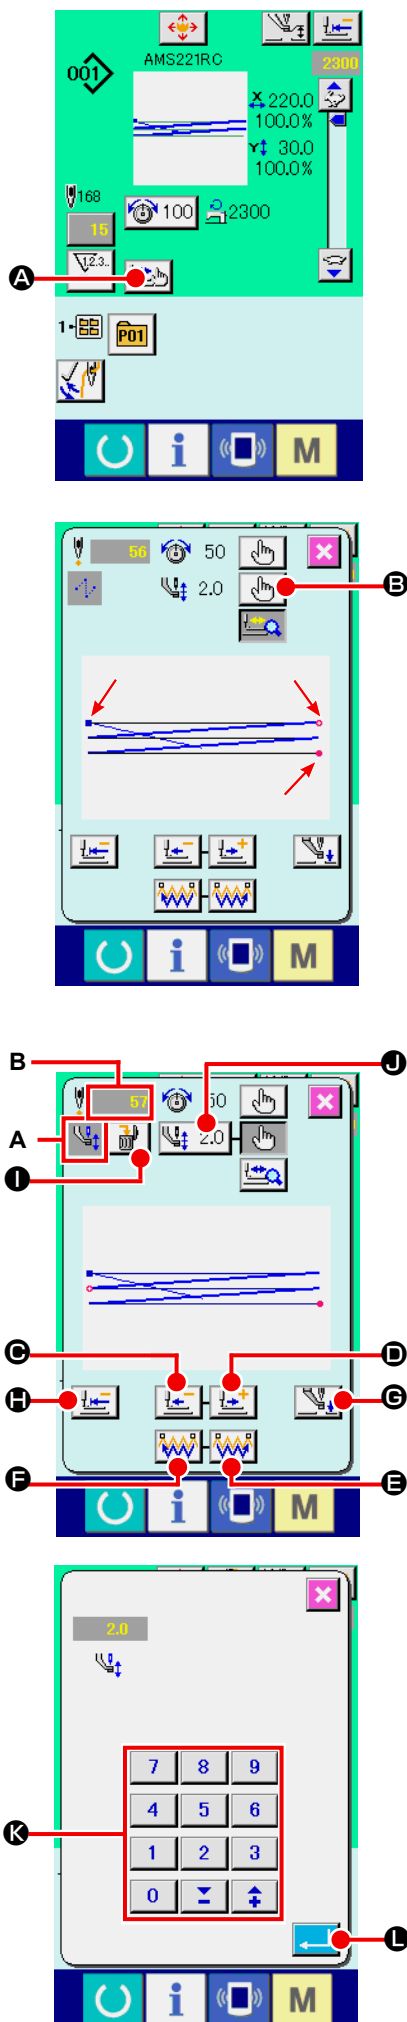









(2) Editing the intermediate presser height

Press STEP SEWING button  **A** on the sewing screen to display the step sewing screen.


The sewing shape is displayed at the center of the screen. The current point, sewing start position and sewing end position are respectively represented by  (pink circle),  (blue dot) and  (pink dot).


Press MODE SELECT button  **B** to select the intermediate presser mode.

When ONE-STITCH BACKWARD button  **C** or FORWARD button  **D** is pressed, the feed (current point ) moves backward or forward by one stitch. When two or more commands have been entered, the feed position does not change but the command display **A** is moved forward and backward. When you keep pressing the button **C** or **D**, the moving speed increases. Indicated value **B** is the absolute value (Intermediate presser height value + Intermediate presser height increased/decreased value).


When COMMAND SEARCH FORWARD button  **E** or BACKWARD button  **F** is pressed, the feed moves forward or backward from the current point to reach the needle entry point where the first intermediate presser command is found.

To stop the feed, press button **C**, **D**, **E**, **F**, **G** or **H**.

When INTERMEDIATE PRESSER button  **G** is pressed, the intermediate presser is raised or lowered. (This button is not displayed when MEMORY switch **U103** is set at 0 (zero).)

When PRESSER INITIAL POSITION button  **H** is pressed, the work clamp moves to its origin and the screen is restored to the sewing screen.

When COMMAND DELETE button  **I** is pressed, the screen for deleting the command as shown in **A** is displayed.

When  **J** is pressed, the intermediate presser height increase/decrease input screen is displayed. Input a desired value on this screen using numeric keypad and +/- keys **K**.


When ENTER button  **L** is pressed, the data is confirmed.

1. When checking the needle, or performing the feed forward or backward, the machine fails to work unless the presser is lowered. Use the machine after lowering the presser.
2. When the intermediate presser rests at its lower position, the movement of the intermediate presser and needle differ depending on the setting of MEMORY switch **U103**.
3. When increasing the height of intermediate presser or making the needle size thicker, confirm the clearance between the wiper and the components. Wiper cannot be used unless the clearance is secured. In this case, turn OFF the wiper switch, or change the set value of memory switch **U105**.




Refer to “II-3. MEMORY SWITCH DATA LISTTION”
p.88 for the memory switch settings.

2-9. How to use temporary stop

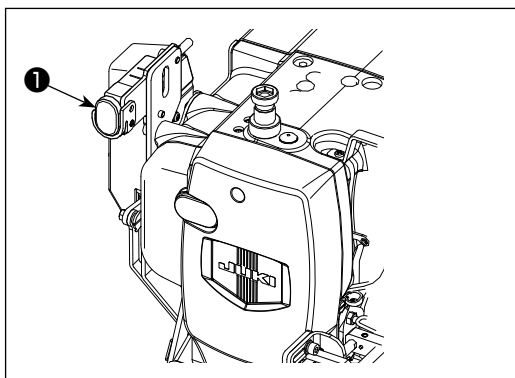

When TEMPORARY STOP switch ❶ is pressed during sewing, the sewing machine can be stopped. At this time, the error screen is displayed to inform that the stop switch has been pressed.

(1) To continue performing sewing from some point in sewing

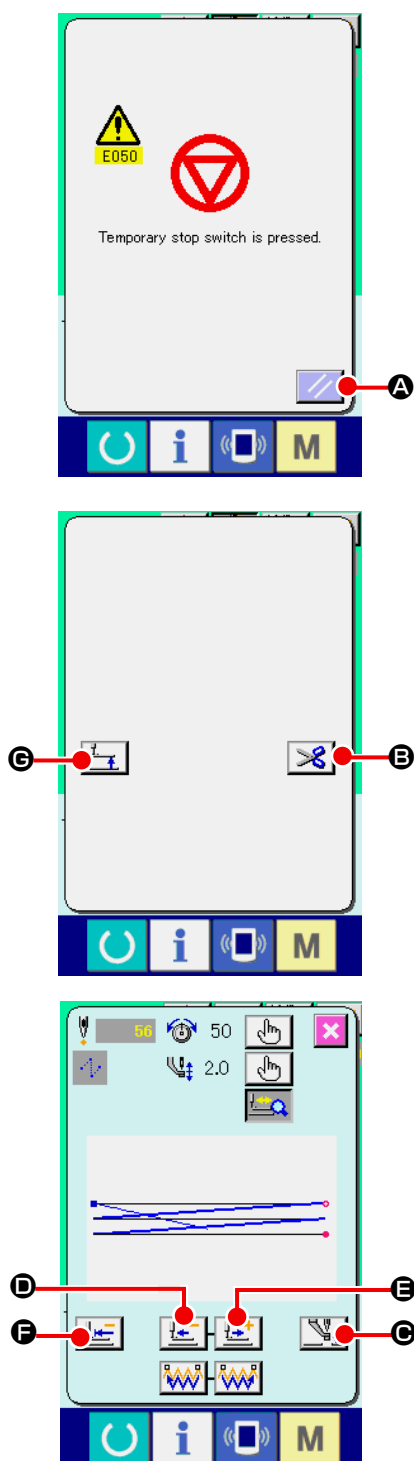






❶ Release the error.


Press RESET button  A to release the error.


❷ Perform thread trimming.

Press THREAD TRIM button  B to perform thread trimming.



When PRESSER UP button  C is pressed, the presser goes up. Turn OFF the power since the operation afterwards cannot be performed.

When thread trimming is performed, INTERMEDIATE PRESSER UP/DOWN button  C, FEED BACKWARD button  D, FEED FORWARD button  E, and RETURN TO ORIGIN button  F are displayed in the screen.

1. When the presser is raised and the operation is stopped on the way because of the trouble of forgetting to enter the bobbin case or the like, press PRESSER UP button  C and turn OFF the power.

2. PRESSER UP button  C is not displayed when the presser is of pneumatic type.


❸ Adjust the presser to the re-sewing position.

When FEED BACK button  D is pressed, the presser returns stitch by stitch and when FEED FORWARD button  E is pressed, it advances stitch by stitch. Move the presser to the re-sewing position.

❹ Re-start the sewing

When the pedal is depressed, sewing starts again.

(2) To perform re-sewing from the start

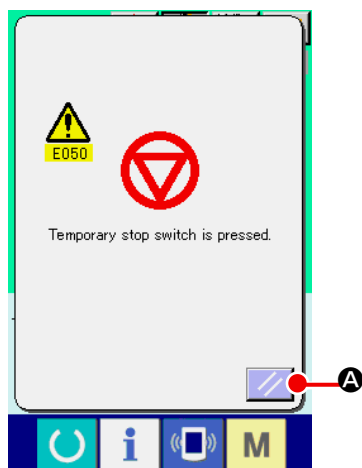






① Release the error.


Press RESET button  **A** to release the error.


② Perform thread trimming.


Press THREAD TRIM button  **B** to perform thread trimming.


When PRESSER UP button  **C** is pressed, the presser goes up. Turn OFF the power since the operation afterwards cannot be performed.

When thread trimming is performed, INTERMEDIATE PRESSER UP/DOWN button  **D**, FEED BACKWARD button  **D**, FEED FORWARD button  **E**, and RETURN TO ORIGIN button  **F** are displayed in the screen.

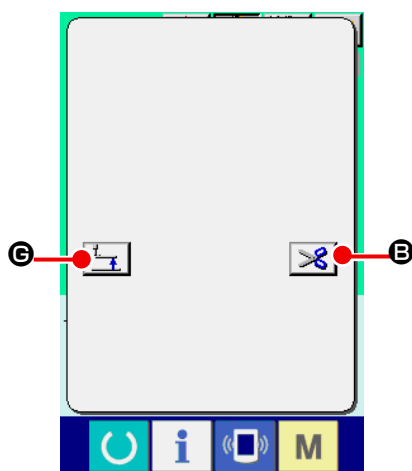


1. When the presser is raised and the operation is stopped on the way because of the trouble of forgetting to enter the bobbin case or the like, press PRESSER UP button  **C** and turn OFF the power.

2. PRESSER UP button  **C** is not displayed when the presser is of pneumatic type.

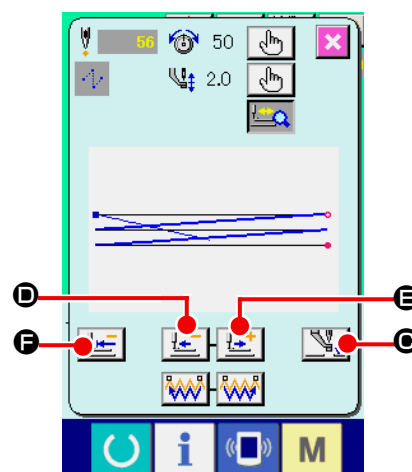


③ Return to the origin.

When RETURN TO ORIGIN button  **F** is pressed, the pop-up is closed, the sewing screen is displayed and the machine returns to the position of the start of sewing.


④ Perform again the sewing work from the start.

When the pedal is depressed, sewing starts again.


2-10. When setting of sewing product is difficult because of interruption of needle tip

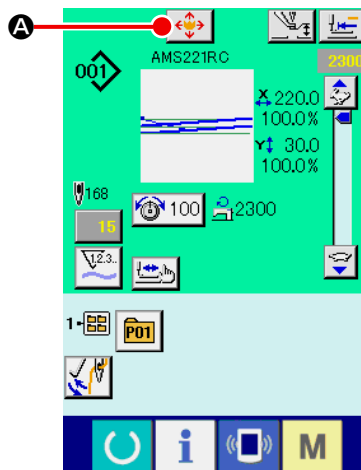


① Display the pattern button move screen.

When PATTERN BUTTON MOVE button  **A** is pressed, the pattern button move screen is displayed.



When you have selected the use of the fixed retraction position with the memory switch K090, operation of PATTERN BUTTON MOVE button  **A** is disabled.

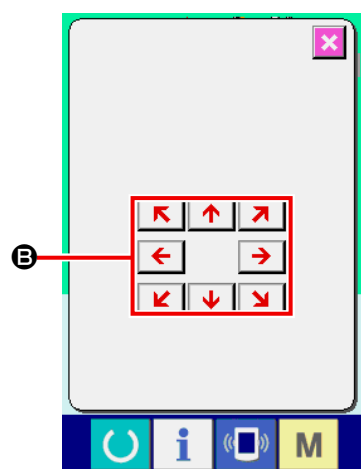

② Move the pattern.

Lower the presser, and input the move direction with DIRECTION key **B**.




The moving amount set can be effective only in the sewing screen.

When the screen returns to the input screen by pressing down READY key, the moving amount set is erased.


2-11. Winding bobbin thread

(1) When performing winding bobbin thread while performing sewing

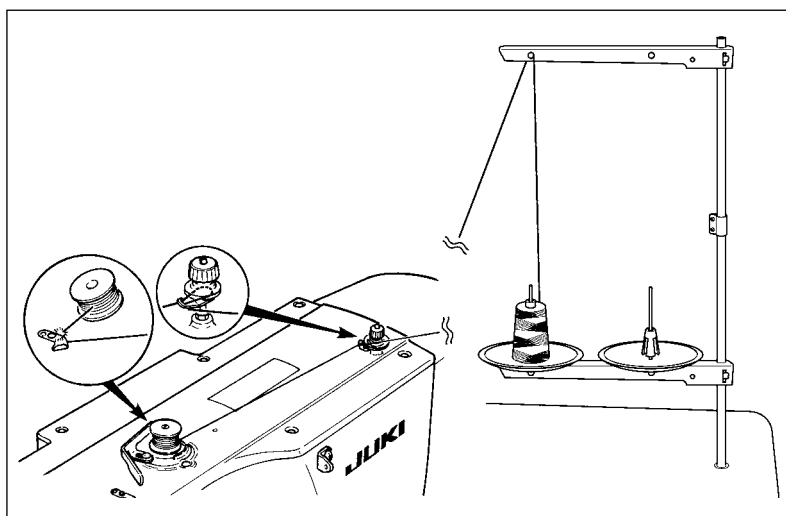


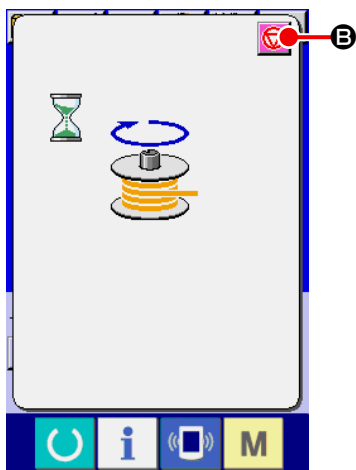
Thread the bobbin winder and wind the bobbin thread onto the bobbin as illustrated in the figure.

(2) When performing winding bobbin thread only

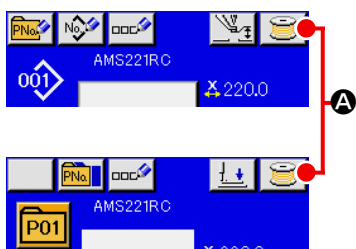

① Display the bobbin winding screen.


Press BOBBIN WINDER button  (A) in the data input screen (blue) and the presser comes down. Then the bobbin winding screen is displayed.




② Start bobbin winding.

Depress the start pedal, and the sewing machine rotates and starts winding bobbin thread.

③ Stop the sewing machine.


Press STOP button  (B) and the sewing machine stops and returns to the normal mode. Or, depress the start pedal again during winding bobbin and the sewing machine stops while the bobbin thread winding mode stays as it is. Depress the start pedal again and the bobbin winding starts again. Use this way when winding bobbin thread around plural bobbins.




Bobbin winder does not work immediately after turning ON the power. Perform the bobbin winding after setting pattern No. or the like once, pressing the READY key , and making the sewing LED light up.

2-12. Using counter

(1) Setting procedure of the counter

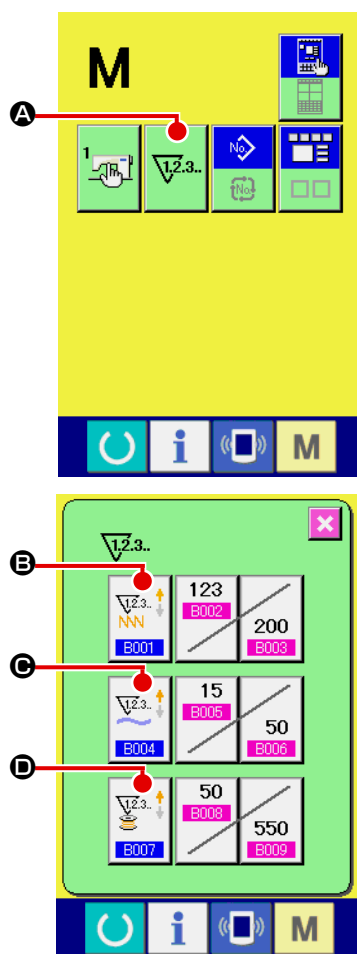


① Display the counter setting screen.



Press **M** switch and the COUNTER SETTING button  **A** is displayed on the screen. When this button is pressed, the counter setting screen is displayed.

② Selection of kinds of counters

This sewing machine has three different counters; i.e., the sewing counter, No. of pcs. counter and bobbin counter. When SEWING

COUNTER TYPE SELECT button  **B**, NO. OF PCS. COUNTER TYPE SELECT button  **C** or BOBBIN COUNTER TYPE

SELECT button  **D** is pressed, the corresponding counter type select screen is displayed. On this screen, the counter type can be selected individually.

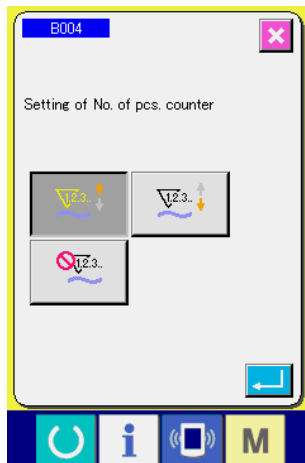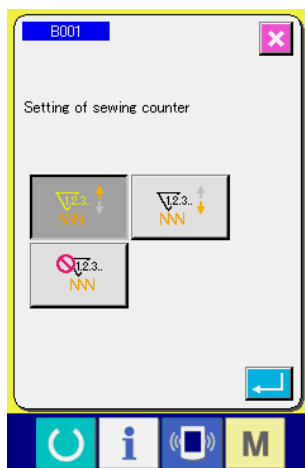

[Sewing counter]



UP counter :

Every time the sewing of one shape is performed, the existing value is counted up. When the existing value is equal to the set value, the count-up screen is displayed.



DOWN counter :

Every time the sewing of one shape is performed, the existing value is counted down. When the existing value is reached to "0", the count-up screen is displayed.



Counter disuse:

The sewing counter does not count a finished shape even when the machine has sewn the shape. The counter screen of the sewing counter is not displayed.

[No. of pcs. Counter]



UP counter :

Every time one combination sewing is performed, the existing value is counted up. When the existing value is equal to the set value, the count-up screen is displayed.




DOWN counter :




Every time one combination sewing is performed, the existing value is counted down. When the existing value is reached to "0", the count-up screen is displayed.




Counter disuse:

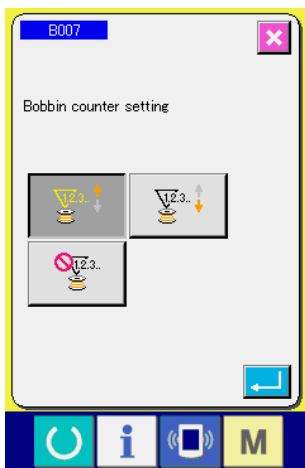


The No. of pcs. counter does not perform counting. The counter screen of the No. of pcs. counter is not displayed.




[Bobbin counter]	
	UP counter : The counter increases the existing value by one every time the machine has sewn 10 stitches. When the existing value is equal to the set value, the count-up screen is displayed.
	DOWN counter : The counter decreases from the existing value by one every time the machine has sewn 10 stitches. When the existing value is reached to "0", the count-up screen is displayed.
	Counter disuse: The bobbin counter does not perform counting. The counter screen of the bobbin counter is not displayed.

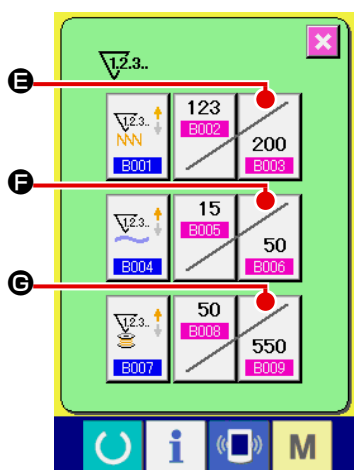


③ Change of counter set value

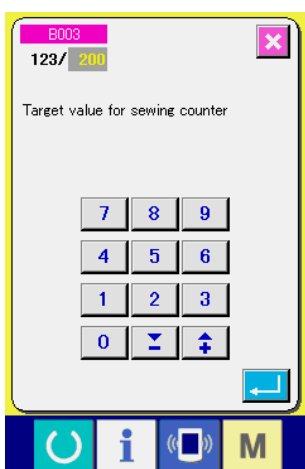


Press button  **E** for the sewing counter, button  **F** for the No. of pcs. counter or button  **G** for the bobbin counter to display the corresponding counter set value input screen.

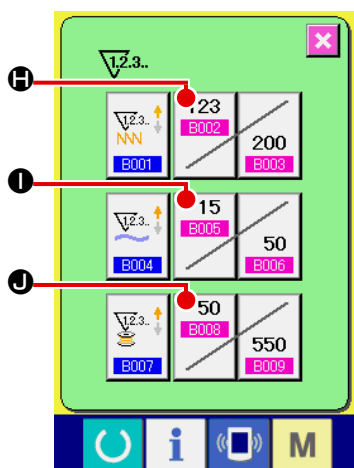


Here, input the set value.
When "0" is inputted in the set value, the display of count-up screen is not performed.




④ Change of counter existing value

Press button  **H** for the sewing counter, button  **I** for the No. of pcs. counter or button  **J** for the bobbin counter to display the corresponding counter current value input screen.

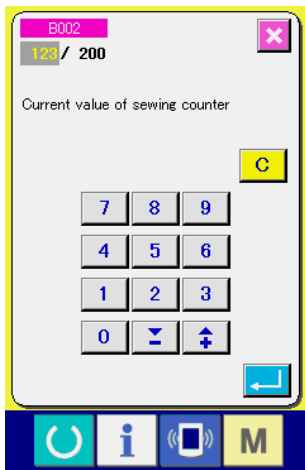


Here, input the existing value.

(2) Count-up releasing procedure

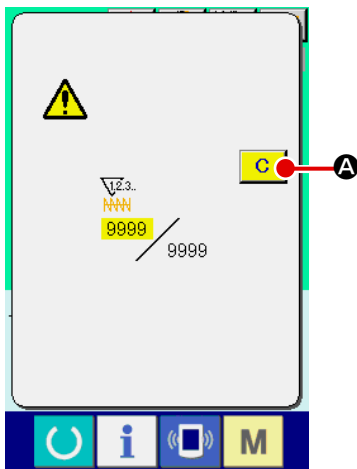


When the count-up condition is reached during sewing work, the count-up screen is displayed and the buzzer beeps. Press CLEAR button **C** **A** to reset the counter and the screen returns to the sewing screen. Then the counter starts counting again.

(3) How to change the counter value during sewing

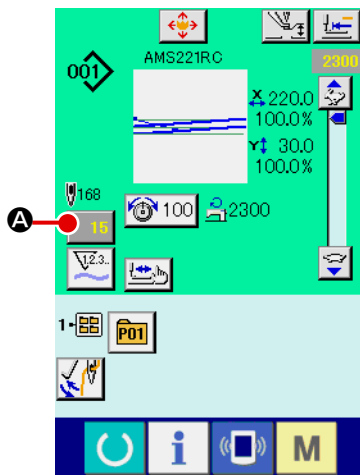

① Display the counter value change screen.

When you desire to revise the counter value during sewing work due to the mistake or the like, press COUNTER VALUE CHANGE button **15** **A** on the sewing screen. The counter value change screen is displayed.

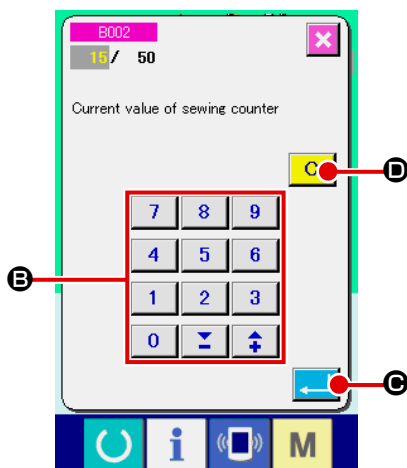

② Change the counter value.


Input the value you desire with ten keys, or "+" or "-" key **B**.


③ Determine the counter value.

When ENTER button **C** is pressed, the data is determined. When you desire to clear the counter value, press CLEAR button **C** **D**.


2-13. Performing new register of users' pattern


① Display the data input screen.

Only in case of the data input screen (blue), new register of the pattern can be performed. In case of the sewing screen (green), press READY switch  and display the data input screen (blue).

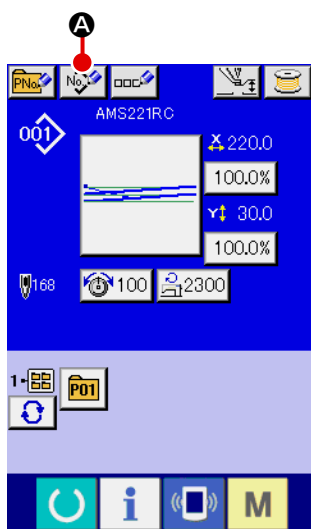


② Call the new register of users' pattern screen.


Press NEW REGISTER button  A and the new register of users' pattern screen is displayed.

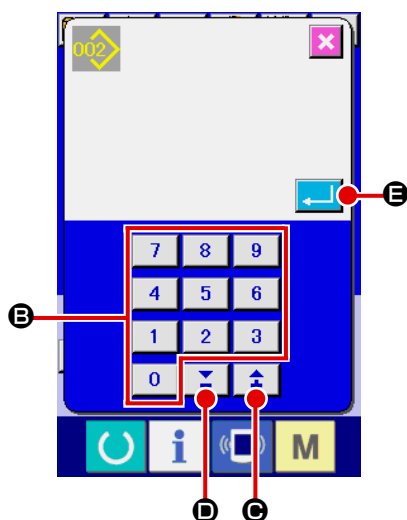

③ Input the users' pattern No.

Input the users' pattern No. you desire to newly register with the ten keys B. It is possible to retrieve the users' pattern No. which has not been registered with the + or – button  (C and D).


④ Determine the users' pattern No

Press ENTER button  E to determine the users' pattern NO. to be newly registered and the data input screen at the time of users' pattern selection is displayed.

When the existing users' pattern No. is inputted and ENTER button is pressed, the overwriting confirmation screen is displayed.


2-14. Naming users' pattern

As many as 255 characters can be input for each user's pattern.

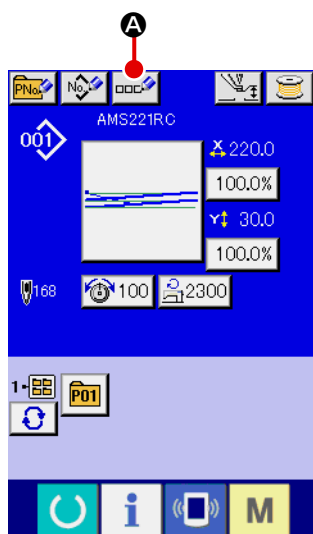


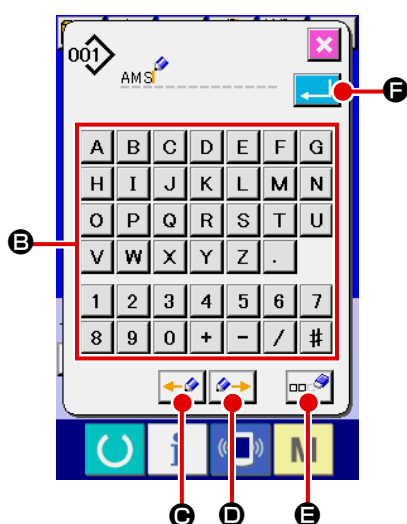
① Display the data input screen.

Only in case of the data input screen (blue) at the time of pattern button selection, it is possible to input the name of pattern button.

In case of the sewing screen (green), press READY switch  to display the data input screen (blue).




② Call the character input screen.

When CHARACTER INPUT button  **A** is pressed, the character input screen is displayed.




③ Input the character.


Press CHARACTER button **B** you desire to input and the input of character can be performed.

As many as 255 characters (**A** to **Z** and **0** to **9**) and symbols(**+** , **-** , **/** , **#** , **.**) can be input. The cursor can be moved with CURSOR LEFT TRAVEL button  **C** and CURSOR RIGHT TRAVEL button  **D**. When you desire to delete the inputted character, adjust the cursor to the position of the character you desire to delete and press DELETE button  **E**.


④ Finish the input of character.

When ENTER button  **F** is pressed, the input of character is finished. After the finish, the inputted character is displayed on the upper part of the data input screen (blue).


2-15. Performing new register of pattern button

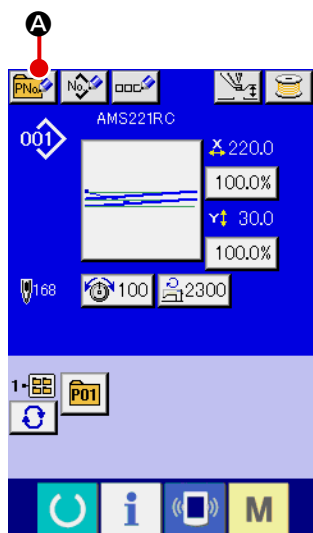


① Display the data input screen.

Only in case of the data input screen (blue), new register of the pattern button can be performed. In case of the sewing screen (green), press READY switch  and display the data input screen (blue).


② Call the new register of pattern button screen.

Press NEW REGISTER button  **A** and the new register of pattern button screen is displayed.

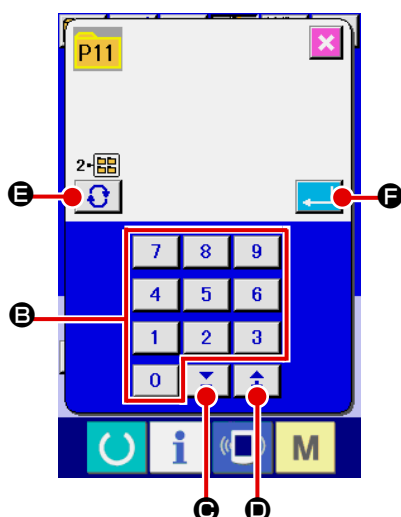


③ Input the pattern button No.


Input the pattern button No. you desire to newly register with the ten keys **B**. New register to the pattern button No. which has been already registered is prohibited.

It is possible to retrieve the pattern button No. which has not been registered with the "+" or "-" button   (**C** and **D**).

④ Select the folder to be stored.

It is possible for the pattern buttons to be stored in five folders. As many as 10 pattern buttons can be stored for one folder. The folder to store the button can be selected with FOLDER SELECTION button  **E**.

⑤ Determine the pattern No.


Press ENTER button  **F** to determine the pattern button No. to be newly registered and the data input screen at the time of pattern button selection is displayed.







Press P1 to P50 key while the sewing screen is displayed and the presser comes down.
Be careful that your fingers are not caught in the presser.

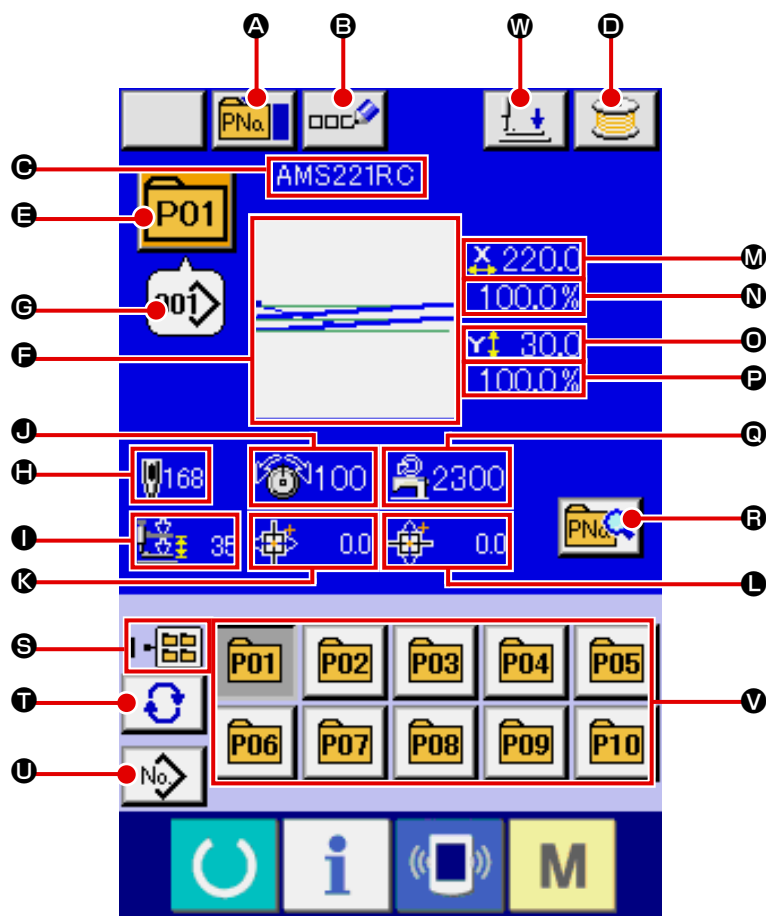2-16. LCD display section at the time of pattern button selection


(1) Pattern button data input screen








	Button and display	Description
A	PATTERN BUTTON COPY button	Pattern button copy screen is displayed. → Refer to “II-2-19. Copying pattern button” p.52.
B	PATTERN BUTTON NAME SETTING button	Pattern button name input screen is displayed. → Refer to “II-2-14. Naming users’ pattern” p.43.
C	PATTERN BUTTON NAME display	Character which is registered to the pattern button No. being selected is displayed.
D	WINDING BOBBIN button	Bobbin thread can be wound. → Refer to “II-2-11. Winding bobbin thread” p.38.
E	PATTERN BUTTON NO. display	Pattern button No. being selected at present is displayed on this button and when the button is pressed, the pattern button No. selection screen is displayed. → Refer to “II-2-17. Performing pattern button No. selection” p.49.
F	SEWING SHAPE	Sewing shape which is registered to the pattern button No. being selected is displayed.

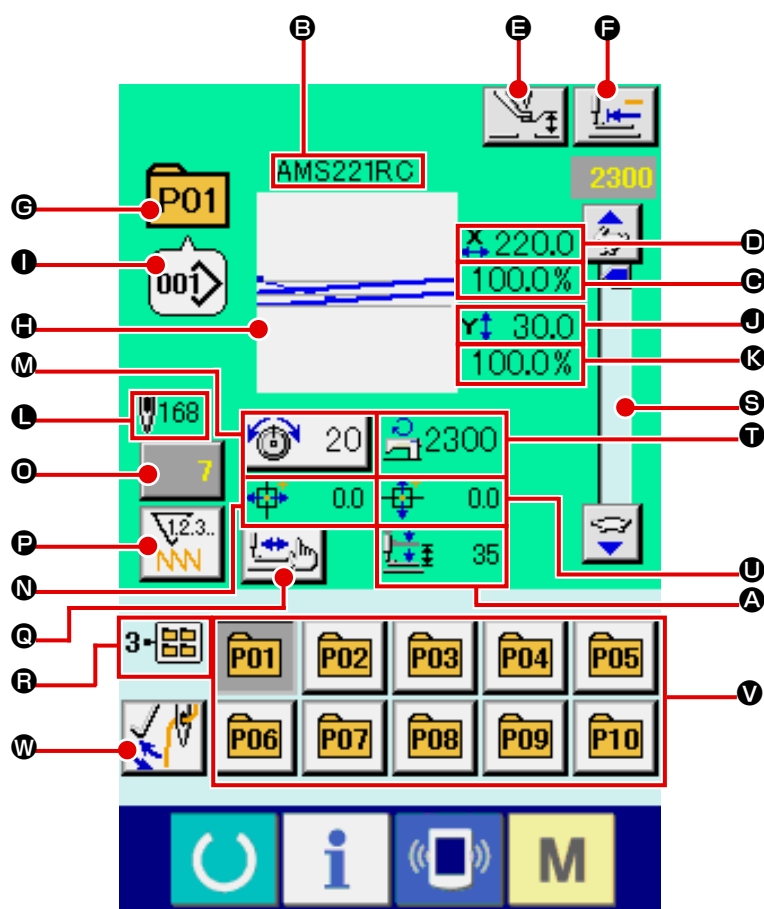	Button and display	Description
G	SEWING SHAPE NO.	<p>Sewing shape which is registered to the pattern button No. being selected is displayed. There are 4 kinds below of the kinds of sewing shape.</p> <p> : Users' pattern</p> <p> : Vector format data</p> <p> : M3 data</p> <p> : Sewing standard format</p> <p>* Be sure to use the media that has been formatted with IP-420. For the formatting procedure of the media, refer to "II-2-28. Performing formatting of the media" p.85.</p>
H	TOTAL NO. OF STITCHES	Total number of stitches of the pattern which is registered to the pattern button No. being selected is displayed.
I	2-STEP STROKE display	2-step stroke value registered to the pattern button No. being selected is displayed.
J	THREAD TENSION display	Thread tension value which is registered to the pattern button No. being selected is displayed.
K	TRAVEL AMOUNT IN X DIRECTION display	Travel amount in X direction which is registered to the pattern button No. being selected is displayed.
L	TRAVEL AMOUNT IN Y DIRECTION display	Travel amount in Y direction which is registered to the pattern button No. being selected is displayed.
M	X ACTUAL SIZE VALUE display	X actual size value which is registered to the pattern button No. being selected is displayed.
N	X SCALE RATE display	X scale rate which is registered to the pattern button No. being selected is displayed.
O	Y ACTUAL SIZE VALUE display	Y actual size value which is registered to the pattern button No. being selected is displayed.
P	Y SCALE RATE display	Y scale rate which is registered to the pattern button No. being selected is displayed.
Q	MAX. SPEED LIMITATION	Maximum speed limitation which is registered to the pattern button No. being selected is displayed.
R	PATTERN BUTTON EDIT button	Pattern button edit screen is displayed.
S	FOLDER NO. display	Folder No. in which the displayed pattern buttons are stored is displayed.
T	FOLDER SELECTION button	Folders to display the pattern button are displayed in order.
U	SEWING SHAPE SELECTION DATA INPUT SCREEN DISPLAY button	<p>Sewing shape data input screen is displayed.</p> <p>→ Refer to "II-2-4.(1) Sewing shape data input screen" p.24.</p>
V	PATTERN button	<p>Pattern buttons stored in S Folder No. are displayed.</p> <p>→ Refer to "II-2-15. Performing new register of pattern button" p.44.</p>
W	PRESSER DOWN button	<p>Presser can be lowered and the presser down screen is displayed.</p> <p>To raise the presser, press the presser up button which is displayed in the presser down screen.</p>

(2) Sewing screen




	Button and display	Description
A	2-STEP STROKE display	2-step stroke value registered to the pattern button No. during sewing is displayed.
B	PATTERN BUTTON NAME display	Character which is registered to the pattern button No. being sewn is displayed.
C	X SCALE RATE display	Scale rate in X direction which is registered to the pattern button No. being sewn is displayed.
D	X ACTUAL SIZE VALUE display	Actual size value in X direction which is registered to the pattern button No. being sewn is displayed.
E	INTERMEDIATE PRESSER SETTING button	The intermediate presser is lowered and the intermediate presser reference value change screen is displayed. → Refer to. “II-2-6. Changing item data” p.30.
F	RETURN TO ORIGIN button	Presser is returned to the start of sewing and is raised at the time of temporary stop.
G	RETURN TO ORIGIN button	Pattern button No. being sewn is displayed.
H	SEWING SHAPE display	Sewing shape being sewn is displayed.
I	SEWING SHAPE NO. display	Kind of sewing and sewing shape No. which are registered to the pattern being sewn are displayed.

	Button and display	Description
J	Y ACTUAL SIZE VALUE display	Actual Y size value which is registered to the pattern button No. being selected is displayed.
K	Y SCALE RATE display	Y scale rate which is registered to the pattern button No. being sewn is displayed.
L	TOTAL NO. OF STITCHES OF SEWING SHAPE display	Total number of stitches of sewing shape which is registered to the pattern button No. being sewn is displayed.
M	NEEDLE THREAD TENSION SETTING button	Needle thread tension value which is set to the pattern data being selected at present is displayed on this button and when the button is pressed, the item data change screen is displayed. → Refer to "II-2-6. Changing item data" p.30.
N	TRAVEL AMOUNT IN X DIRECTION display	Travel amount in X direction which is registered to the pattern button No. being sewn is displayed.
O	COUNTER VALUE CHANGE button	Existing counter value is displayed on this button. When the button is pressed, the counter value change screen is displayed. → Refer to "II-2-12. Using counter" p.39.
P	COUNTER CHANGEOVER button	<p>The counter display can be changed over among the sewing counter, No. of pcs. counter and bobbin counter.</p> <p>Two or more types of counters should be placed in ON. If not, the counter selection cannot be carried out.</p> <p>This pictograph on this button indicates the image of the selected type of the counter.</p> <div style="display: flex; align-items: center;">  : Sewing counter </div> <div style="display: flex; align-items: center;">  : No. of pcs. Counter </div> <div style="display: flex; align-items: center;">  : Bobbin counter </div> <p>→ Refer to "II-2-12. Using counter" p.39.</p>
Q	STEP SEWING button	The step sewing screen is displayed. Checking the pattern shape can be performed. → Refer to "II-2-7. Checking pattern shape" p.32.
R	FOLDER NO. display	Folder No. in which the displayed pattern register buttons are stored is displayed.
S	SPEED variable resistor	Number of revolutions of the sewing machine can be changed.
T	MAX. SPEED LIMITATION display	Maximum speed limitation which is registered to the pattern button No. being sewn is displayed.
U	TRAVEL AMOUNT IN Y DIRECTION display	Travel amount in Y direction which is registered to the pattern button No. being sewn is displayed.
V	PATTERN REGISTER button	Pattern button which is stored in R FOLDER NO. is displayed. → Refer to "II-2-15. Performing new register of pattern button" p.44.
W	WIPER CHANGEOVER button	<p>Enable/disable of the wiper output is selected.</p> <div style="display: flex; align-items: center;">  : The wiper output is disabled. </div> <div style="display: flex; align-items: center;">  : The wiper output is enabled. </div>

2-17. Performing pattern button No. selection

(1) Selection from the data input screen

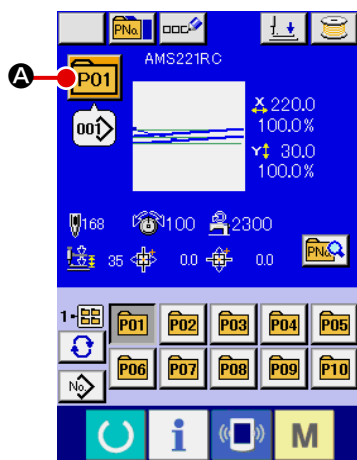


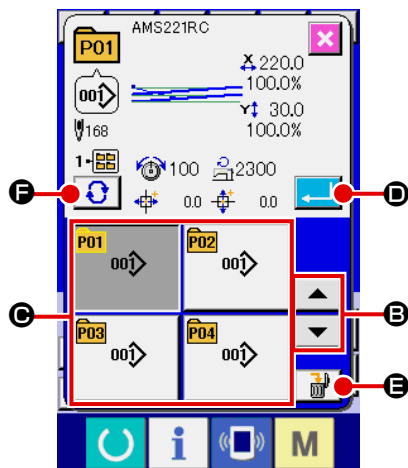
① Display the data input screen.

In case of the data input screen (blue), it is possible to select the pattern button No. In case of the sewing screen (green), press


READY switch  to display the data input screen.

② Call the pattern button No. selection screen.


When PATTERN BUTTON NO. SELECTION button  **A** is pressed, the pattern button No. selection screen is displayed. Pattern button No. which is selected at present and the contents are displayed on the upper part of the screen, and the list of the pattern button No. buttons which have been registered is displayed on the lower part of the screen.





③ Select the pattern button No.

When UP or DOWN SCROLL button  **B** is pressed, pattern button No. button **C** which have been registered are changed over in order. The contents of sewing data which have been inputted in the pattern button No. are displayed in the button. Here, press the pattern button No. button **C** you desire to select.

④ Determine the pattern button No.

When ENTER button  **D** is pressed, the pattern button No. selection screen is closed and the selection is finished. However, the pattern buttons which are registered to the combination sewing cannot be deleted.


- * When you desire to delete the pattern button which has been registered, press DELETE  **E** button. However, the pattern buttons which are registered to the combination sewing cannot be deleted.
- * For the pattern No. to be displayed, press FOLDER SELECTION  **F** button and pattern button Nos. which have been stored in the specified folder are displayed in the list. When the folder No. is not displayed, all pattern Nos. which have been registered are displayed.

(2) Selection by means of the shortcut button



WARNING :

Make sure without fail of the contour of the sewing pattern after selection of the sewing pattern. If the sewing pattern extends outside the work clamp feet, the needle will interfere with the work clamp.

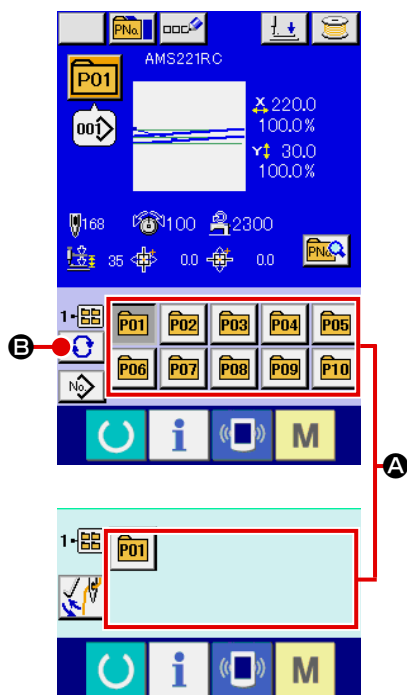


① Display the data input screen or the sewing screen.


When the pattern is registered to the folder, pattern buttons **A** are surely displayed on the lower side of the screen of the data input screen or sewing screen.

② Select the pattern No.


Pattern button is displayed with every folder which is specified when the pattern is newly created.

When FOLDER SELECTION button  **B** is pressed, the pattern button to be displayed is changed. Display and press the button of the pattern No. you desire to sew. When it is pressed, the pattern button No. is selected.


2-18. Changing contents of pattern button

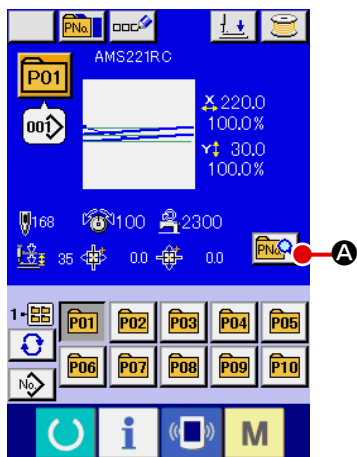


① Display the data input screen at the time of pattern button selection.

Only in case of the data input screen (blue) at the time of pattern selection, it is possible to change the contents of pattern. In case of the sewing screen (green), press READY switch  to display the data input screen at the time of pattern button selection.

② Display the pattern button data change screen.

When PATTERN BUTTON DATA CHANGE button  **A** is pressed, the pattern button data change screen is displayed.

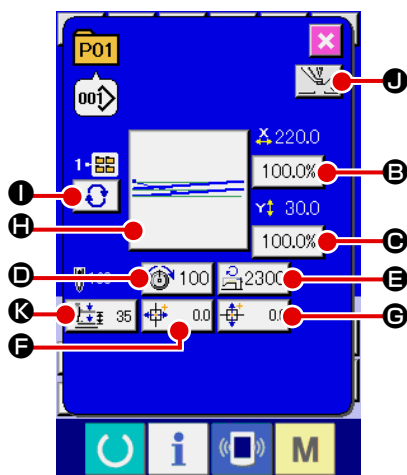


③ Display the input screen of the item data you desire to change.

Data that can be changed are 11 items below.

	Item	Input range	Initial value
B	Scale rate in X direction	1.0 to 400.0(%)	100.0
C	Scale rate in Y direction	1.0 to 400.0(%)	100.0
D	Thread tension	0 to 200	Pattern set value
E	Max. speed limitation	200 to 2,300 (sti/min)	2,300
F	Travel amount in X direction	-165 to +165 (mm)	0.0
G	Travel amount in Y direction	-50 to +100 (mm)	0.0
H	Sewing shape	-	-
I	Folder No.	1 to 5	-
J	Intermediate presser	0.0 to 3.5 (mm) (Max. 0.0 to 7.0 (mm))	Pattern set value
K	2-step stroke height	Air-driven type : 10 to 300	70


When pressing each button of **B** to **H** and **J**, the item data input screen is displayed. When the buttons of **I** are pressed, Folder Nos. and With/without thread clamp are changed over.

- * **B** Scale rate in X direction and **C** Scale rate in Y direction can be changed to the actual size value input by selection of memory switch **U064**.
- * Max. input range and initial value of max. speed limitation **E** are determined with memory switch **U001**.
- * The input range of travel amount in X direction **F** and travel amount in Y direction **G** differs according to the sewing range.

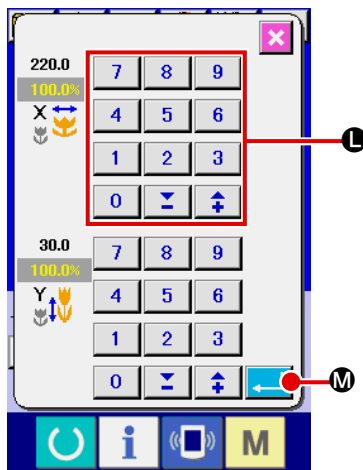

④ Determine the change of item data

For example, input X scale rate. Press **100.0%** **B** to display the item data input screen. Input the value you desire with the ten keys or + or – key **L**. When ENTER button **M** is pressed, the data is determined.

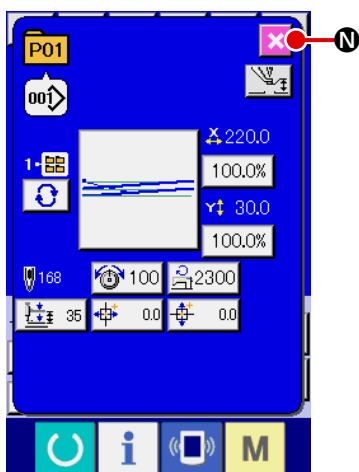

⑤ Close the pattern button data change screen.


When the change is over, press CLOSE button **X** **N**. The pattern button data change screen is closed and the screen returns to the data input screen.

* It can be performed to change the other item data by the same operation.

2-19. Copying pattern button

The sewing data of the pattern button No. which has already been registered can be copied to the pattern button No. which is not registered. Overwriting copy of the pattern button is prohibited. When you desire to overwrite, perform it after deleting the pattern button once.

→ Refer to **“II-2-17. Performing pattern button No. selection” p.49**.

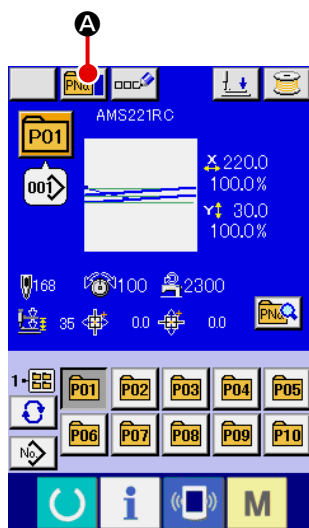


① Display the data input screen.

Only in case of the data input screen (blue) at the time of pattern button selection, it is possible to copy. In case of the sewing screen (green), press READY switch **C** to display the data input screen (blue).


② Call the pattern copy screen.


When PATTERN BUTTON COPY button **PN** **A** is pressed, the pattern button copy (copy source selection) screen is displayed.

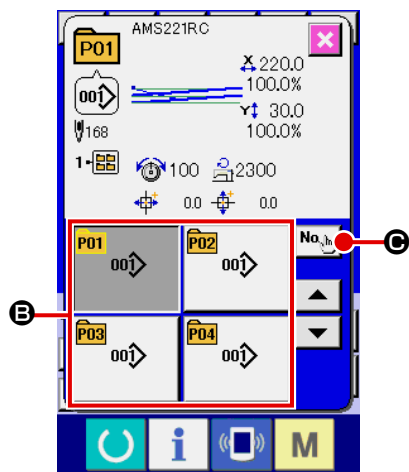

③ Select the pattern No. of copy source.

Select the pattern button No. of copy source from the pattern button list button **B**.

Next, press COPY DESTINATION INPUT button  **C** and the copy destination input screen is displayed.

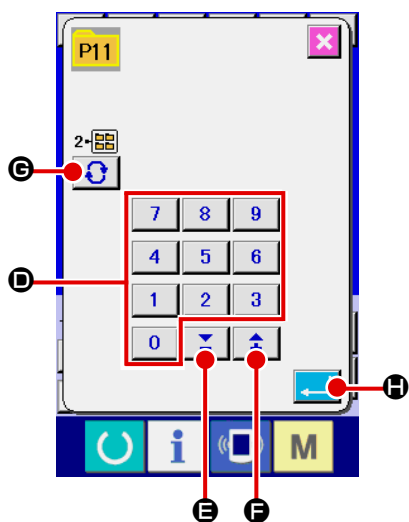


④ Input the pattern No. of copy destination.


Input the pattern button No. of copy destination with ten keys **D**.

Pattern button No. which is not used yet can be retrieved with –

and + buttons  **F** and  **E**.


In addition, the folder to be stored can be selected with FOLDER SELECTION button  **G**.

⑤ Start copying.

When ENTER button  **H** is pressed, copying starts. The copied pattern button No. in the selection state returns to the pattern button copy (copy source selection) screen after approximately two seconds.


* Combination data can be copied in the same way.

2-20. Changing sewing mode

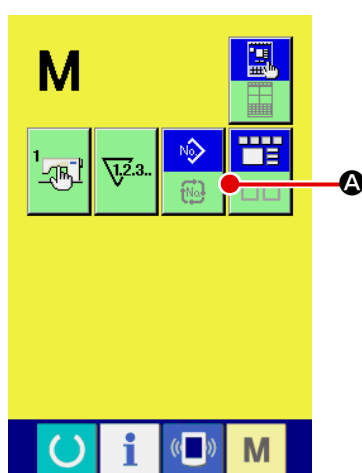

① Select the sewing mode.

When **M** switch is pressed in the state that the pattern has

been registered, SEWING MODE SELECTION button  **A** is displayed on the screen. When this button is pressed, the sewing mode changes alternately the individual sewing and the combination sewing. (When the pattern button is not registered, the sewing mode cannot be changed to the combination sewing even when the button is pressed.)

* The image of the button of sewing mode selection button changes according to the sewing mode which is selected at present.

When individual sewing is selected :



When combination sewing is selected :




2-21. LCD display section at the time of combination sewing



The sewing machine is capable of sewing in order by combining the plural pattern data. As many as 30 patterns can be inputted. Use this function when sewing plural different shapes on the sewing product. In addition, it is possible to register as many as 20 of the combination sewing data. Use this function for new creation and copying in case of need.

→ Refer to **“II-2-15. Performing new register of pattern button” p.44** and **“II-2-19. Copying pattern button” p.52.**

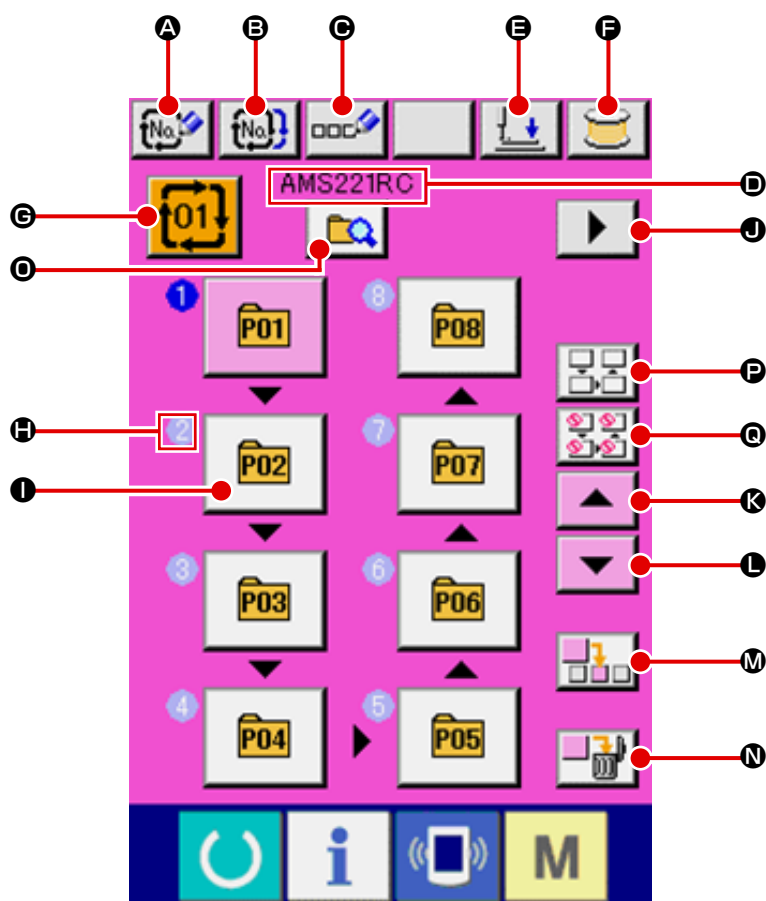
(1) Pattern input screen










Button and display	Description
A COMBINATION DATA NEW REGISTER button	Combination data No. new register screen is displayed. → Refer to “II-2-15. Performing new register of pattern button” p.44.
B COMBINATION DATA COPY button	Combination pattern No. copy screen is displayed. → Refer to “II-2-19. Copying pattern button” p.52.
C COMBINATION DATA NAME INPUT button	Combination data name input screen is displayed. → Refer to “II-2-14. Naming users' pattern” p.43.
D COMBINATION DATA NAME display	Name which is inputted in the combination data being selected is displayed.
E PRESSER DOWN button	Presser can be lowered and the presser down screen is displayed. To raise the presser, press the presser up button displayed in the presser down screen.
F BOBBIN WINDING	Bobbin thread can be wound. → Refer to “II-2-11. Winding bobbin thread” p.38.

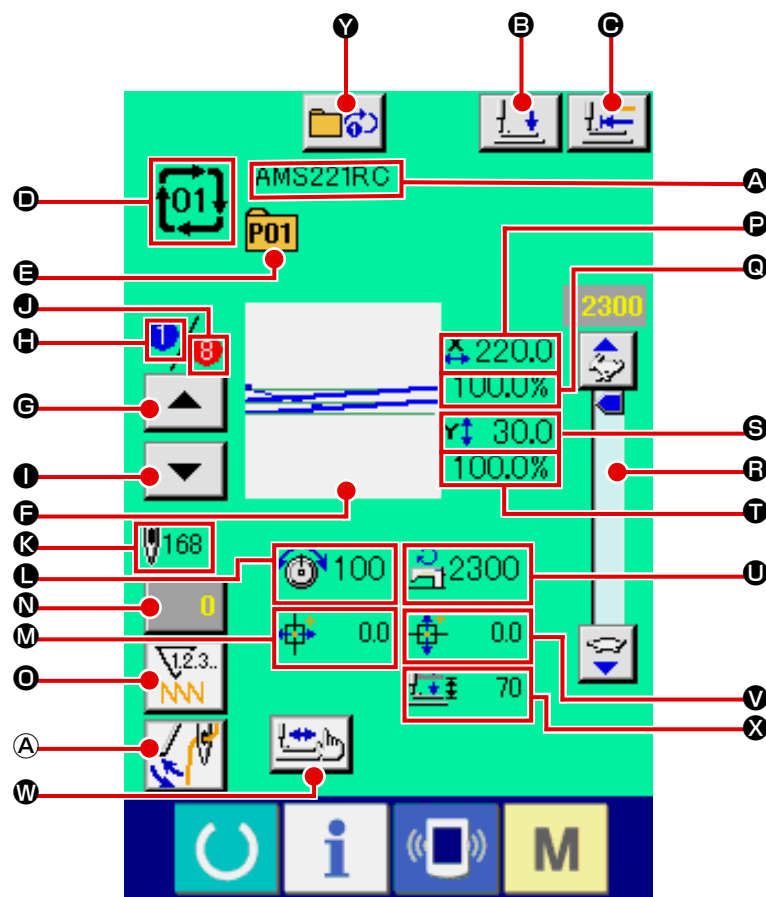	Button and display	Description
G	COMBINATION DATA NO. SELECTION button	Combination data No. being selected is displayed in the button. When the button is pressed, the combination data No. selection screen is displayed.
H	SEWING ORDER display	Sewing order of the inputted pattern data is displayed. When the screen is changed over to the sewing screen, the pattern which is sewn first is displayed in blue color. * As many as the number of inputted patterns is displayed in H and I , display and button.
I	PATTERN SELECTION button	Pattern No., shape, number of stitches, etc. which are registered in H SEWING ORDER are displayed on the button. When the button is pressed, the pattern selection screen is displayed. In the case O is the pattern registration mode : The pattern select screen is displayed. → Refer to " II-2-23.(2) Creating procedure of the combination data " p.59. In the case O is the skip select mode : The sewing of each step is changed over between "Skip" ⇔ "Not skip". → Refer to " II-2-23.(5) Setting of the skip of steps " p.61.
J	NEXT PAGE DISPLAY button	This button is displayed when the number of patterns registered to combination data has reached eight or more.
K	UP SCROLL button	The pattern No. which is previous to the current one is selected.
L	DOWN SCROLL button	The pattern No. which is next to the current one is selected.
M	STEP INSERT button	A step is inserted before the pattern No. which is being selected.
N	STEP DELETE button	A step which is being selected is delete.
O	Mode changeover button	Every time this button is pressed, the mode is changed over between the pattern registration mode and the skip setting mode.  : Pattern registration mode  : Skip setting mode
P	All-skip reset button	All steps registered in combination data are set to "Not skip". → Refer to " II-2-23.(5) Setting of the skip of steps " p.61.
Q	All skip button	All steps registered in combination data are set to "Skip". → Refer to " II-2-23.(5) Setting of the skip of steps " p.61.

(2) Sewing screen



	Button and display	Description
A	COMBINATION DATA NAME display	Name which is inputted in the combination data being selected is displayed.
B	PRESSER DOWN button	Presser can be lowered and the presser down screen is displayed. To raise the presser, press the presser up button displayed in the presser down screen.
C	RETURN TO ORIGIN button	This button returns the presser to the start of sewing and raises the presser when the present presser position is on the way of sewing.
D	COMBINATION DATA NO. display	Combination data No. being selected is displayed.
E	PATTERN BUTTON NO. display	Pattern button No. being sewn is displayed.
F	SEWING SHAPE display	Sewing shape which is registered to pattern button No. being sewn is displayed.
G	SEWING ORDER RETURN button	Pattern to be sewn can be returned by one.
H	SEWING ORDER display	Sewing order being sewn at present is displayed.
I	SEWING ORDER ADVANCE button	Pattern to be sewn can be advanced by one.
J	TOTAL NUMBER OF REGISTERS display	Total number of patterns which is registered to combination No. being sewn is displayed.
K	TOTAL NUMBER OF STITCHES display	Total number of stitches of sewing shape being sewn is displayed.


	Button and display	Description
L	THREAD TENSION display	Thread tension value which is registered to pattern button No. being sewn is displayed.
M	TRAVEL AMOUNT IN X DIRECTION display	Travel amount in X direction which is registered to the pattern button No. being sewn is displayed.
N	COUNTER VALUE CHANGE button	Existing counter value is displayed on this button. When the button is pressed, the counter value change screen is displayed. → Refer to "II-2-12. Using counter" p.39.
O	COUNTER CHANGEOVER button	<p>The counter display can be changed over among the sewing counter, No. of pcs. counter and bobbin counter.</p> <p>Two or more types of counters should be placed in ON. If not, the counter selection cannot be carried out.</p> <p>This pictograph on this button indicates the image of the selected type of the counter.</p> <div style="display: flex; align-items: center;">  : Sewing counter </div> <div style="display: flex; align-items: center;">  : No. of pcs. Counter </div> <div style="display: flex; align-items: center;">  : Bobbin counter </div> <p>→ Refer to "II-2-12. Using counter" p.39.</p>
P	X ACTUAL SIZE AMOUNT display	Actual X size value of the sewing shape which is registered to the pattern button No. being sewn is displayed.
Q	X SCALE RATE display	X scale rate of the sewing shape which is registered to the pattern button No. being sewn is displayed.
R	SPEED variable resistor	Number of revolutions of the sewing machine can be changed.
S	Y ACTUAL SIZE AMOUNT display	Actual Y size value of the sewing shape which is registered to the pattern button No. being sewn is displayed.
T	Y SCALE RATE display	Y scale rate of the sewing shape which is registered to the pattern button No. being sewn is displayed.
U	MAX. SPEED LIMITATION display	Maximum speed limitation which is registered to pattern button No. being sewn is displayed.
V	TRAVEL AMOUNT IN Y DIRECTION display	Travel amount in Y direction which is registered to the pattern button No. being sewn is displayed.
W	STEP SEWING button	<p>The step sewing screen is displayed. Checking the pattern shape can be performed.</p> <p>→ Refer to "II-2-7. Checking pattern shape" p.32.</p>
X	2-STEP STROKE display	2-step stroke value registered to the pattern button No. during sewing is displayed.
Y	1-STEP REPEAT button	<p>Enable/disable of the 1-step repetition is selected.</p> <div style="display: flex; align-items: center;">  : 1-step repeat is disabled </div> <div style="display: flex; align-items: center;">  : 1-step repeat is enabled </div>
A	WIPER CHANGEOVER button	<p>Enable/disable of the wiper output is selected.</p> <div style="display: flex; align-items: center;">  : The wiper output is disabled. </div> <div style="display: flex; align-items: center;">  : The wiper output is enabled. </div>

2-22. Performing combination sewing

First, change the sewing mode to the combination sewing before performing setting.


→ Refer to “II-2-20. Changing sewing mode” p.53.

(1) Selection of combination data

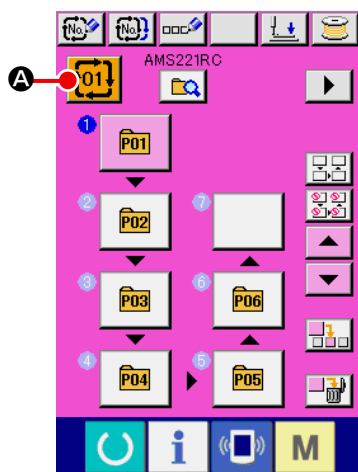


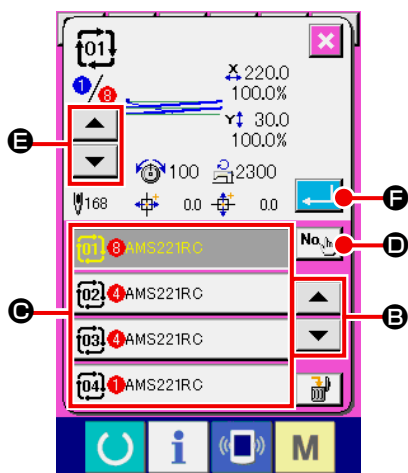
① Display the data input screen.

Only in case of the data input screen (pink), it is possible to select the combination data No.

In case of the sewing screen (green), press READY switch  to display the data input screen (pink).


② Call the combination data No. screen.

When COMBINATION DATA NO. button  **A** is pressed, the combination data No. selection screen is displayed. Combination data No. which is selected at present and the contents are displayed in the upper part of the screen, and other combination data No. buttons which have been registered are displayed in the lower part of the screen.




③ Select the combination data No.


When UP/DOWN button  **B** is pressed, combination data No. buttons **C** which have been registered are changed over in order.

It is also possible to display the combination data No. input screen using NUMBER INPUT button  **D** and input a combination data No. directly.


Here, press the combination data No. buttons **C** you desire to select.

When STEP CONFIRMATION button  **E** is pressed, the sewing shapes of patterns which have been registered in the combination data and the like are changed over in order and displayed.


④ Determine the combination data No.

When ENTER button  **F** is pressed, the combination data No. selection screen is closed and the selection is finished.


(2) Creating procedure of the combination data

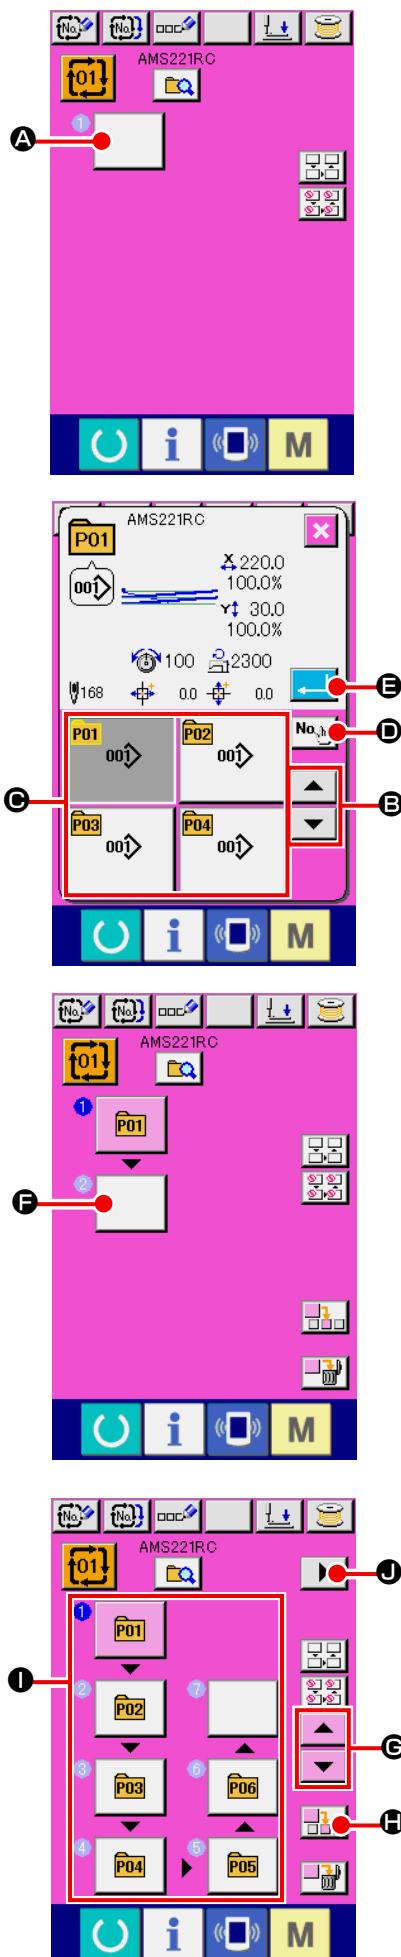



① Display the data input screen.

Only in case of the data input screen (pink) it is possible to input the combination data. In case of the sewing screen (green), press READY switch  to display the data input screen (pink). Pattern No. has not been registered in the initial state, and the first pattern selection button is displayed in the blank state.


② Display the pattern No. selection screen.


When PATTERN SELECTION button  (A) is pressed, the pattern No. selection screen is displayed.




Check to be sure that the selected-mode changeover button  (K) is set to the pattern registration mode. If the mode is not the pattern registration mode, press the selected-mode changeover button  (K).

③ Select the pattern No.


When UP/DOWN SCROLL button  (E) is pressed, pattern No. buttons (C) which have been registered are changed over in order.

It is also possible to display the pattern No. input screen by means of NUMBER INPUT button  (D) and input a pattern No. directly. The contents of pattern data are displayed in the buttons. Here, press the pattern No. buttons you desire to select.



④ Determine the pattern No.


When ENTER button  (E) is pressed, the pattern No. selection screen is closed and the selection is finished.


⑤ Repeat steps ② to ④ as many as the number of pattern Nos. you desire to register.

When the first register is determined, the second pattern selection button  (F) is displayed.


Repeat steps ② to ④ as many as the number of pattern Nos. you desire to register.

When UP or DOWN SCROLL button  (G) is pressed, the PATTERN NO. button can be selected. The selected PATTERN NO. button is displayed in pink .

When the PATTERN NO. INSERT button  (H) is pressed, a step is inserted before the pattern No. being selected (displayed in pink). When PATTERN NO. button (I) being displayed is pressed to select a different pattern No., the pattern No. is changed over.

If the programmed combination data extends over two or more screens, the next screen can be displayed by means of SCREEN SCROLL button  (J).

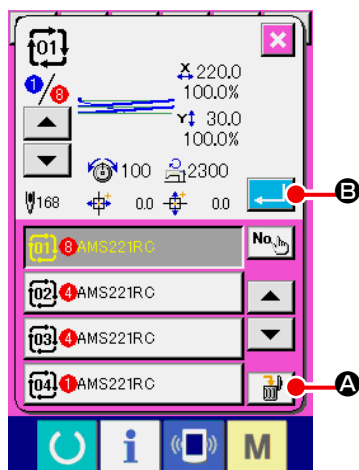

(3) Deleting procedure of the combination data




① Select the combination data No.

Perform steps ① to ③ of “II-2-23.(1) Selection of combination data” p.58 to display the combination data to be deleted.

② Performing deleting the combination data.

When DATA DELETION button  A is pressed, the combination data deletion confirmation pop-up is displayed. Here, press ENTER button  B, and the selected combination data is deleted.




(4) Deleting procedure of the step of the combination data

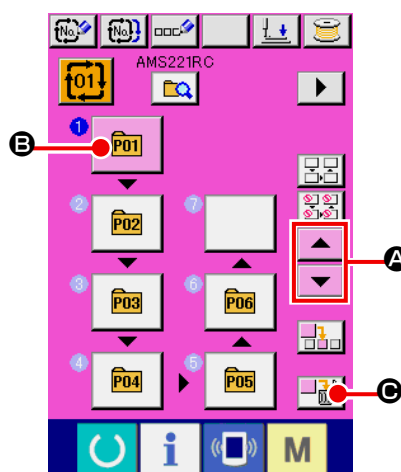


① Select the combination data No.

Perform steps ① to ③ of “II-2-23.(1) Selection of combination data” p.58 to make the state that the combination data including the step you desire to delete has been selected.


② Display the pattern No. selection screen.

Press UP/DOWN SCROLL button  A to bring the PATTERN SELECT button for the step to be deleted under the selected state  B. Then, when STEP DELETE button  C is pressed, the data step delete popup window is displayed.

③ Performing deleting the step of the selected combination data.

When ENTER button  D is pressed, the selected combination data step is deleted.


When the CANCEL button  E is pressed, no data is deleted and the screen is restored to the data input screen.

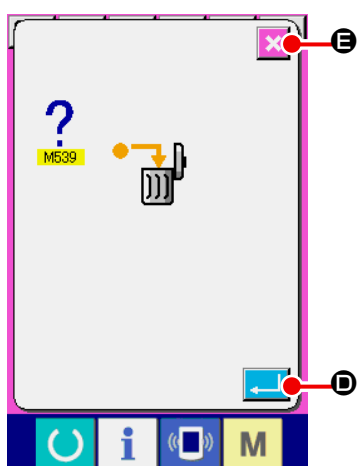

(5) Setting of the skip of steps


It is possible to set the skipping of sewing of a given step.

If you want to skip the sewing of a certain step within the combination data, use this function.

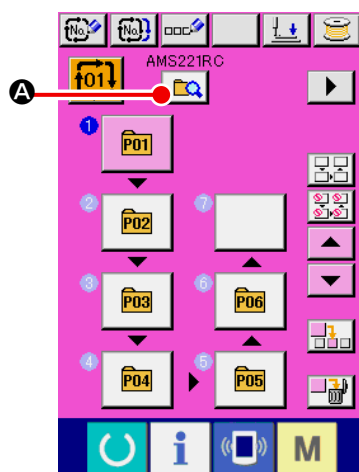




① Entering the skip setting mode

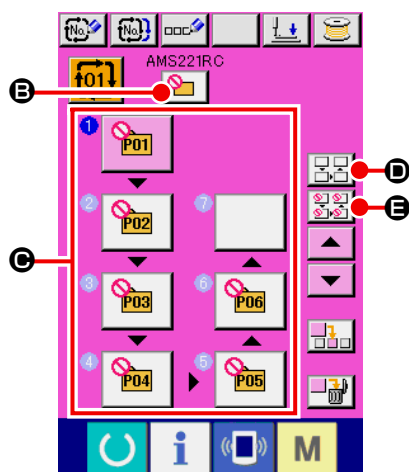Press mode changeover button  **A** to select skip setting mode  **B**.



② Pressing the button of the step to be skipped.


Press button **C** of the step to display . The step is set to "Skip". Another press on the button resets the skip setting. It is possible to set two or more steps to "Skip".

When all skip button  **E** or all skip reset button  **D** is pressed, the skip can be set for all steps or the skip setting can be reset for all steps.


Note that the sewing screen is not displayed even by pressing the set ready key when all steps are set to "Skip".

2-23. Using the simple operation mode

With IP-420, the SIMPLE OPERATION mode is available.

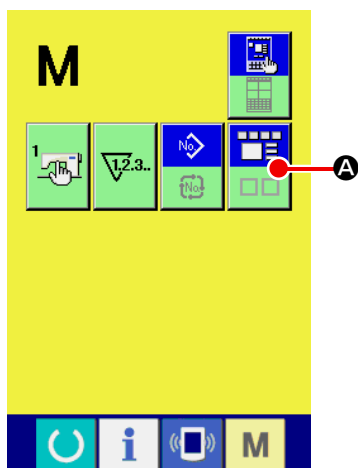

① Select the sewing mode.

When the **M** key is pressed, SCREEN MODE SELECT button  **A** is displayed on the screen. When this button is pressed, the screen mode is changed over between the normal operation and the simple operation.

When the normal operation is selected:











When the simple operation is selected:

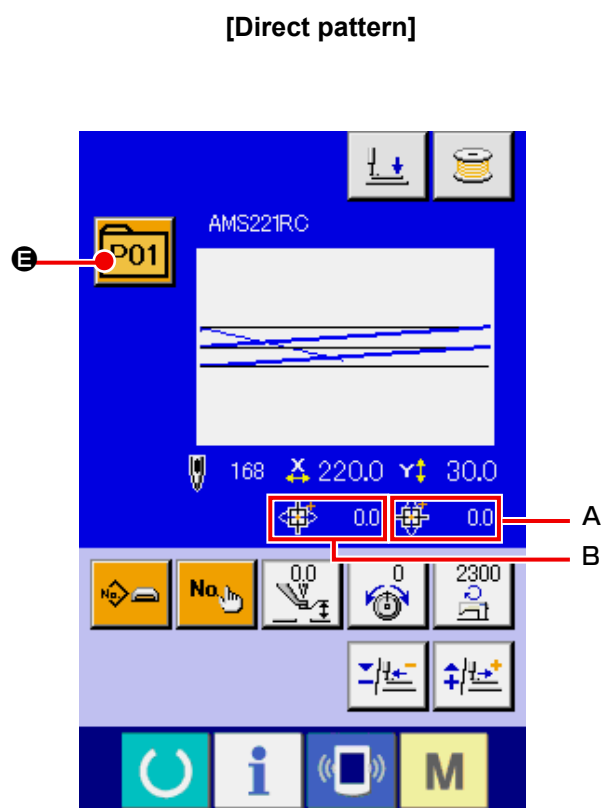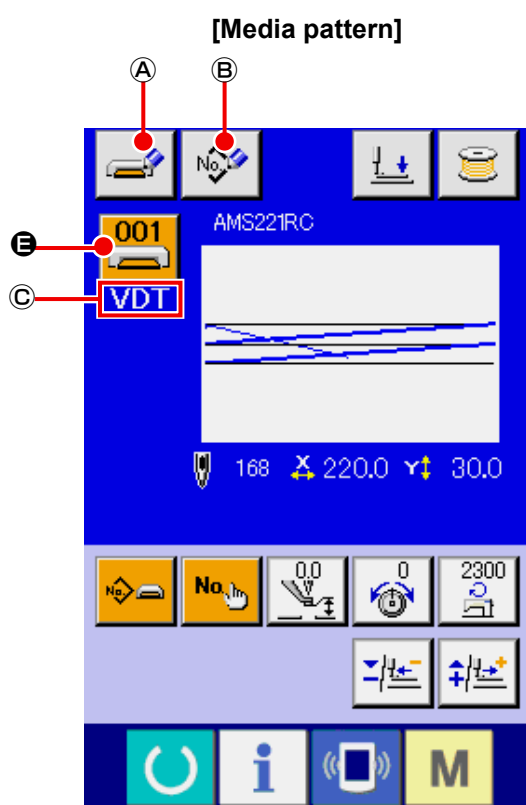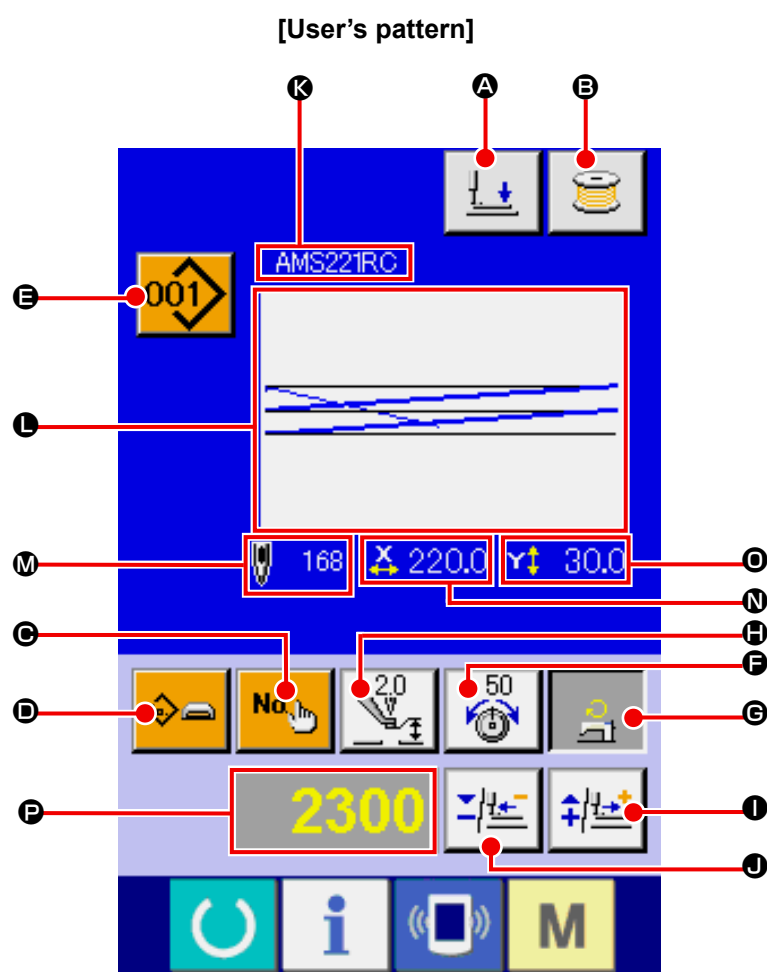

2-24. LCD display when the simple operation is selected


(1) Data input screen (individual sewing)

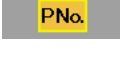


	Button and display	Description
A	PRESSER DOWN button	Feeding frame and intermediate presser are lowered and the presser down screen is displayed.
B	BOBBIN WINDER button	Bobbin thread can be wound. → Refer to “II-2-11. Winding bobbin thread” p.38.
C	PATTERN NO. SETTING button	Pattern No. is set. Registered pattern No. is retrieved using PLUS button I and MINUS button J .
D	PATTERN TYPE SETTING button	<p>Pattern type is specified. The pattern type is changed over among the following three different ones using PLUS button I and MINUS button J to select a desired one.</p> <div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;">  : User's pattern </div> <div style="text-align: center;">  : Vector form data </div> </div> <div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;">  : M3 data </div> <div style="text-align: center;">  : Standard format of sewing </div> </div> <div style="text-align: center; margin-top: 10px;">  : Direct pattern </div> <p>The selected pattern type is indicated on edit data display P. *A type to which no pattern is registered cannot be selected.</p>
E	PATTERN LIST button	Pattern No. and type which are currently selected are indicated on the button. When the button is pressed, the selected pattern list screen is displayed for the pattern selection.
F	NEEDLE THREAD TENSION SETTING button	<p>The current needle thread tension reference value is indicated on the button. When the button is pressed, the thread tension reference value can be changed. During the setting procedure, the thread tension reference value is indicated on edit data display P.</p> <p>The thread tension value is increased/decreased in increments of 1 using PLUS button I and MINUS button J. → Refer to “II-2-6. Changing item data” p.30.</p>
G	MAX SPEED LIMITATION SETTING button	<p>The current max. speed limitation is indicated on the button. When the button is pressed, the max. speed limitation can be changed. During the setting procedure, the max. speed limitation is indicated on edit data display P.</p> <p>The max. speed limitation is increased/decreased in increments of 100 sti/min using PLUS button I and MINUS button J. → Refer to “II-2-6. Changing item data” p.30.</p>
H	INTERMEDIATE PRESSER HEIGHT REFERENCE VALUE SETTING button	<p>The current intermediate presser height reference value is indicated on the button. When the button is pressed, the intermediate presser height reference value can be changed. During the setting procedure, the intermediate presser height reference value is indicated on edit data display P.</p> <p>The intermediate presser height reference value is increased/decreased in increments of 0.1 mm using PLUS button I and MINUS button J. → Refer to “II-2-6. Changing item data” p.30.</p>
I	PLUS button	The value for the selected item is increased in increments of the reference unit.
J	MINUS button	The value for the selected item is decreased in increments of the reference unit.
K	PATTERN NAME display	The name of the currently selected pattern is displayed.
L	SEWING SHAPE display	The sewing shape of the currently selected pattern is displayed
M	NUMBER OF STITCHES display	The number of stitches for the currently selected pattern is displayed.

	Button and display	Description
N	X ACTUAL SIZE VALUE display	The actual X size value of the sewing shape which is being selected is displayed. When an actual value input is selected, the X ACTUAL VALUE SETTING button is displayed according to the setting of MEMORY switch U064 . → Refer to “II-2-6. Changing item data” p.30.
O	Y ACTUAL SIZE VALUE display	The actual Y size value of the sewing shape which is being selected is displayed. When an actual value input is selected, the Y ACTUAL VALUE SETTING button is displayed according to the setting of MEMORY switch U064 . → Refer to “II-2-6. Changing item data” p.30.
P	EDIT DATA display	The data which is being edited on the currently selected edit item is displayed. * When no edit item is selected, this display is not given.
A	MEDIA PATTERN WRITE button	Data on a media pattern is written. When this button is pressed, the new media pattern registration screen is displayed. * This button is displayed when the media pattern is selected.
B	USER'S PATTERN WRITE button	Data on a user's pattern is written. When this button is pressed, the new user's pattern registration screen is displayed. * This button is displayed when the media pattern is selected.
C	SEWING DATA TYPE display	The type of data read from a medium is displayed. VDT : Vector form data M3 : M3 data DAT : Standard format of sewing * This display is given when the media pattern is selected.
A	TRAVEL AMOUNT IN X DIRECTION display	The amount of travel in the X direction which is registered to the pattern button No. being selected is displayed. * This display is given when a direct pattern is selected.
B	TRAVEL AMOUNT IN Y DIRECTION display	The amount of travel in the Y direction which is registered to the pattern button No. being selected is displayed. * This display is given when a direct pattern is selected.


(2) Sewing screen (individual sewing)

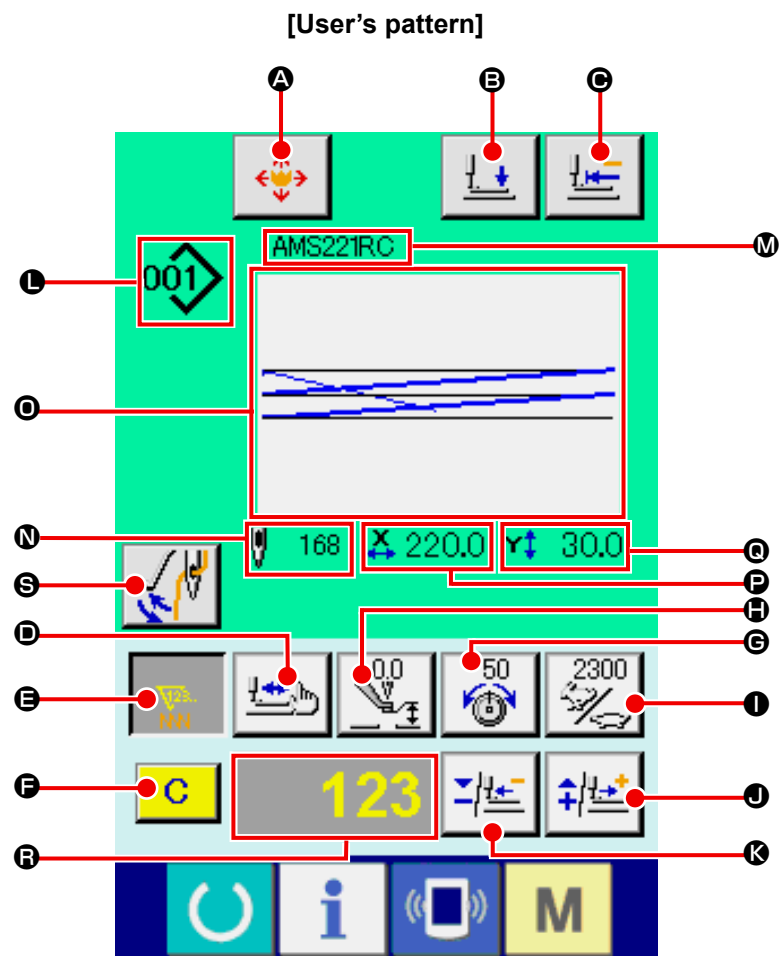

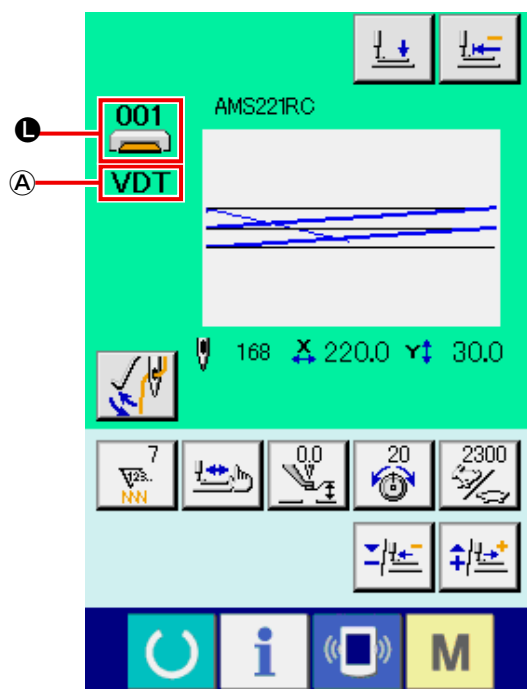

[Media pattern]

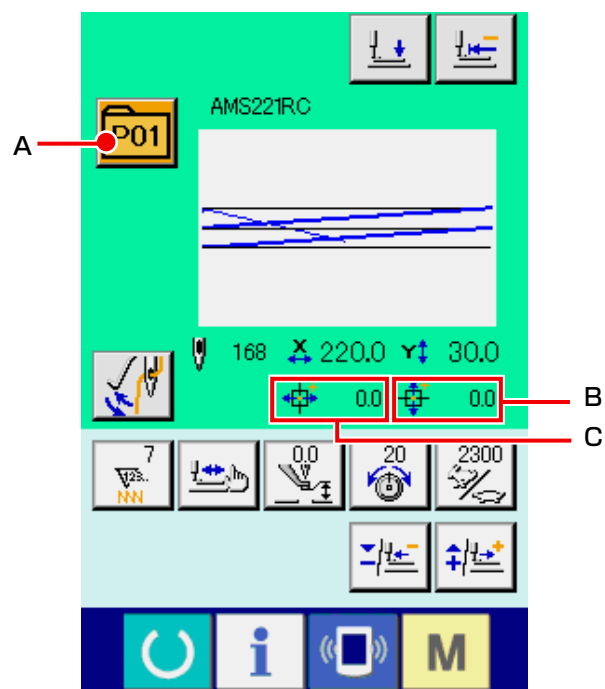


[Direct pattern]



	Button and display	Description
Ⓐ	PATTERN BUTTON MOVE button	The pattern button move screen is displayed. →Refer to "II-2-10. When setting of sewing product is difficult because of interruption of needle tip" p.37.
Ⓑ	PRESSER DOWN button	Feeding frame and intermediate presser are lowered and the presser down screen is displayed.
Ⓒ	RETURN TO ORIGIN button	The work clamp is returned to the start of sewing and raised to its upper position at the time of a temporary stop.
Ⓓ	SHAPE CHECK button	The shape of the pattern which is being selected is checked using PLUS button Ⓐ or MINUS button Ⓚ. The current number of stitches is indicated on edit data display Ⓜ. →Refer to "II-2-7. Checking pattern shape" p.32.
Ⓔ	COUNTER VALUE CHANGE button	The counter value is changed using PLUS button Ⓐ or MINUS button Ⓚ. The counter value is indicated on the button. When the button is pressed, Ⓜ is displayed to allow the counter value to be changed. The current counter value is indicated on edit data display Ⓜ. Unless two or more types of the counters are selected and placed in ON, the COUNTER VALUE CHANGE button Ⓔ and the counter value that is currently set are not displayed on the edit data display Ⓜ. →Refer to "II-2-12. Using counter" p.39.
Ⓛ	CLEAR button	The counter value is cleared. * This button is displayed only when COUNTER VALUE CHANGE button Ⓔ is being selected.
Ⓜ	NEEDLE THREAD TENSION SETTING button	The current needle thread tension reference value is indicated on the button. When the button is pressed, the reference value of the thread tension can be set. During the setting procedure, the thread tension reference value is indicated on edit data display Ⓜ. The thread tension value is increased/decreased in increments of 1 using PLUS button Ⓐ or MINUS button Ⓚ. The thread tension can be changed even during sewing.
Ⓢ	INTERMEDIATE PRESSER HEIGHT REFERENCE VALUE SETTING button	The current intermediate presser height reference value is indicated on the button. When the button is pressed, the intermediate presser height reference value can be set. During the setting procedure, the intermediate presser height reference value is indicated on edit data display Ⓜ. The intermediate presser height reference value is increased/decreased in increments of 0.1 mm using PLUS button Ⓐ or MINUS button Ⓚ.
Ⓣ	SPEED CHANGE button	The speed of stitch of the sewing machine is indicated on the button. When the button is pressed, the speed of stitch can be changed. During the setting procedure, the current speed of the sewing machine is indicated on edit data display Ⓜ. The max. speed limitation is increased/decreased in increments of 100 sti/min using PLUS button Ⓐ or MINUS button Ⓚ.
Ⓤ	PLUS button	The value for the selected item is increased in increments of the reference unit or the needle is moved forward by one stitch.
Ⓚ	MINUS button	The value for the selected item is decreased in increments of the reference unit or the needle is moved backward by one stitch.
Ⓛ	PATTERN NO./TYPE display	The pattern No. and type of the pattern which is being selected are displayed.
Ⓜ	PATTERN NAME display	The name of the currently selected pattern is displayed.

	Button and display	Description
N	NUMBER OF STITCHES display	The number of stitches for the currently selected pattern is displayed.
O	SEWING SHAPE display	The sewing shape of the currently selected pattern is displayed.
P	X ACTUAL SIZE VALUE display	The actual X size value of the sewing shape which is being selected is displayed.
Q	Y ACTUAL SIZE VALUE display	The actual Y size value of the sewing shape which is being selected is displayed.
R	EDIT DATA display	The data which is being edited on the currently selected edit item is displayed. * When no edit item is selected, this display is not given.
S	WIPER CHANGEOVER button	Enable/disable of the wiper output is selected.  : The wiper output is disabled.  : The wiper output is enabled.
A	SEWING DATA TYPE display	The type of data read from a medium is displayed. VDT : Vector form data M3 : M3 data DAT : Standard format of sewing * This display is given when the media pattern is selected.
A	PATTERN LIST button	Pattern No. and type which are currently selected are indicated on the button. When the button is pressed, the selected pattern list screen is displayed for the pattern selection.
B	TRAVEL AMOUNT IN X DIRECTION display	The amount of travel in the X direction which is registered to the pattern button No. being selected is displayed. * This display is given when a direct pattern is selected.
C	TRAVEL AMOUNT IN Y DIRECTION display	The amount of travel in the Y direction which is registered to the pattern button No. being selected is displayed. * This display is given when a direct pattern is selected.


(3) Data input screen (combination sewing)

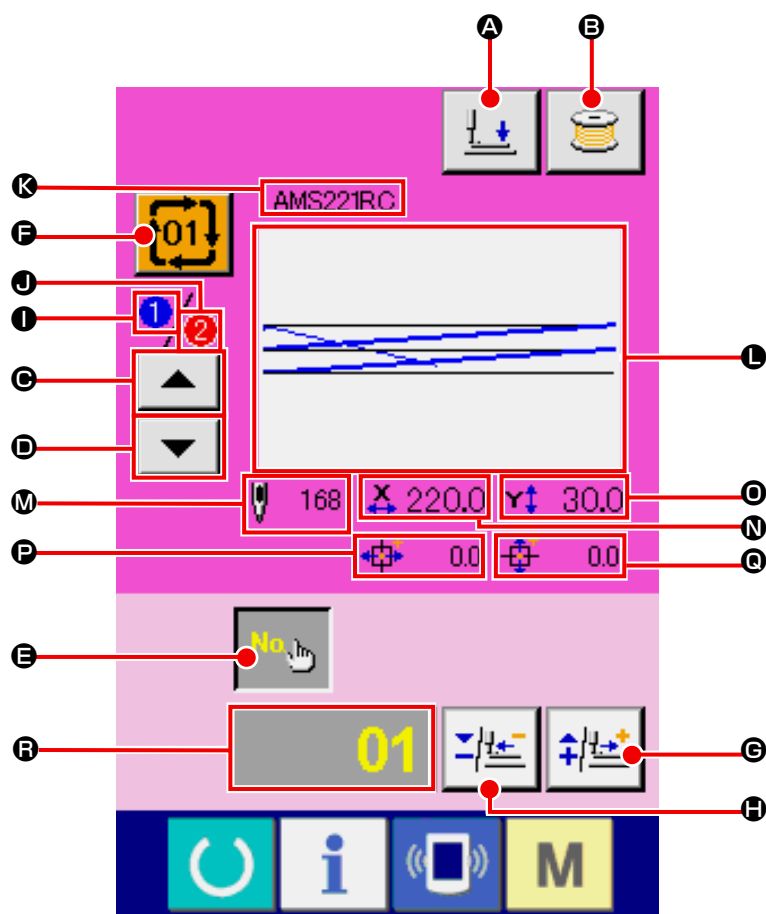



	Button and display	Description
A	PRESSER DOWN button	Feeding frame and intermediate presser are lowered and the presser down screen is displayed.
B	BOBBIN WINDER button	Bobbin thread can be wound. → Refer to "II-2-11. Winding bobbin thread" p.38.
C	SEWING ORDER RETURN button	The pattern No. to be sewn first can be returned to the previous sewing order. The pattern information shown at the upper part of the screen is updated.
D	SEWING ORDER ADVANCE button	The pattern No. to be sewn first can be advanced to the next sewing order. The pattern information shown at the upper part of the screen is updated.
E	PATTERN No. SETTING button	Pattern No. is set. Registered pattern No. is retrieved using PLUS button G and MINUS button H .
F	PATTERN LIST button	Pattern No. and type which are currently selected are indicated on the button. When the button is pressed, the selected pattern list screen is displayed for the pattern selection.
G	PLUS button	The value for the selected item is increased in increments of the reference unit.
H	MINUS button	The value for the selected item is decreased in increments of the reference unit.
I	SEWING ORDER display	The sewing order of the currently selected pattern data is displayed.
J	TOTAL NUMBER OF REGISTERS display	The total number of patterns registered to the cycle pattern which is currently being selected is displayed.

	Button and display	Description
K	PATTERN NAME display	The name of the currently selected pattern is displayed.
L	SEWING SHAPE display	The sewing shape of the currently selected pattern is displayed.
M	NUMBER OF STITCHES display	The number of stitches for the currently selected pattern is displayed.
N	X ACTUAL SIZE VALUE display	The actual X size value of the currently selected pattern is displayed.
O	Y ACTUAL SIZE VALUE display	The actual Y size value of the currently selected pattern is displayed.
P	TRAVEL AMOUNT IN X DIRECTION display	The amount of travel in the X direction of the currently selected pattern is displayed.
Q	TRAVEL AMOUNT IN Y DIRECTION display	The amount of travel in the Y direction of the currently selected pattern is displayed.
R	EDIT DATA display	The data which is being edited on the currently selected edit item is displayed. * When no edit item is selected, this display is not given.

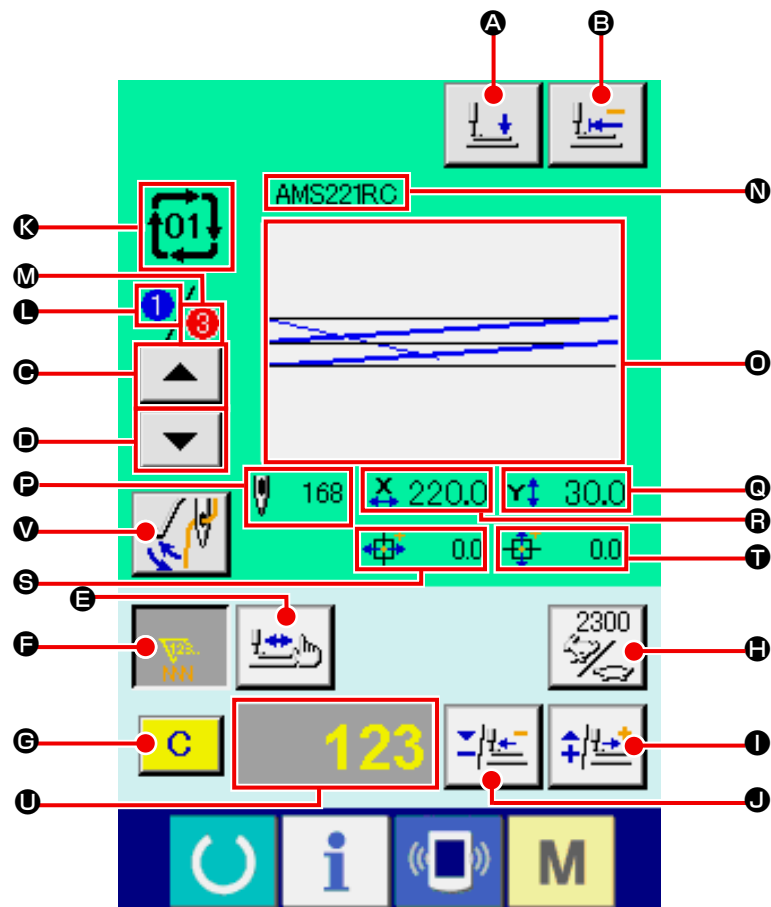
(4) Sewing screen (combination sewing)



	Button and display	Description
A	PRESSER DOWN button	Feeding frame and intermediate presser are lowered and the presser down screen is displayed.
B	RETURN TO ORIGIN button	The work clamp is returned to the start of sewing and raised to its upper position at the time of a temporary stop.
C	SEWING ORDER RETURN button	The pattern to be sewn can be returned to the previous one.
D	SEWING ORDER ADVANCE button	The pattern to be sewn can be advanced to the next one.
E	SHAPE CHECK button	The shape of the pattern which is being selected is checked using PLUS button I or MINUS button J . The current number of stitches is indicated on edit data display U . →Refer to “II-2-7. Checking pattern shape” p.32.
F	COUNTER VALUE CHANGE button	The counter value is changed using PLUS button I or MINUS button J . The counter value is indicated on the button. When the button is pressed, G is displayed to allow the counter value to be changed. The current counter value is indicated on edit data display U . Unless two or more types of the counters are selected and placed in ON, the COUNTER VALUE CHANGE button F and the counter value that is currently set are not displayed on the edit data display U . →Refer to “II-2-12. Using counter” p.39.

	Button and display	Description
Ⓔ	CLEAR button	The counter value is cleared. * This button is displayed only when COUNTER VALUE CHANGE button Ⓕ is being selected.
Ⓗ	SPEED CHANGE button	The speed of stitch of the sewing machine is changed. The speed of stitch can be changed even during sewing. When this button is pressed, the current speed of stitch of the sewing machine is indicated on edit data display Ⓚ. The speed of stitch is increased/decreased in increments of 100 sti/min using PLUS button Ⓛ or MINUS button Ⓜ.
Ⓛ	PLUS button	The value for the selected item is increased in increments of the reference unit or the needle is moved forward by one stitch.
Ⓜ	MINUS button	The value for the selected item is decreased in increments of the reference unit or the needle is moved backward by one stitch.
Ⓚ	PATTERN NO./TYPE display	The pattern No. and type of the pattern which is being selected are displayed.
Ⓛ	SEWING ORDER display	The sewing order of currently selected pattern data is displayed.
Ⓜ	TOTAL NUMBER OF REGISTERS display	The total number of patterns registered to the cycle pattern which is currently being selected is displayed.
Ⓝ	COMBINATION DATA NAME display	The name input in the combination data which is being selected is displayed.
Ⓞ	SEWING SHAPE display	The sewing shape of the currently selected pattern is displayed.
Ⓟ	NUMBER OF STITCHES display	The number of stitches for the currently selected pattern is displayed.
Ⓡ	X ACTUAL SIZE VALUE display	The actual X size value of the currently selected pattern is displayed.
Ⓡ	Y ACTUAL SIZE VALUE display	The actual Y size value of the currently selected pattern is displayed.
Ⓢ	TRAVEL AMOUNT IN X DIRECTION display	The amount of travel in the X direction of the currently selected pattern is displayed.
Ⓣ	TRAVEL AMOUNT IN Y DIRECTION display	The amount of travel in the Y direction of the currently selected pattern is displayed.
Ⓚ	EDIT DATA display	The data which is being edited on the currently selected edit item is displayed. * When no edit item is selected, this display is not given.
Ⓥ	WIPER CHANGE OVER button	Enable/disable of the wiper output is selected.  : The wiper output is disabled.  : The wiper output is enabled.


2-25. Changing memory switch data

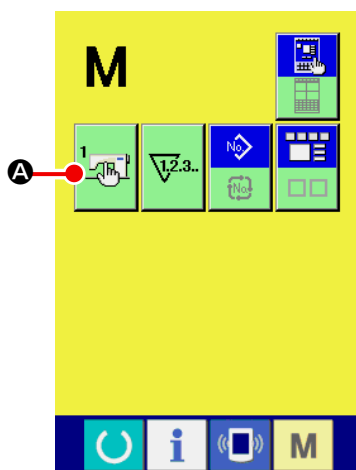


① Display the memory switch data list screen.

When MODE key **M** is pressed, memory switch button 

A is displayed on the screen. When this button is pressed, the memory switch data list screen is displayed.

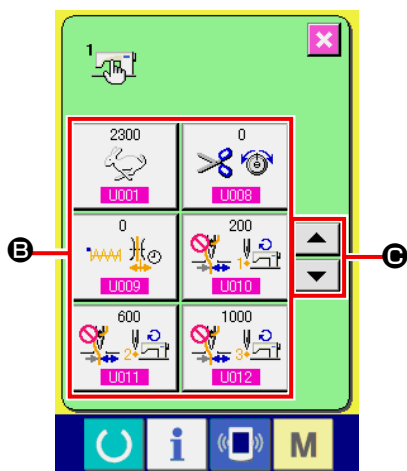



② Select the memory switch button you desire to change.


Press UP/DOWN SCROLL button  **C** and select the data item button **B** you desire to change.

③ Change the memory switch data.

There are data items to change numerals and those to select pictographs in the memory switch data.

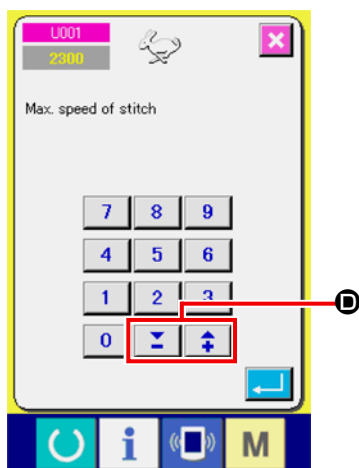

No. in pink color such as **U001** is put on the data items to change numerals and the set value can be changed with  **D** buttons displayed in the change screen.

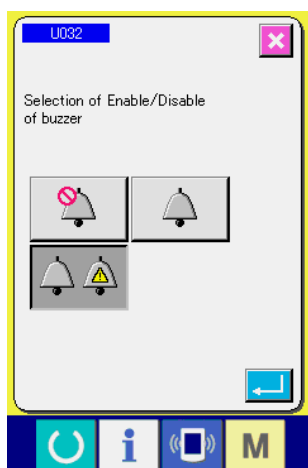


No. in blue color such as **U032** is put on the data items to select pictographs and the pictographs displayed in the change screen can be selected.


→ For the details of memory switch data, refer to **“II-3. MEMORY SWITCH DATA LISTTION” p.88.**


2-26. Using information




Oil replacement (grease-up) time, needle replacement time, cleaning time, etc. can be specified and the warning notice can be performed after the lapse of the specified time.

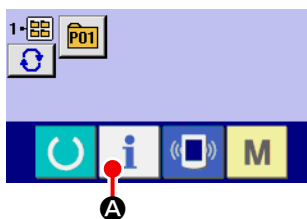(1) Information screen

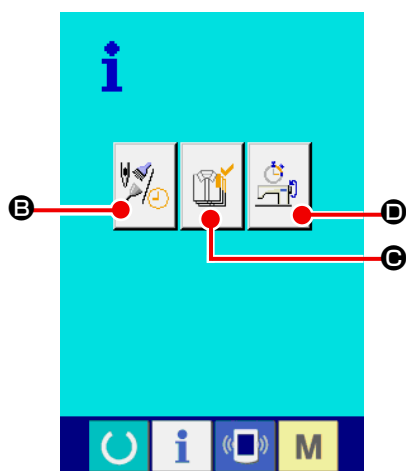


When information key  **A** of the switch seat section is pressed in the data input screen, the information screen is displayed.






		Name	Description
B		Maintenance and inspection information	The maintenance and inspection information screen is displayed.
C		Production control information	The production control screen is displayed.
D		Operation measurement	The operation measurement screen is displayed.

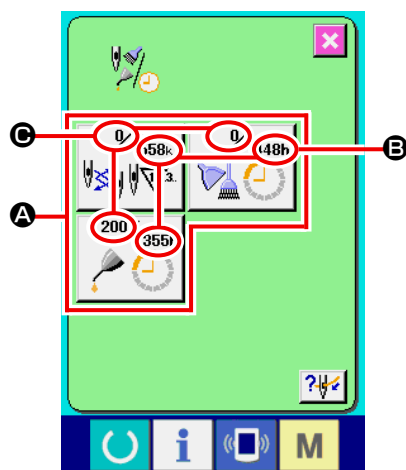(2) Maintenance and inspection information screen




Information on the following three items is displayed in the maintenance and inspection information screen.

- Needle replacement : 
(1,000 stitches)
- Cleaning time (hour) : 
- Oil replacement time (hour) : 


The interval to inform of the inspection for each item in button **A** is displayed at **B**, and remaining time up to the replacement is displayed at **C**. In addition, remaining time up to the replacement can be cleared.


① Perform clearing remaining time up to the replacement.

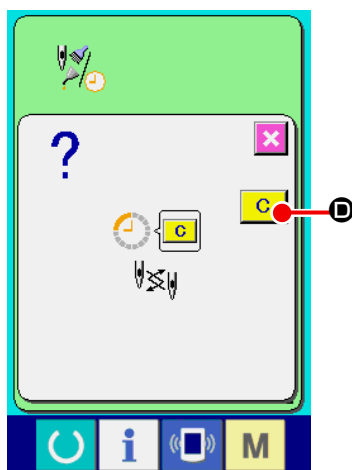


When button **A** of the item you desire to clear is pressed, the time of replacement clear screen is displayed. When CLEAR button **C** **D** is pressed, the remaining time up to the replacement is cleared.

② Display the threading diagram.

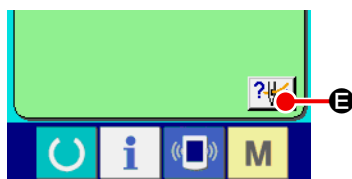


When threading button  **E** displayed in the maintenance and inspection screen is pressed, the needle thread threading diagram is displayed.

Observe it when performing threading.

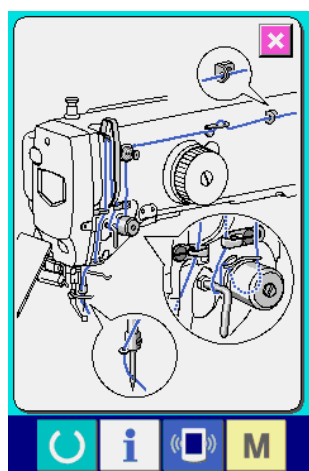

③ Releasing procedure of the warning

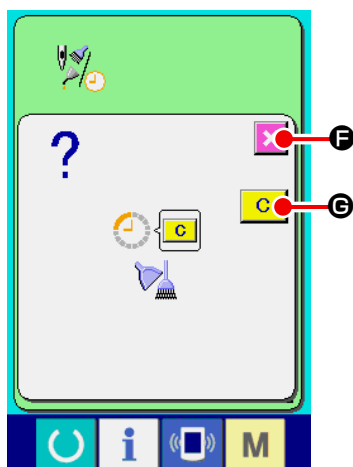

When the designated inspection time is reached, the warning screen is displayed.

In case of clearing the inspection time, press CLEAR button **C** **G**.

The inspection time is cleared and the pop-up is closed. In case of not clearing the inspection time, press CANCEL button **X** **F** and close the pop-up.

Every time one sewing is completed, the warning screen is displayed until the inspection time is cleared.

Warning Nos. of the respective items are as follows.

- Needle replacement : A201
- Cleaning time : A202
- Oil replacement time : A203




For the grease-up portion, refer to the item of “III-1-7. Replenishing the designated places with grease” p.111.

(3) Production management information screen

[Display procedure]


On the production control screen, it is possible to specify the start of production, to display the number of pieces produced from the start of production to the present, to display the target number of pieces to be produced, etc. On the production control screen, two different display methods are available as described below.

Press the PRODUCTION CONTROL SCREEN DISPLAY button on the information screen. The production control screen is displayed.

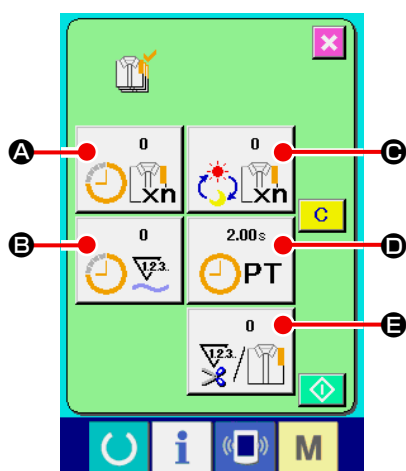


		Name	Description
A		Current target value	The target number of pieces to be sewn at the present time is automatically displayed.
B		Actual result value	The number of sewn pieces is automatically displayed.
C		Final target value	The final target number of pieces to be sewn is displayed.
D		Pitch time	The time required to finish one process is displayed (in seconds).
E		Number of times of thread trimming	The number of times of thread trimming per process is displayed.

To display from the sewing screen

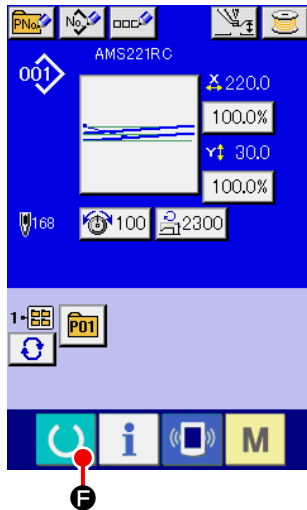


①-1 Displaying the sewing screen

Press the READY key **F** on the data input screen to display the sewing screen.

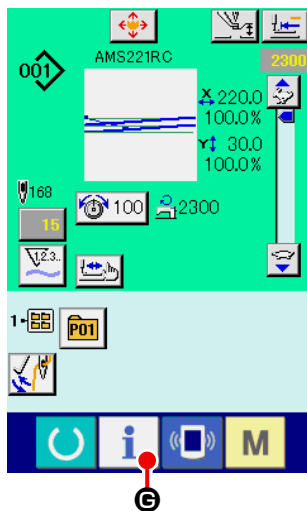


①-2 Displaying the production control screen

Press the INFORMATION key **G** on the sewing screen to display the production control screen.

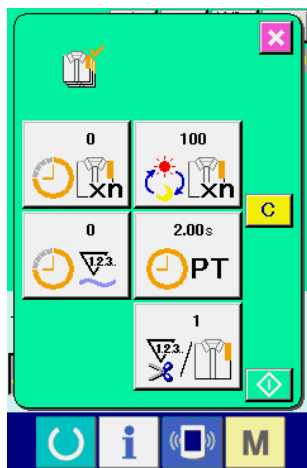


When the production control screen is displayed from the sewing screen, the display content and function available on the production control screen are same as those when it is displayed as described in "To display the production control screen from the information screen".

(4) Setting the production control information

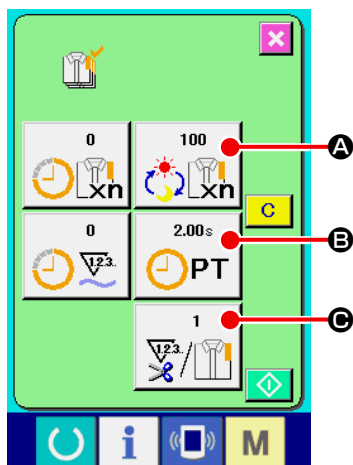


① Entering the final target value

Enter the number of pieces to be produced in the sewing process that you are going to carry out.

Press FINAL TARGET VALUE button  **A** to display the final target value input screen.

Enter a desired value with the numeric keypad or the UP/DOWN buttons.

After you have entered the desired value, press ENTER button

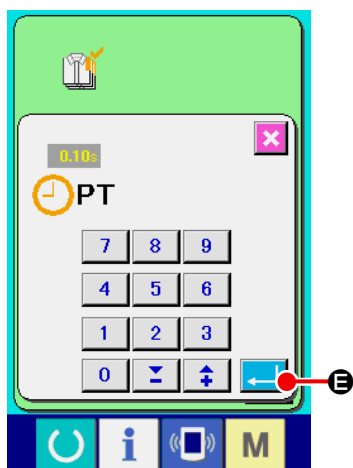

② Entering the pitch time

Then, enter the pitch time to be required to finish one process.

Press PITCH TIME button  **B** to display the pitch time input screen.


Enter a desired value with the numeric keypad or the UP/DOWN buttons.

After you have entered the desired value, press ENTER button



③ Entering the number of times of thread trimming

Then, enter the number of times of thread trimming per process. Press NUMBER OF TIMES OF THREAD TRIMMING button

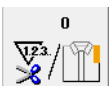
 **C** to display the number of times of thread trimming input screen.

Enter a desired value with the numeric keypad or the UP/DOWN buttons.

After you have entered the desired value, press ENTER button



* If the value you have entered is "0" (zero), the number of times of thread trimming will not be counted. Use by connecting an external switch.

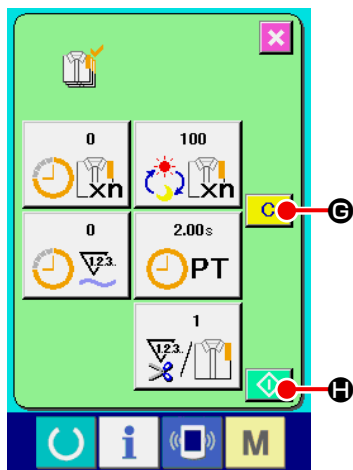

④ Starting counting the number of pieces produced

Press START button **H** to start counting the number of pieces produced.

⑤ Stopping counting



Display the production control screen following the [Display procedure] in "(3) Production management information screen" p.75.

If counting is in progress, STOP button **I** will be displayed.

Press STOP button **I** to stop counting.

After counting is stopped, START button **H** is displayed at the STOP button position. If you want to continue counting, re-press START button **H**.

The value counted will not be cleared until CLEAR button **G** is pressed.

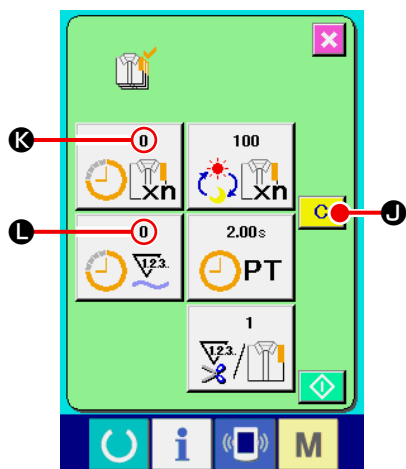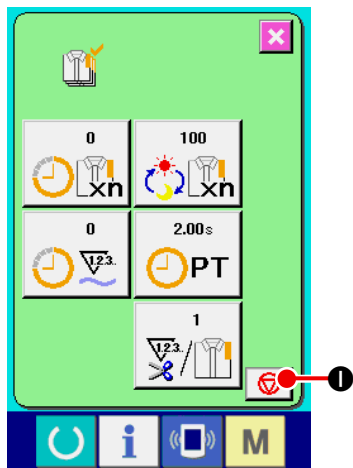

⑥ Clearing the count value


If you want to clear the value counted, stop counting and press CLEAR button **G**.

The values to be cleared are only the current target value **K** and actual result value **L**.


* The CLEAR button is displayed only when the counting is stopped.

Press CLEAR button **G** to display the clear confirmation screen.

Press CLEAR button **M** on the clear confirmation screen to clear the count value.

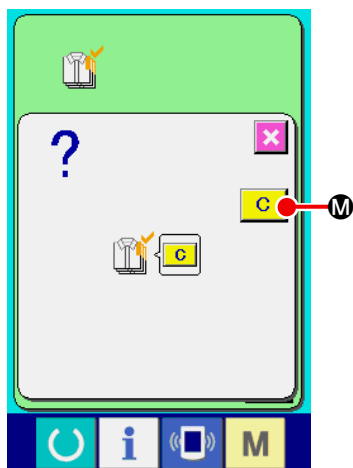

(5) Displaying the operation measurement

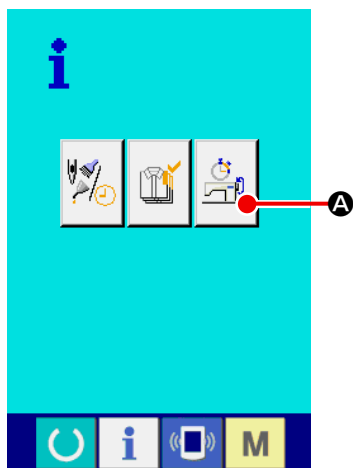


① Displaying the operation measurement screen

Press OPERATION MEASUREMENT SCREEN DISPLAY button




A on the information screen. The operation measurement screen is displayed.

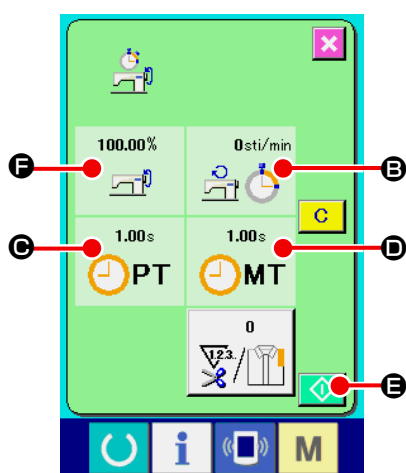

On the operation measurement screen, the following five information items are displayed.

- F** : The operation rate from the point at which the measurement has started is automatically displayed.
- B** : The average sewing machine speed from the point at which the measurement has started is automatically displayed.
- C** : The average pitch time from the point at which the measurement has started is automatically displayed.
- D** : The average machine time from the point at which the measurement has started is automatically displayed.
- E** : The number of times of thread trimming per process is displayed.


Input the number of times of thread trimming referring to Item ② described below.

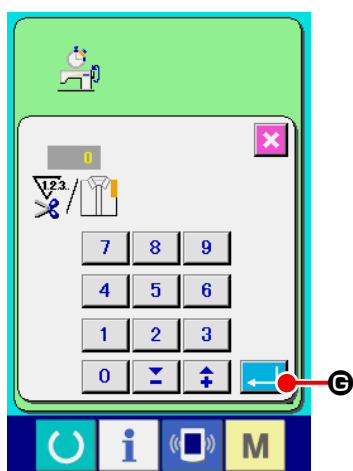

② Entering the number of times of thread trimming

Then, enter the number of times of thread trimming per process.

Press NUMBER OF TIMES OF THREAD TRIMMING button

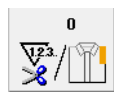

E to display the number of times of thread trimming input screen.


Enter a desired value with the numeric keypad or the UP/DOWN buttons.

After you have entered the desired value, press ENTER button




G.

- * If the value you have entered is "0" (zero), the number of times of thread trimming will not be counted.
Use by connecting an external switch.

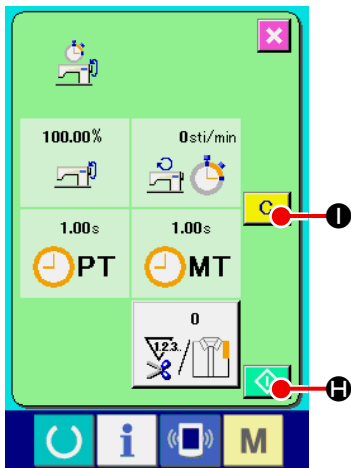

③ Starting the measurement

Press START button **H** to start the measurement of the respective pieces of data.

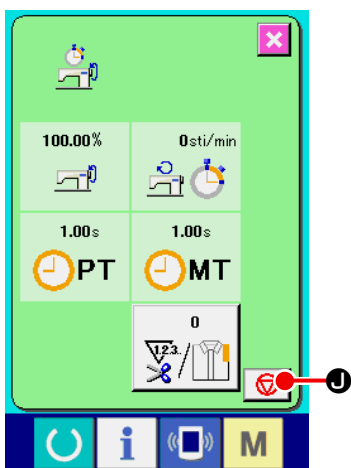

④ Stopping counting


Display the operation measurement screen referring to "(5) Displaying the operation measurement" p.79.

STOP button **J** will be displayed if the measurement is in progress.

Press STOP button **J** to stop the measurement.

After stopping measurement, START button **H** is displayed at the STOP button position. If you want to continue the measurement, press START button **H** again.

The measured values will not be cleared until CLEAR button **C** is pressed.

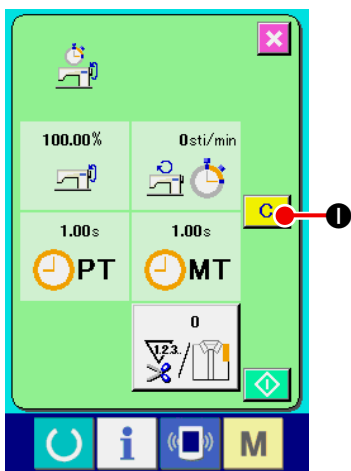


⑤ Clearing the count value

If you want to clear the value counted, stop counting and press CLEAR button **C**.

* The CLEAR button is displayed only when the counting is stopped.

Press CLEAR button **C** to display the clear confirmation screen.

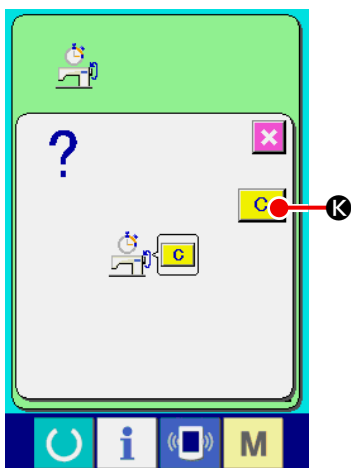

Press CLEAR button **C** on the clear confirmation screen to clear the count value.

2-27. Using communication function





Communication function can download the sewing data created with other sewing machine, creation of sewing data and sewing data created by editing device PM-1 to the sewing machine. In addition, the function can upload the aforementioned data to the media or personal computer.

As the means of communication, a media slot and USB port are prepared.

* However, SU-1 (data server utility) is necessary to perform download/upload from the personal computer.

(1) Handling possible data

Sewing data that can be handled are 4 kinds below, and the respective data formats are as shown below.

Data name		Extension	Description of data
Vector format data		VD00xxx.VDT	It is the data of needle entry point created with PM-1, and the data format that can be operated in common between JUKI sewing machines.
M3 data		AMS00xxx.M3	Pattern data for the AMS-B, -C and -D Series
Sewing standard format data		SD00xxx.DAT	Data of sewing standard format
Simplified program data		AMS00xxx.PRO	Simplified program data


xxx : file No.

* For the simplified program, see the Engineer's Manual.

(2) Performing communication by using the media

For handling way of the media, read [“II-1. PREFACE” p.16](#).

(3) Performing communication by using USB

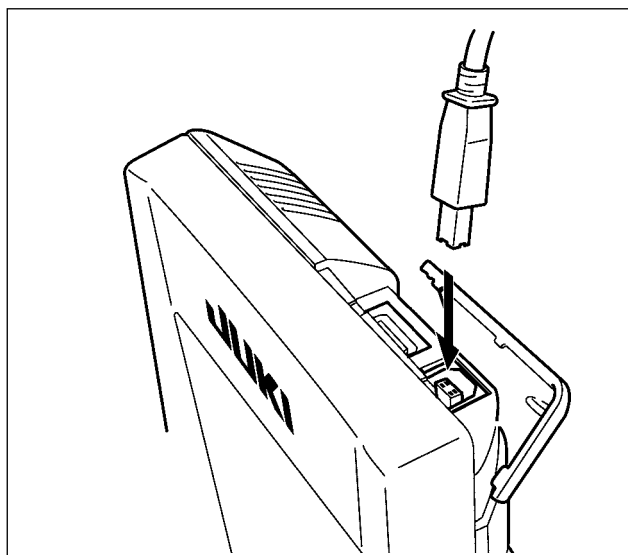


Data can be sent/received to/from a personal computer or the like, by means of a USB cable.




If the contact part becomes dirty, failure of contact will be caused. Do not touch by hand, and control so that dust, oil or other foreign material does not adhere to it. In addition, the inside element is damaged by static electricity or the like. So, be very careful when handling.

(4) Take-in of the data

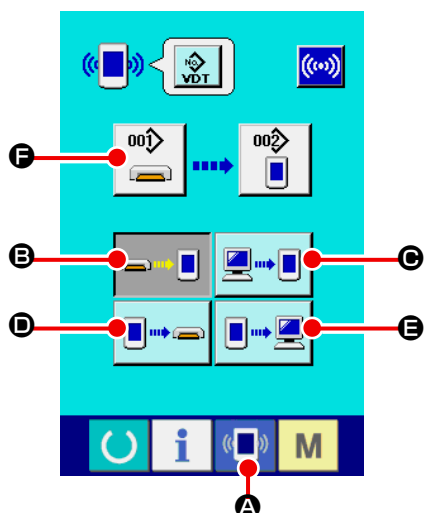

① Display the communication screen.

When communication switch  **A** of switch seat section is pressed in the data input screen, the communication screen is displayed.


② Select the communication procedure.

There are four communication procedures as described below.


- B** Writing data from media to panel
- C** Writing data from personal computer (server) to panel
- D** Writing data from panel to media
- E** Writing data from panel to personal computer (server)

Select the button of communication procedure you desire.


③ Select the data No.


When  **F** is pressed, the writing file selection screen is displayed.

Input the file No. of the data you desire to write. For the file No., input the numerals of the part xxx of VD00xxx .vdt of the file name. Designation of the pattern No. of writing destination can be performed in the same way. When the writing destination is the panel, pattern Nos. which have not been registered are displayed.

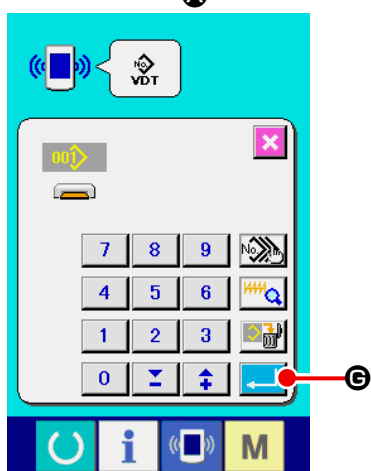


④ Determine the data No.

When ENTER button  **G** is pressed, the data No. selection screen is closed and the selection of the data No. has been completed.

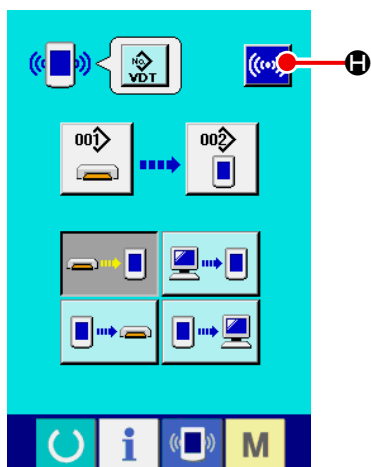


⑤ Start communication.

When COMMUNICATION START button  **H** is pressed, the data communication starts. The during communication screen is displayed during communication and the screen returns to the communication screen after the end of communication.




Do not open the cover during reading the data. Data may not be read in.

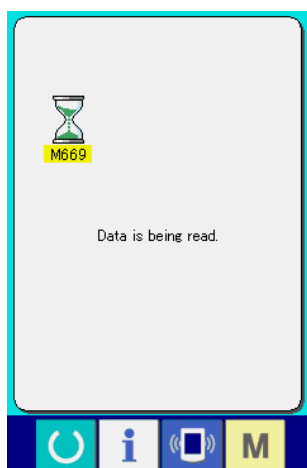


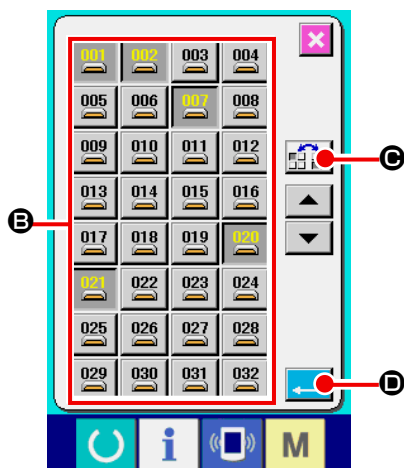
(5) Taking in plural data together

It is possible for vector data, M3 data and sewing standard format data to select plural writing data and write them together. Pattern No. of writing destination will become the same No. of the selected data No.

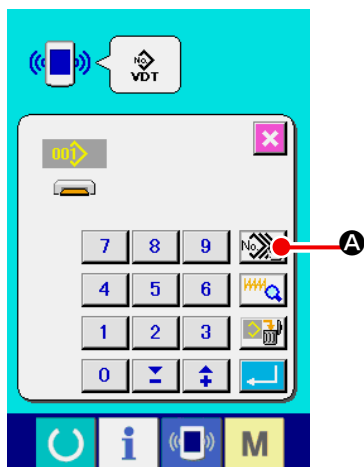


① Display the writing file selection screen.


When PLURAL SELECTION button  A is pressed, the data No. plural selection screen is displayed.




② Perform the data No. selection.


Since the list of existing data file numbers is displayed, press FILE NO. button B you desire to write. It is possible to invert the selected state of the button with INVERSION button  C.


③ Determine the data No.

When ENTER button  D is pressed, the data No. plural selection screen is closed and the data selection ends.

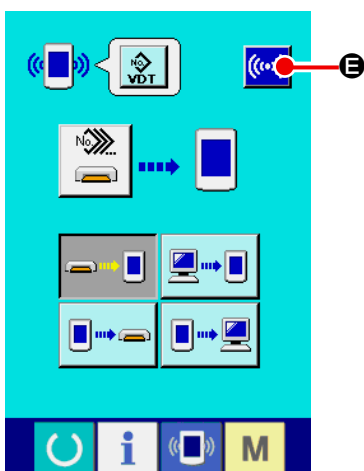




④ Start the communication.

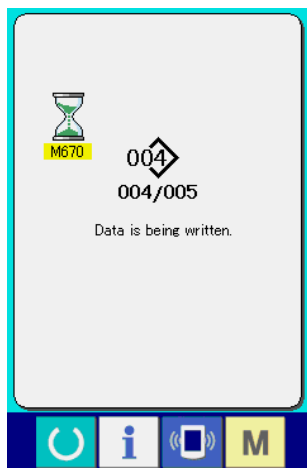When COMMUNICATION START button  E is pressed, the data communication starts.

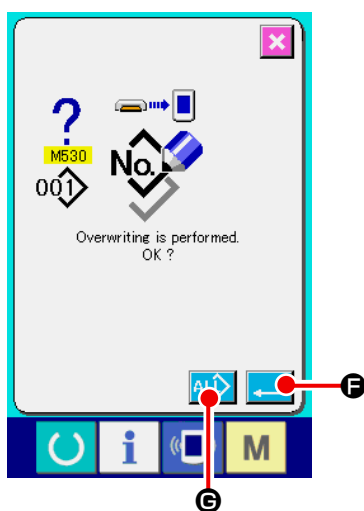


Data No. during communication, total number of writing data and number of data that have ended the data communication are displayed in the during communication screen.



- * When performing writing to the pattern No. which already exists, the overwriting confirmation screen is displayed before writing.
When performing overwriting, press ENTER button  **F**.
When performing overwriting all without displaying the overwriting confirmation screen, press OVERWRITING button  **G** in all cases.


2-28. Performing formatting of the media


To re-format a medium, the IP-420 has to be used. The IP-420 is not able to read any medium which is formatted on a personal computer.

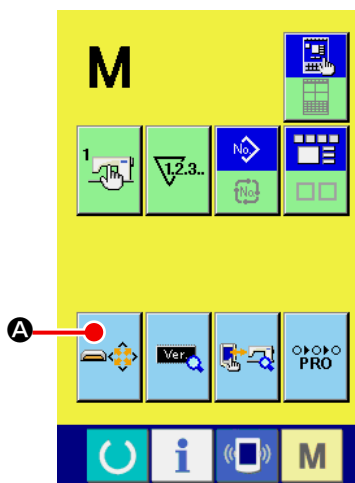


① Display the media format screen.

When **M** switch is held pressed for three seconds, MEDIA

FORMAT button  **A** is displayed on the screen. When this button is pressed, the media format screen is displayed.

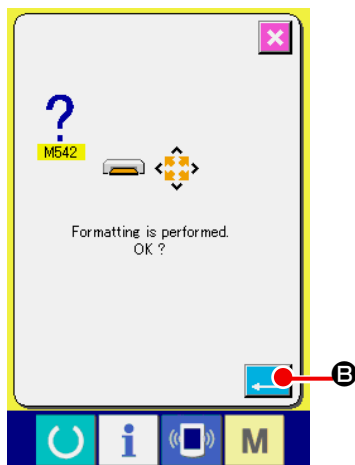

② Start formatting of the media.

Set the media you desire to format to the media slot, close the cover, press ENTER button  **B** and formatting starts. Save necessary data in the media to the other media before formatting. When formatting is performed, the inside data are deleted.

When two or more media are connected to the sewing machine, the medium to be formatted is determined by the predetermined priority order.

High ← Low

CF(TM) slot ← USB device 1 ← USB device 2 ←



When a CompactFlash (TM) is inserted in the CF(TM) slot, the CompactFlash (TM) will be formatted according to the priority order as shown above.


Refer to the USB specifications for the priority order of access.

2-29. Operation at the time of X/Y motor position slip

When X/Y motor detects the position slip, the error screen is displayed.


Timing of error display can be changed with the selection of memory switch. For the details, refer to the Engineer's Manual.

(1) When the error is displayed during sewing

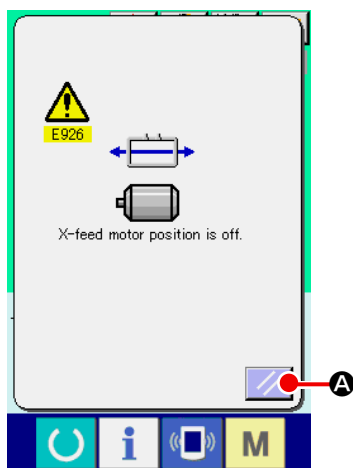

① Release the error.

Press RESET button  **A** to release the error and the thread trimming pop-up is displayed.

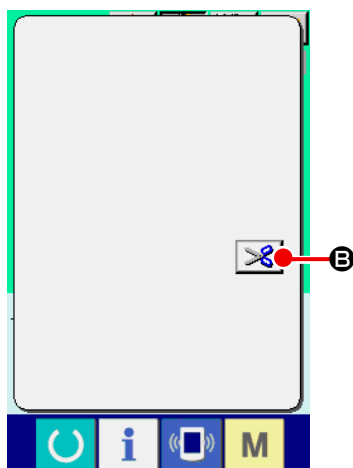


② Perform thread trimming.



When it seems to be no problem after checking the stitches, depress the start pedal without change and re-start the sewing.


If not, press THREAD TRIM button  **B** and perform thread trimming.

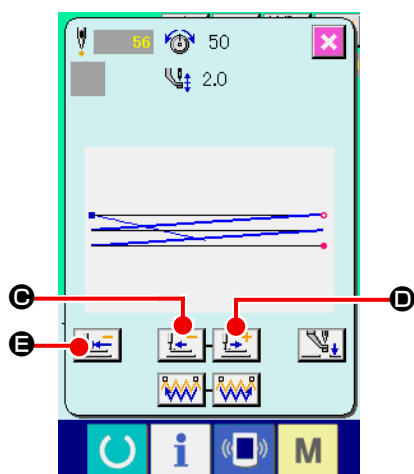When performing thread trimming, the feed forward/back pop-up is displayed.



③ Adjust the presser to the re-sewing position.


Every time FEED BACK button  **C** is pressed, the presser returns by one stitch. Every time FEED FORWARD button  **D** is pressed, the presser moves forward by one stitch. Move the presser up to the re-sewing position.

In addition, when RETURN TO ORIGIN button  **E** is pressed, the pop-up is closed, the sewing screen is displayed, and the presser returns to the sewing start position.


④ Re-start sewing.

When the pedal is depressed, sewing starts again.

(2) When the error is displayed after end of sewing

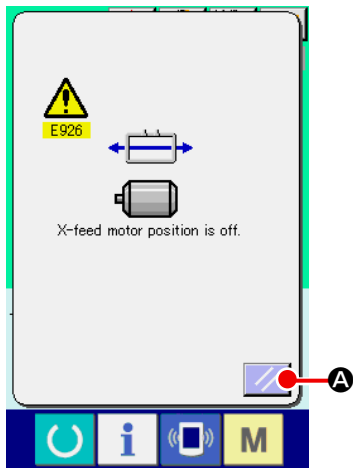

① Release the error.


When RESET button  **A** is pressed, and the error is released, the sewing screen is displayed.

② Perform sewing work again from the start.

When the pedal is depressed, sewing starts.

(3) When the rest switch is not displayed

When a large slip is detected, the reset switch is not displayed.

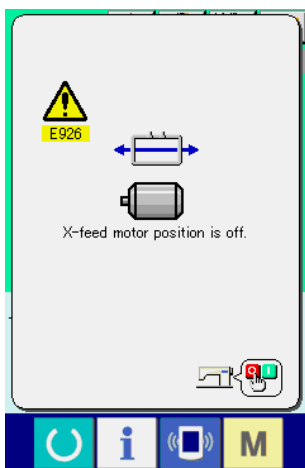













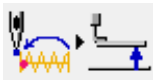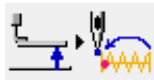








① Turn OFF the power.










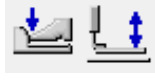

3. MEMORY SWITCH DATA LISTTION























Memory switch data are the motion data that the sewing machine has in common and the data that operate on all sewing patterns in common.



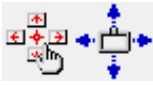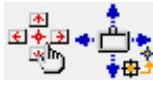

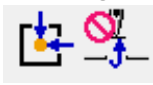









3-1.Data list

No.	Item		Setting range	Edit unit
U001	Maximum sewing speed		200 to 2300	100sti/min
U008	Thread tension setting at the time of thread trimming		0 to 200	1
U009	Thread tension changeover timing at the time of thread trimming		-6 to 15	1
U010	Sewing speed of 1st stitch In case of without thread clamp		200 to 1500	100sti/min
U011	Sewing speed of 2st stitch In case of without thread clamp		200 to 2300	100sti/min
U012	Sewing speed of 3st stitch In case of without thread clamp		200 to 2300	100sti/min
U013	Sewing speed of 4st stitch In case of without thread clamp		200 to 2300	100sti/min
U014	Sewing speed of 5st stitch In case of without thread clamp		200 to 2300	100sti/min
U015	Thread tension of 1st stitch In case of without thread clamp		0 to 200	1
U016	Thread tension changeover timing at the time of sewing start In case of without thread clamp		-5 to 2	1
U018	Counter motion selection	 Sewing counter No. of pcs. counter Bobbin counter	---	---
U026	Height of eight of presser at the time of 2 step stroke		10 to 300	1
U032	Buzzer sound can be prohibited.	 Without buzzer sound Panel operating sound Panel operating sound + error	---	---
U036	Feed motion timing is selected. Set the timing in “-” direction when stitch is not well-tightened.		-8 to 16	1





No.	Item	Setting range	Edit unit
U037	<p>State of the presser after end of sewing is selected.</p> <div>   </div> <p>Presser goes up after moving at start of sewing.</p> <p>Presser goes up immediately after end of sewing.</p> <div>   </div> <p>Presser goes up by pedal operation after moving at start of sewing.</p> <p>The presser foot moves to the sewing starting point, then goes up with the presser foot lifting switch. The sewing machine starts sewing with the start switch. When the sewing machine stops midway through sewing, the presser foot goes up at the pre-set presser lift position.</p>	---	---
U038	<p>Presser lifting motion at the end of sewing can be set.</p> <div>   </div> <p>With presser up</p> <p>Without presser up</p>	---	---
U039	<p>Origin retrieval can be performed every time after end of sewing (other than combination sewing)</p> <div>   </div> <p>Without origin retrieval</p> <p>With origin retrieval</p>	---	---
U040	<p>Origin retrieval in combination sewing can be set.</p> <div>    </div> <p>Without origin retrieval</p> <p>Every time 1 pattern is finished.</p> <p>Every time 1 cycle is finished.</p>	---	---
U041	<p>State of presser when sewing machine stops by temporary stop command can be selected.</p> <div>   </div> <p>Presser rise.</p> <p>Presser rise with presser switch.</p>	---	---
U042	<p>Needle stop position is set.</p> <div>   </div> <p>UP position</p> <p>Upper dead point</p>	---	---
U046	<p>Thread trimming can be prohibited.</p> <div>   </div> <p>Normal</p> <p>Thread trimming prohibited</p>	---	---
U048	<p>Route of return to origin by return to origin button can be selected.</p> <div>    </div> <p>Linear return</p> <p>Reverse return of pattern</p> <p>Origin retrieval → Sewing start point</p>	---	---
U049	<p>Bobbin winding speed can be set.</p> 	800 to 2000	100sti/min






No.	Item	Setting range	Edit unit
U051	Motion method of wiper can be selected.  Invalid  Magnet typewriter	---	---
U064	Unit of sewing shape size change can be selected.  %input  Actual size input	---	---
U068	Thread tension output time when setting thread tension can be set. 	0 to 20	1
U071	Thread breakage detection selection  Thread breakage detection invalid  Thread breakage detection valid	---	---
U072	Number of invalid stitches at the start of sewing of thread breakage detection 	0 to 15 stitches	1 stitch
U073	Number of invalid stitches during sewing of thread breakage detection 	0 to 15 stitches	1 stitch
U081	Feeding frame control : pedal open/close Operation order of feeding frame by pedal operation at the normal time is set.  <p> 0 : Solid presser 1 : Right/left separated presser (Without priority of right/left) 2 : Right/left separated presser (In the order of right to left) 3 : Right/left separated presser (In the order of left to right) 4 to 7 : Special type (*1) 8 : Solid presser 9 : Solid presser 2-step stroke 10 : Right/left separated presser 2-step stroke (Without priority of right/left) 11 : Right/left separated presser 2-step stroke (Order of right to left) 12 : Right/left separated presser 2-step stroke (Order of left to right) 13 to 99 : Solid presser *1 : When using these items, refer to Engineer's Manual. </p>	0 to 99	1
U082	Feeding frame control : midway stop time open/close Operation order of feeding frame by pedal operation when lifting the feeding frame by the temporary stop command in the pattern data is set.  <p> 0 : Solid presser 1 : Right/left separated presser (Without priority of right/left) 2 : Right/left separated presser (In the order of right to left) 3 : Right/left separated presser (In the order of left to right) 4 to 7 : Special type (*1) 8 : Solid presser 9 : Solid presser 2-step stroke 10 : Right/left separated presser 2-step stroke (Without priority of right/left) 11 : Right/left separated presser 2-step stroke (Order of right to left) 12 : Right/left separated presser 2-step stroke (Order of left to right) 13 to 99 : Solid presser *1 : When using these items, refer to Engineer's Manual. </p>	0 to 99	1

No.	Item	Setting range	Edit unit
U084	Pedal SW1 with/without latch  Without  With	---	---
U085	Pedal SW2 with/without latch  Without  With	---	---
U086	Pedal SW3 with/without latch  Without  With	---	---
U087	Pedal SW4 with/without latch  Without  With	---	---
U088	Enlarging/reducing function mode  Prohibited  Increasing/ decreasing number of stitches (Pitch is fixed.)  Increasing/decreasing pitch (Number of stitches is fixed.)	---	---
U089	Jog move function mode  Prohibited  Parallel move  2nd origin specified later	---	---
U091	Retainer compensation motion : selection of motion  Without motion  With motion	---	---
U094	Selection of needle upper dead point at the time of origin retrieval/ return to origin  Without  With	---	---
U097	Temporary stop : thread trimming operation  Automatic thread trimming  Manual (Thread trimming by turning Stop SW ON again)	---	---
U104	Intermediate presser lowering timing  Immediately before start- up of machine head  Synchronized with the last feeding frame	---	---











No.	Item	Setting range	Edit unit
U105	Intermediate presser : wiper sweeping position  Sweeping above intermediate presser  Sweeping above intermediate presser (position where intermediate presser lowers most)  Sweeping below intermediate presser	---	---
U108	With/without air pressure detection  Without  With	---	---
U112	Intermediate presser DOWN position setting → Refer to “I-4-7. Intermediate presser height” p.10. 	0 to 7.0mm	0.1
U129	With/without needle cooler control  Without  With	---	---
U145	The time to automatically exit from the count-up screen can be set. 	0 to 99	1
U146	Presence / absence of shape display when pattern is selected  Without  With	---	---
U209	With/without output of the machine head LED switch  With  Without	---	---
U245	Grease-up error Clearing of number of stitches of grease-up is performed. → Refer to “III-1-7. Replenishing the designated places with grease” p.111. 	---	---
U500	Language selection <div> <div>日本語 Japanese</div> <div>English English</div> <div>中文繁體字 Chinese (traditional)</div> <div>中文简体字 Chinese (simplified)</div> </div> <div> <div>Español Spanish</div> <div>Italiano Italian</div> <div>Français French</div> <div>Deutsch German</div> </div> <div> <div>Português Portuguese</div> <div>Türkçe Turkish</div> <div>Tiếng Việt Vietnamese</div> <div>한국어 Korean</div> </div> <div> <div>Indonesia Indonesian</div> <div>Русский Russian</div> </div>		




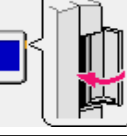







3-2. Initial value list








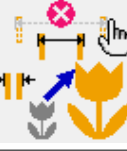

No.	Item	Initial value
U001	Maximum sewing speed	2300
U008	Thread tension setting at the time of thread trimming	0
U009	Thread tension changeover timing at the time of thread trimming	14
U010	Sewing speed of 1st stitch (In case of without thread clamp)	200
U011	Sewing speed of 2st stitch (In case of without thread clamp)	200
U012	Sewing speed of 3st stitch (In case of without thread clamp)	200
U013	Sewing speed of 4st stitch (In case of without thread clamp)	500
U014	Sewing speed of 5st stitch (In case of without thread clamp)	1000
U015	Thread tension of 1st stitch (In case of without thread clamp)	0
U016	Thread tension changeover timing at the time of sewing start (In case of without thread clamp)	-5
U018	Counter motion selection	
U026	Height of eight of presser at the time of 2 step stroke	35
U032	Buzzer sound can be prohibited.	
U036	Feed motion timing is selected.	5
U037	State of the presser after end of sewing is selected.	
U038	Presser lifting motion at the end of sewing can be set.	
U039	Origin retrieval can be performed every time after end of sewing. (other than combination sewing)	
U040	Origin retrieval in combination sewing can be set.	
U041	State of presser when sewing machine stops by temporary stop command can be selected.	
U042	Needle stop position is set.	
U046	Thread trimming can be prohibited.	
U048	Route of return to origin by return to origin button can be selected.	
U049	Bobbin winding speed can be set.	1600
U051	Motion method of wiper can be selected.	
U064	Unit of sewing shape size change can be selected.	
U068	Thread tension output time when setting thread tension can be set.	20
U071	Thread breakage detection selection	
U072	Number of invalid stitches at the start of sewing of thread breakage detection	8
U073	Number of invalid stitches during sewing of thread breakage detection	3
U081	Feeding frame control : pedal open/close	0


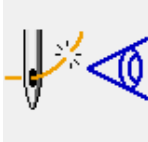



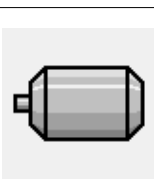
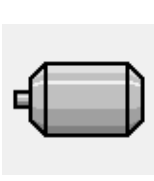
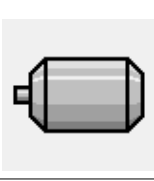

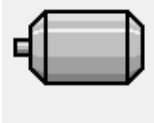
No.	Item	Initial value
U082	Feeding frame control : midway stop time open/close	0
U084	Pedal SW1 with/without latch	
U085	Pedal SW2 with/without latch	
U086	Pedal SW3 with/without latch	
U087	Pedal SW4 with/without latch	
U088	Enlarging/reducing function mode	
U089	Jog move function mode	
U091	Retainer compensation motion : selection of motion	
U094	Selection of needle upper dead point at the time of origin retrieval/return to origin	
U097	Temporary stop : thread trimming operation	
U103	Intermediate presser with/without control	
U104	Intermediate presser lowering timing	
U105	Intermediate presser : wiper sweeping position	
U108	With/without air pressure detection	
U112	Intermediate presser DOWN position setting	3.5
U129	With/without needle cooler control	
U145	The time to automatically exit from the count-up screen can be set.	0
U146	Presence / absence of shape display when pattern is selected	
U209	Machine head LED switch	
U245	Grease-up error	-
U500	Language selection	Not set







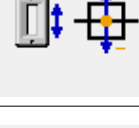


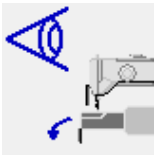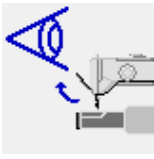
4. ERROR CODE LIST




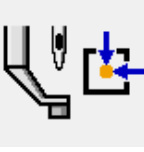
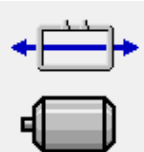
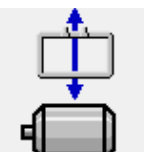
Error code	Display	Description of error	Display message	How to recover	Place of recovery
E007		Machine lock Main shaft of the sewing machine fails to rotate due to some trouble	Machine is locked.	Turn OFF the power	
E008		Head connector abnormality Memory of machine head cannot be read.	Undefined head is selected.	Turn OFF the power	
E010		Pattern No. error Pattern No. which is backed up is not registered to data ROM, or setting of reading inoperative is performed.	Specified pattern does not exist.	Possible to re-enter after reset.	Previous screen
E011		External media not inserted External media is not inserted.	Media is not inserted.	Possible to re-enter after reset.	Previous screen
E012		Read error Data read from external media cannot be performed.	Data cannot be read.	Possible to re-start after reset.	Previous screen
E013		Write error Data write from external media cannot be performed.	Data cannot be written.	Possible to re-start after reset.	Previous screen
E015		Format error Format cannot be performed.	Formatting is impossible.	Possible to re-start after reset.	Previous screen
E016		External media capacity over Capacity of external media is short.	Capacity is insufficient. (Media)	Possible to re-start after reset.	Previous screen
E017		Machine memory capacity over Machine memory capacity is insufficient.	Capacity is insufficient. (MAIN EEPROM)	Possible to re-start after reset.	Previous screen
E019		File size over File is too large.	Pattern data is too large. (Approx. 50,000 stitches)	Possible to re-start after reset.	Previous screen




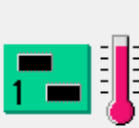





Error code	Display	Description of error	Display message	How to recover	Place of recovery
E024		Pattern data size over Memory size is over.	Memory size to large.	Possible to re-start after reset.	Data input screen
E027		Read error Data read from server cannot be performed.	Data cannot be read.	Possible to re-start after reset.	Previous screen
E028		Write error Data write from server cannot be performed.	Data cannot be written.	Possible to re-start after reset.	Previous screen
E029		Media slot release error Lid of media slot is open.	Cover of Media slot is open.	Possible to re-start after reset.	Previous screen
E030		Needle bar position missing error Needle bar is not in the predetermined position.	Needle is not in a proper position.	Turn hand pulley to bring needle bar to its predetermined position.	Data input screen
E031		Air pressure drop Air pressure is dropped.	Low air pressure.	Possible to re-start after reset.	Data input screen
E032		File interchanging error File cannot be read.	File cannot be read.	Possible to re-start after reset.	Data input screen
E040		Sewing area over	Move limit is exceeded.	Possible to re-start after reset.	Sewing screen
E043		Enlarging error Sewing pitch exceeds Max. pitch.	Max. Pitch is exceeded.	Possible to re-start after reset.	Data input screen
E045		Pattern data error	Pattern data no good.	Possible to re-start after reset.	Data input screen
E050		Stop switch When stop switch is pressed during machine running.	Temporary stop switch is pressed.	Possible to re-start after reset.	Step screen

Error code	Display	Description of error	Display message	How to recover	Place of recovery
E052		Thread breakage detection error When thread breakage is detected.	Thread breakage is detected.	Possible to re-start after reset.	Step screen
E061		Memory switch data error Memory switch data is broken or revision is old.	Memory switch data error	Turn OFF the power	
E080		External stop switch	External stop switch has been pressed	Possible to re-start after reset.	Step screen
E204		USB connection error With the number of times of sewing has reached 10 or more, with a USB device connected to the sewing machine	Never connect USB storage device to the machine during sewing.	Possible to re-start after reset.	Sewing screen
E220		Grease-up warning At the time of operation of 100 million stitches → Refer to “III-1-7. Replenishing the designated places with grease” p.111.	Important : Grease is running out. Replace grease machine.	Possible to re-start after reset.	Data input screen
E221		Grease-up error At the time of operation of 120 million stitches The sewing machine is put in the sewing-impossible status. It is possible to clear with memoryswitch U245 . → Refer to “III-1-7. Replenishing the designated places with grease” p.111.	Important : Grease has run out. Replace grease machine.	Possible to re-start after reset.	Data input screen
E305		Cloth cutting knife position error Cloth cutting knife is in the regular position.	Thread trimmer knife sensor cannot be detected.	Turn OFF the power	Data input screen
E307		External input command time out error Input is not performed for a fixed period of time with the external input command of vector data.	There is no input for a certain period of time with external input command of vector data.	Possible to re-start after reset.	Data input screen
E308		Time-out error of wait terminal There is no input to wait terminal for a certain period of time.	There is no input from wait terminal for a certain period of time.	Turn OFF the power	



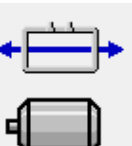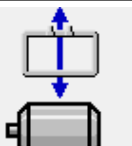



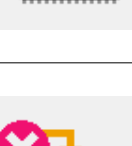



Error code	Display	Description of error	Display message	How to recover	Place of recovery
E311		Hook cover position error The hook cover position is not the normal position.	Hook cover is opened.	Possible to re-start after reset.	Previous screen
E312		Eye protection cover position error Eye protection cover position is not the normal position.	The eye protection is opened.	Possible to re-start after reset.	Previous screen
E406		Password mismatch error	Password does not match. Re-enter password from the beginning.	Possible to re-start after reset.	Password input screen
E703		Panel is connected to the sewing machine which is not supposed. (Machine type error) When the machine type code of system is not proper in the initial communication.	Model of sewing machine is different from that of panel.	Possible to rewrite program after pressing down communication switch.	Communication screen
E704		Inconsistency of system version System software version is inconsistent in the initial communication.	Version of program incompatible.	Possible to rewrite program after pressing down communication switch.	Communication screen
E730		Main shaft motor encoder defectiveness When encoder of the sewing machine motor is abnormal.	Sewing machine motor is defective. (Encoder A and B phases)	Turn OFF the power	
E731		Main motor hole sensor is defective or position sensor is defective. Hole sensor or position sensor of the sewing machine motor is defective.	Sewing machine motor is defective. (Encoder U, V, and W phases)	Turn OFF the power	
E733		Reverse rotation of main shaft motor When sewing machine motor rotates in reverse direction.	Sewing machine motor runs in the reverse direction.	Turn OFF the power	
E802		Power electrical discontinuity detection	Power instantaneously lost.	Turn OFF the power	
E811		Overvoltage When input power is more than the specified value.	Input voltage is too high. (Check input voltage.)	Turn OFF the power	

Error code	Display	Description of error	Display message	How to recover	Place of recovery
E813		Low voltage When input power is less than the specified value.	Input voltage is too low. (Check input voltage.)	Turn OFF the power	
E901		Main shaft motor IPM abnormality When IPM of servo control p.c.b. is abnormal.	SDC p.c.b. is defective. (IPM)	Turn OFF the power	
E903		Stepping motor power abnormality When stepping motor power of SERVO CONTROL p. c. b. fluctuates more than $\pm 15\%$.	Power of SDC p.c.b. is defective. (Stepping motor power 85 V)	Turn OFF the power	
E904		Solenoid power abnormality When solenoid power of SERVO CONTROL p. c. b. fluctuates more than $\pm 15\%$.	Power of SDC p.c.b. is defective. (Solenoid power 33 V)	Turn OFF the power	
E905		Heat sink temperature for SERVO CONTROL p. c. b. abnormality Turn ON the power again after taking overheat time of SERVO CONTROL p. c. b.	Temperature of SDC P.C.B is to high.	Turn OFF the power	
E907		X feed motor origin retrieval error When origin sensor signal is not inputted at the time of origin retrieval motion.	Origin of X motor cannot be found. (X origin sensor)	Turn OFF the power	
E908		Y feed motor origin retrieval error When origin sensor signal is not inputted at the time of origin retrieval motion.	Origin of Y motor cannot be found. (Y origin sensor)	Turn OFF the power	
E910		Presser motor origin retrieval error When origin sensor signal is not inputted at the time of origin retrieval motion.	Origin of presser thread trimmer motor cannot be found. (Presser thread trimmer origin sensor)	Turn OFF the power	
E914		Feed defective error Timing lag between feed and main shaft occurs.	X/Y feed trouble is detected.	Turn OFF the power	
E915		Communication abnormality between operation panel and MAIN CPU When abnormality occurs in data communication.	Communication is impossible. (Panel - MAIN p.c.b.)	Turn OFF the power	









Error code	Display	Description of error	Display message	How to recover	Place of recovery
E916		Communication abnormality between MAIN CPU and main shaft CPU When abnormality occurs in data communication.	Communication is impossible. (MAIN p.c.b. - Sewing machine motor p.c.b.)	Turn OFF the power	
E917		Communication failure between operation panel and personal computer When abnormality occurs in data communication.	Communication is impossible. (Panel - PC)	Possible to re-start after reset.	
E918		MAIN p. c. b. overheat Overheat of MAIN p. c. b. Turn ON the power again after taking time.	Main p.c.b temperature to high.	Turn OFF the power	
E925		Intermediate presser motor origin retrieval error Origin sensor of intermediate presser motor does not change at the time of origin retrieval.	Origin of intermediate presser cannot be found. (Intermediate presser origin sensor)	Turn OFF the power	
E926		X motor position slip error	X-feed motor position is off.	1. In case of error display during sewing Possible to re-start after reset 2. In case of error display after end of sewing Possible to re-start after reset 3. In case of others Turn OFF the power.	1. Step screen 2. Sewing screen 3. -----
E927		Y motor position slip error	Y-feed motor position is off.	1. In case of error display during sewing Possible to re-start after reset 2. In case of error display after end of sewing Possible to re-start after reset 3. In case of others Turn OFF the power.	1. Step screen 2. Sewing screen 3. -----

Error code	Display	Description of error	Display message	How to recover	Place of recovery
E928		Thread trimming motor position slip error	Thread trimming motor position is off.	Turn OFF the power	
E930		Intermediate presser motor position slip error	Intermediate presser motor position is off.	Turn OFF the power	
E931		X motor overload error	X-feed motor overload is excessive.	Turn OFF the power	
E932		Y motor overload error	Y-feed motor overload is excessive.	Turn OFF the power	
E933		Thread trimming motor overload error	Thread trimming motor overload is excessive.	Turn OFF the power	
E935		Intermediate presser motor overload error	Intermediate presser motor overload is excessive.	Turn OFF the power	
E936		X/Y motor out of range error	Feed motor position has exceeded the sewing area.	Turn OFF the power	
E943		MAIN CONTROL p.c.b. trouble When data writing to MAIN CONTROL p.c.b. cannot be performed	MAIN p.c.b. is defective. (EEPROM)	Turn OFF the power	
E946		HEAD RELAY p.c.b. trouble When data writing to HEAD RELAY p.c.b. cannot be performed	Head p.c.b. is defective. (EEPROM writing is defective.)	Turn OFF the power	

5. MESSAGE LIST

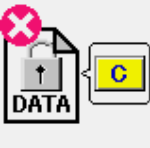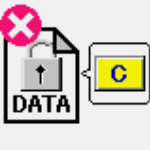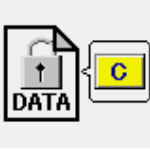Message No.	Display	Display message	Description
M520		Erasing is performed. OK ?	Erase confirmation of Users' pattern Erase is performed. OK ?
M521		Erasing is performed. OK ?	Erase confirmation of pattern button Erase is performed. OK ?
M522		Erasing is performed. OK ?	Erase confirmation cycle pattern Erase is performed. OK ?
M523		Pattern data is not stored. Erasing is OK?	Erase confirmation of backup data Pattern data is not stored in memory. Erase is OK ?
M528		Overwriting is performed. OK ?	Overwriting confirmation of users' pattern Overwriting is performed. OK ?
M529		Overwriting is performed. OK ?	Overwriting confirmation of media Overwriting is performed. OK ?
M530		Overwriting is performed. OK ?	Overwriting confirmation of vector data of panel/M3 data/sewing standard format data/simplified program data Overwriting is performed. OK ?
M531		Overwriting is performed. OK ?	Overwriting confirmation of vector data of media/M3 data/sewing standard format data/simplified program data Overwriting is performed. OK ?
M532		Overwriting is performed. OK ?	Overwriting confirmation of vector data on personal computer/M3 data/sewing standard format data/simplified program data Overwriting is performed. OK ?
M534		Overwriting is performed. OK ?	Overwriting confirmation of adjustment data of media and all machine data Overwriting is performed. OK ?

Message No.	Display	Display message	Description
M535		Overwriting is performed. OK ?	Overwriting confirmation of adjustment data on personal computer and all machine data Overwriting is performed. OK ?
M537		Deleting is performed. OK ?	Deletion confirmation of thread tension command Deleting is performed. OK ?
M538		Deleting is performed. OK ?	Deletion confirmation of intermediate presser increase/decrease value Deleting is performed. OK ?
M542		Formatting is performed. OK ?	Format confirmation Formatting is performed. OK ?
M544		Data does not exist.	Data corresponding to panel does not exist. Data does not exist.
M545		Data does not exist.	Data corresponding to media does not exist. Data does not exist.
M546		Data does not exist.	Data corresponding to personal computer does not exist. Data does not exist.
M547		Overwriting cannot be performed since data exists.	Overwriting prohibition on pattern data Overwriting cannot be performed since data exists.
M548		Overwriting cannot be performed since data exists.	Overwriting prohibition on media data Overwriting cannot be performed since data exists.
M549		Overwriting cannot be performed since data exists.	Overwriting prohibition on data on personal computer Overwriting cannot be performed since data exists.
M550		There is back-up data of body input.	Backup data information on main body input There is back-up data of body input.

Message No.	Display	Display message	Description
M554		Key-lock customization data have been initialized.	Customized data initialization notice Customized key-lock data has been initialized.
M555		Key-lock customization data are broken. Initializing is OK?	Customized data breakage Customized key-lock data has broken. Initialization is performed. OK?
M556		Key-lock customization data are to be initialized. OK?	Initialization confirmation of customized data Customized key-lock data is initialized. OK?
M557		Clears password Yes or No?	Confirmation of clearance of password setting Clears password Yes or no
M653		Formatting is performed.	During formatting Formatting is performed.
M669		Data is being read.	During data reading Data is being read.
M670		Data is being written.	During data writing Data is being written.
M671		Data is being converted.	During data converting Data is being converted.

III. MAINTENANCE OF SAWING MACHINE



1. MAINTENANCE

1-1. Adjusting the height of the needle bar (Changing the length of the needle)



WARNING :

Turn OFF the power before starting the work so as to prevent accidents caused by abrupt start of the sewing machine.

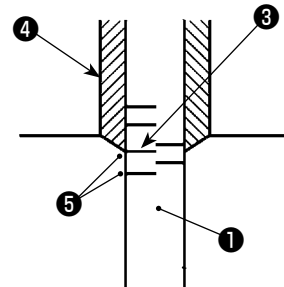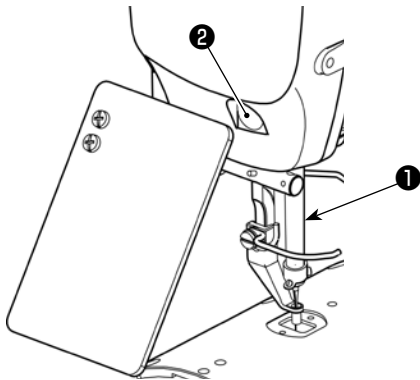

⑤ : Market line for DP x 17

* Turn ON the power once, and turn OFF the power again after making the intermediate presser in the lowered state.

- 1) Bring needle bar ① down to the lowest position of its stroke. Loosen needle bar connection screw ② and adjust so that the upper marker line ③ engraved on the needle bar aligns with the bottom end of the needle bar bushing lower ④.
- 2) As illustrated in the above figure, change the adjusting position in accordance with the needle count.




After the adjustment, turn the pulley to check for an extra load.

1-2. Needle and hook




WARNING :

Turn OFF the power before starting the work so as to prevent accidents caused by abrupt start of the sewing machine.

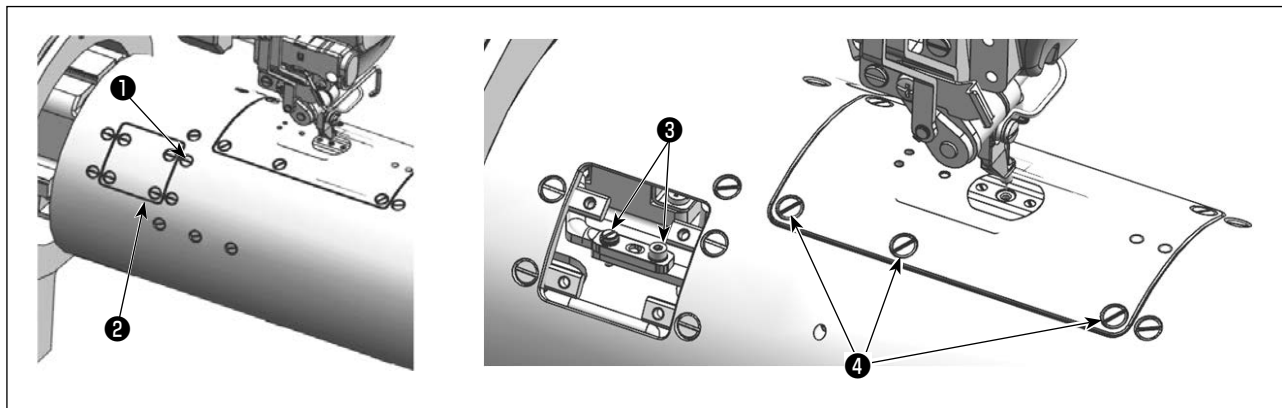


* Turn ON the power once, and turn OFF the power again after making the intermediate presser in the lowered state.


- 1) Remove screws ❶ (four pieces) to remove the lid ❷.
- 2) Remove screw ❸.
- 3) Remove screws ❹ (six pieces on the right and left) to remove the throat plate asm.

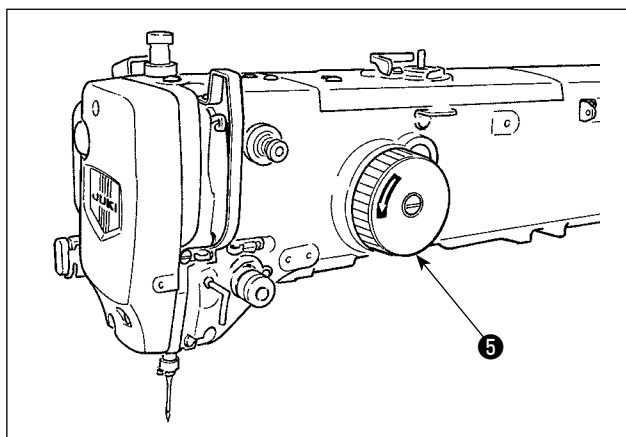

- 4) Turning pulley ❺ by hand to lift needle bar ❻, align lower marker line ❼ on needle bar with the lower end of the needle bar lower bushing ❸.

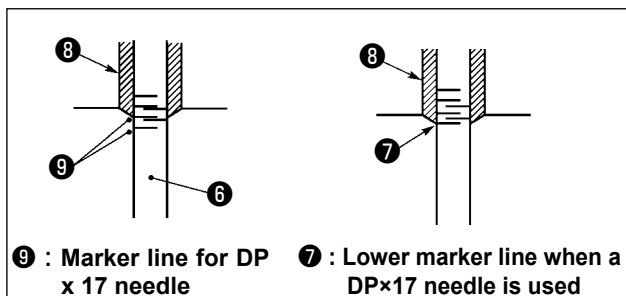


- 5) Loosen the hook setscrew ❿. Move the hook to adjust so that the blade point of the hook is aligned with the center of the needle.

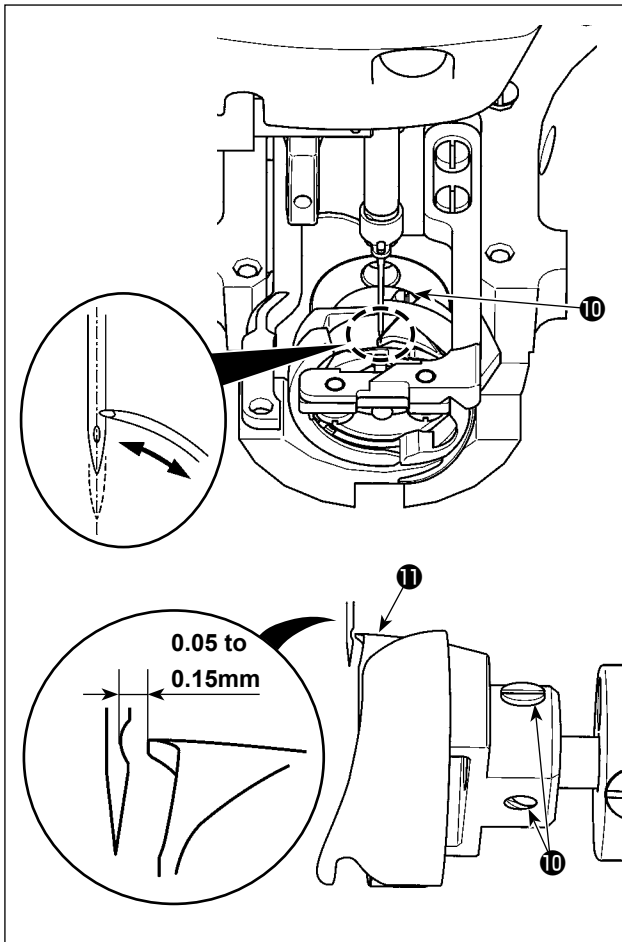

- 6) When the blade point of the hook is aligned with the center of the needle, adjust the longitudinal position of the hook so that a clearance of 0.05 to 0.15 mm is provided between the needle and hook blade point ⑪. Then, tighten setscrews ⑩.

[Adjusting the bobbin case stopper]

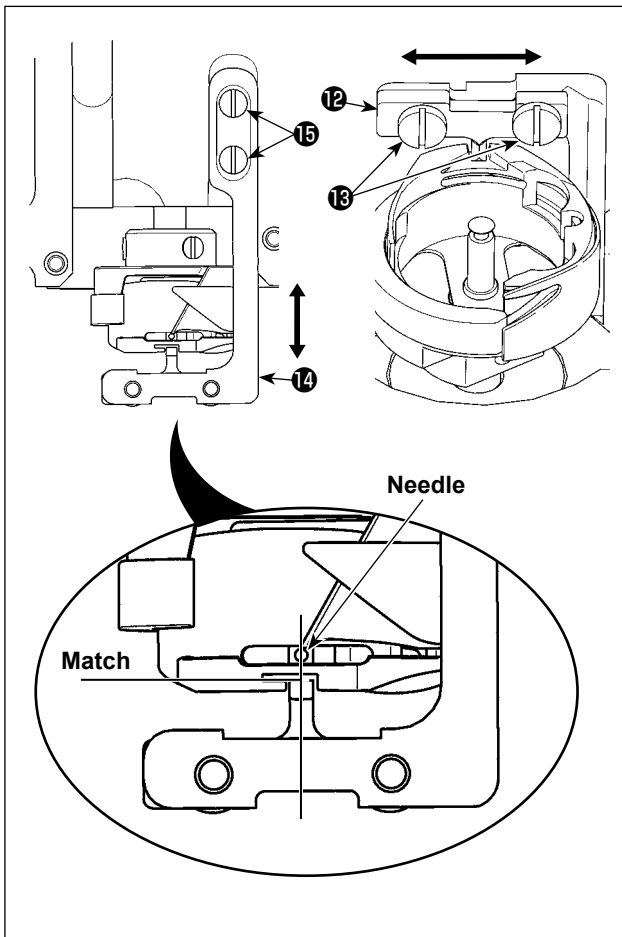

- 7) Loosen setscrews ⑬ of bobbin case stopper base ⑭.
- 8) Move the bobbin case stopper ⑫ to the right or left to align the center of bobbin case stopper ⑫ with the center of the needle. In this state, tighten setscrews ⑬.
- 9) Loosen setscrews ⑮ of bobbin case stopper base ⑭.
- 10) Move bobbin case stopper base ⑬ back or forth to align the end face of bobbin case stopper ⑫ with the end face of the notch of the bobbin case groove part. In this state, tighten setscrews ⑮.




When you have changed the needle with a lower count one, check the clearance between the tip of the needle or the intermediate presser and the wiper. If the appropriate clearance cannot be provided between the aforementioned parts, the wiper cannot be used. In such a case, turn OFF the wiper switch or change the setting value of memory switch **U105**.

1-3. Adjusting the vertical stroke of the intermediate presser



WARNING :

Turn OFF the power before starting the work so as to prevent accidents caused by abrupt start of the sewing machine.

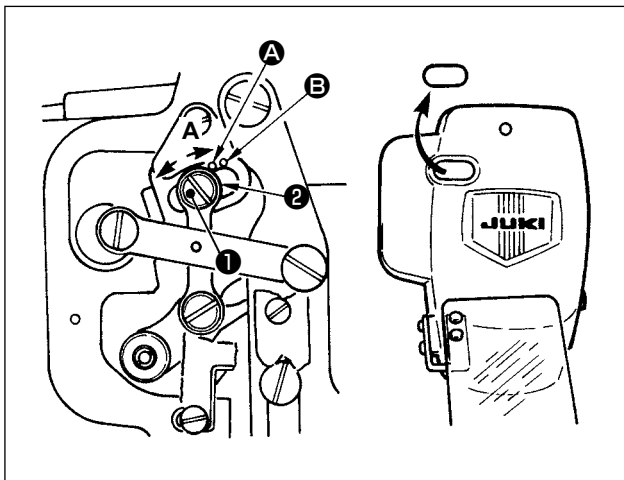

* Turn ON the power once, and turn OFF the power again after making the intermediate presser in the lowered state.

- 1) Remove face cover.
- 2) Turn handwheel to make the needle bar come down to its lowest point.
- 3) Loosen hinge screw ① and move it to the direction A to increase the stroke.
- 4) When marker dot A is aligned with the right side of the outer periphery of washer ②, the vertical stroke of the intermediate presser becomes 4 mm. And, when marker dot B is aligned with the right side of the outer periphery of the washer, it becomes 7 mm. (The vertical stroke of the intermediate presser is factory-set to 4 mm at the time of delivery.)





By removing the rubber plug in the face plate cover, adjustment can be performed without removing the face plate cover.

1-4. The moving knife and counter knife




WARNING :

Turn OFF the power before starting the work so as to prevent accidents caused by abrupt start of the sewing machine.

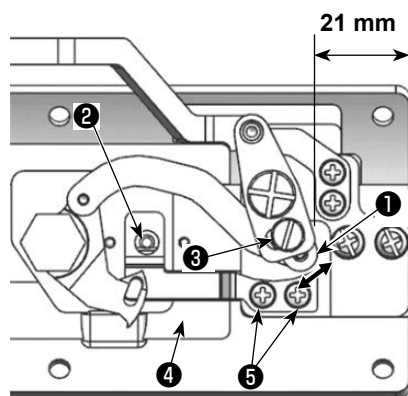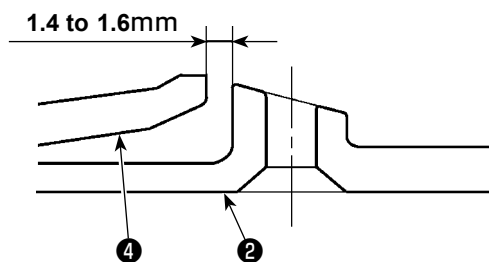

- 1) Loosen adjusting screw ① so that a clearance of 21 mm is provided between the front end of the throat plate and the top end of thread trimmer lever, small ③. To adjust, move the moving knife in the direction of arrow.
- 2) Loosen setscrew ⑤ so that a clearance of 1.4 to 1.6 mm is provided between needle hole guide ② and counter knife ④. To adjust, move the counter knife.

1-5. Thread breakage detector plate

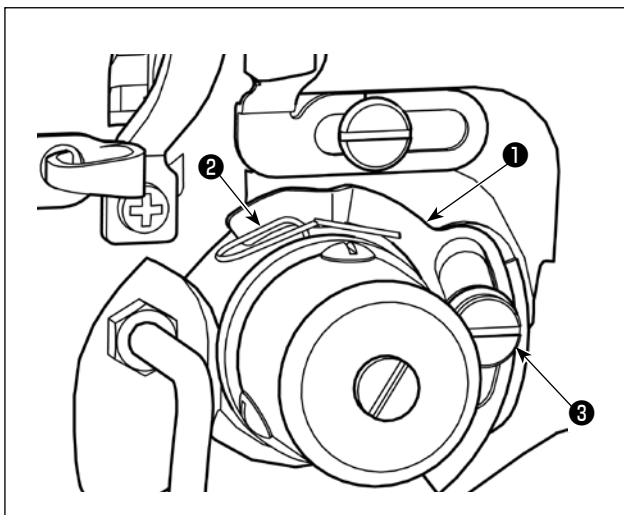


- 1) Adjust so that thread breakage detector plate **1** is always in contact with thread take-up spring **2** in the absence of needle thread. (Slack : approx. 0.5 mm)
- 2) Whenever the stroke of thread take-up spring **2** has been changed, be sure to readjust thread breakage detector plate **1**. To make this adjustment, loosen screw **3**.



Adjust so that thread breakage detector plate **1 does not touch any adjacent metallic parts other than thread take-up spring **2**.**



1-6. Amount of oil supplied to the hook

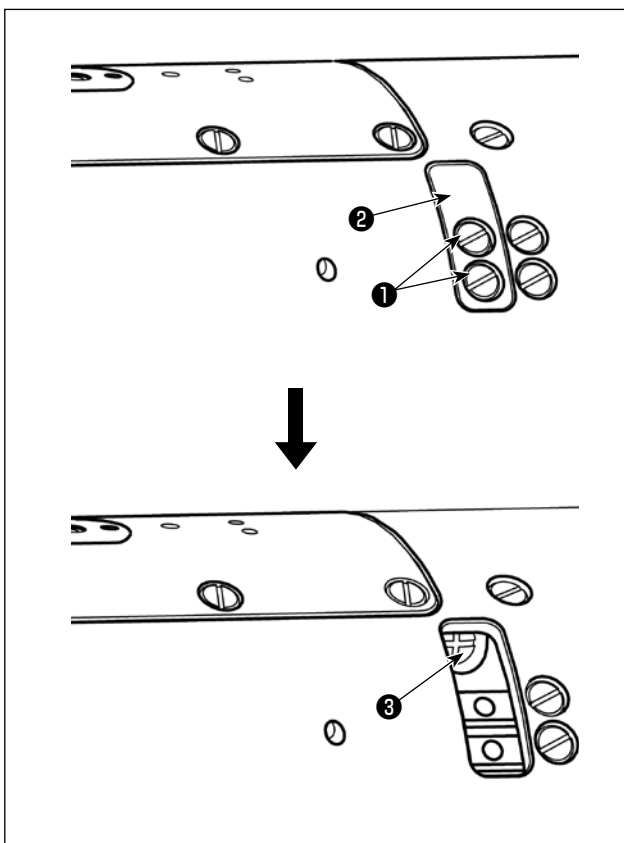

- 1) Remove two screws **1** and remove lid **2**.
- 2) Tighten adjustment screw **3** to decrease the amount of oil to be supplied to the hook.
- 3) Loosen adjustment screw **3** to increase the amount of oil to be supplied to the hook.



If you want to decrease the amount of oil, do not tighten adjustment screw **3 all at once, but gradually tighten it at about half-day intervals, while observing the amount of oil supplied to the hook. Excessive reduction of the oil can cause the hook to wear out.**

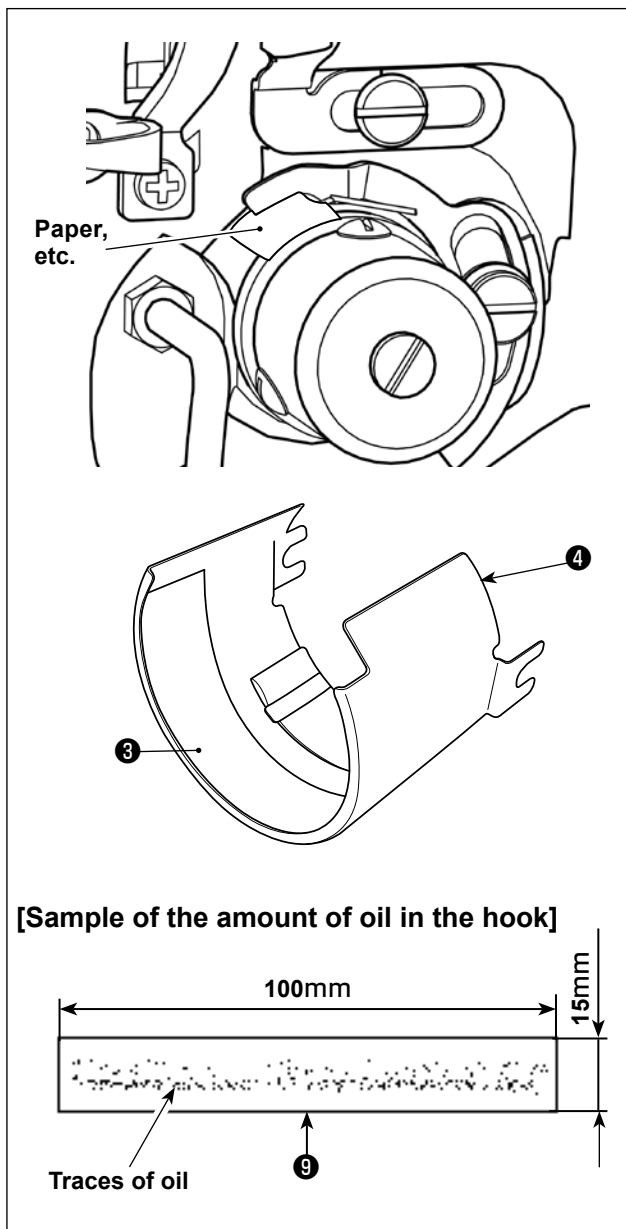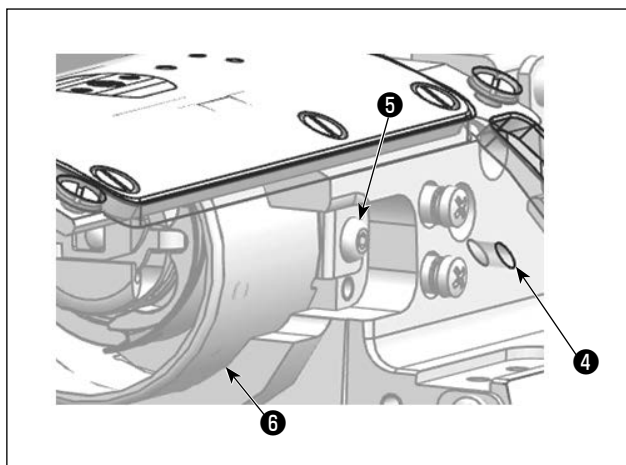

After the adjustment, be sure to check the amount of oil in the hook.

- 1) Loosen setscrew ⑤ (on the right and left) through hole ④ in the throat plate auxiliary cover surface, and draw out oil shield ⑥ toward you.
- 2) Remove the needle.
- 3) Place a piece of paper or the like between thread breakage detector plate ⑦ and thread take-up spring ⑧ to insulate them.
- 4) Remove oil and dust from oil shield ⑥. Then, place a piece of paper that measures "100 mm × 15 mm" ⑨ on the front of oil shield ⑥.
- 5) Install oil shield ⑥ to the sewing machine. Run the sewing machine with the I04 (at 2,300 sti/min) for five seconds.
- 6) After running the sewing machine, check the amount of oil by observing the traces of oil splashed on the paper ⑨.

The amount of oil in the hook will not change immediately after the adjustment.






Be sure to check the amount of oil after running the sewing machine with the I04 (at 2,300 sti/min) for about 10 minutes.


1-7. Replenishing the designated places with grease

- * Perform grease supplement when the errors below are displayed or once a year (either one which is earlier).

If grease has decreased due to cleaning of the sewing machine or any other reasons, be sure to immediately add grease.

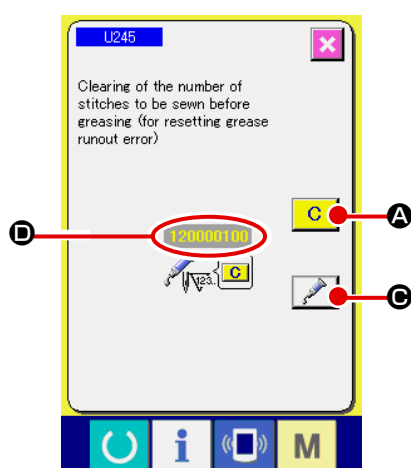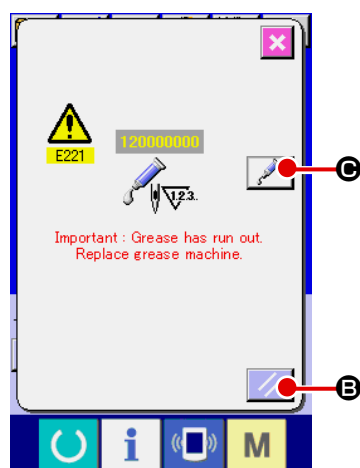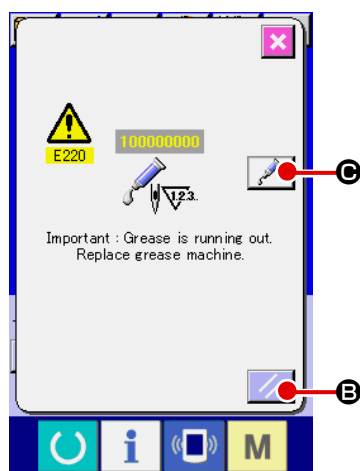


When the sewing machine has been used for a certain number of stitches, error "E220 Grease-up warning" is displayed. This display informs the operator of the time of replenishing the designated places with grease. Be sure to replenish the places with the grease below. Then call the memory switch **U245**, press CLEAR button **C** **A** and set NUMBER OF STITCHES **D** to "0".

Even after the display of the error "E220 Grease-up warning", when RESET key  **B** is pressed, the error is released, and the sewing machine can be continuously used. Afterwards, however, error code "E220 Grease-up warning" is displayed every time the power is re-turning ON.


In addition, when the sewing machine is used further for a certain period of time without replenishing the places with grease after the display of error No. E220, error "E221 Grease-up error" is displayed and the sewing machine fails to operate since the error cannot be released even when the RESET key is pressed.

When error "E221 Grease-up error" is displayed, be sure to replenish the designated places below with grease. Then call the memory switch **U245**, press CLEAR button **C** **A** and set NUMBER OF STITCHES **D** to "0".




When RESET key  **B** is pressed without replenishing the designated places with grease, error code "E221 Grease-up warning" is displayed every time the power is re-turning ON afterwards and the sewing machine fails to operate. So, be careful.

1. Error code E220 or E221 is displayed again unless UMBER OF STITCHES **D** is changed to "0" after replenishing the designated places with grease. When E221 is displayed, the sewing machine fails to operate. So, be careful.



2. When GREASE APPLYING POSITION DISPLAY button  **C** is pressed in each screen, the grease applying position can be confirmed in the panel display. Be sure, however, to perform the grease applying after turning OFF the power.

■ Adding grease to the needle bar upper and lower bushings section, slide block section and intermediate presser bar lower bushing section

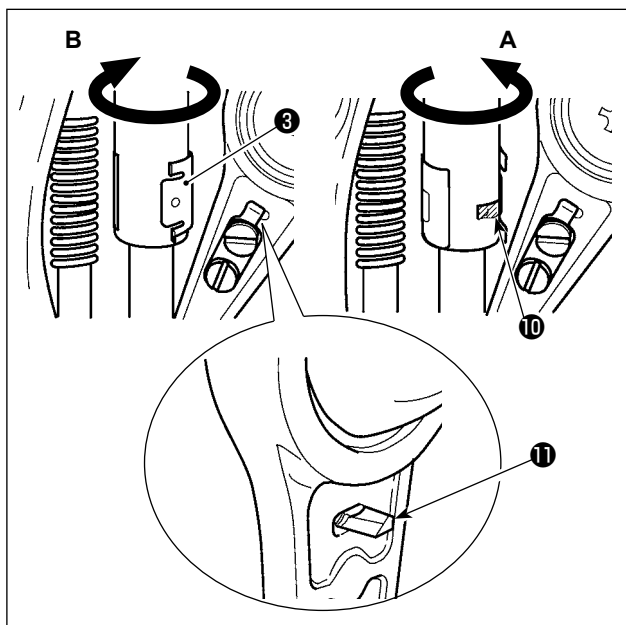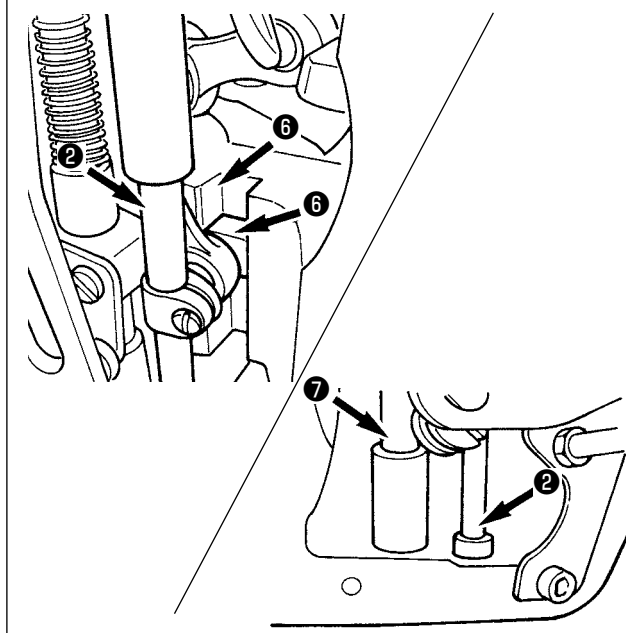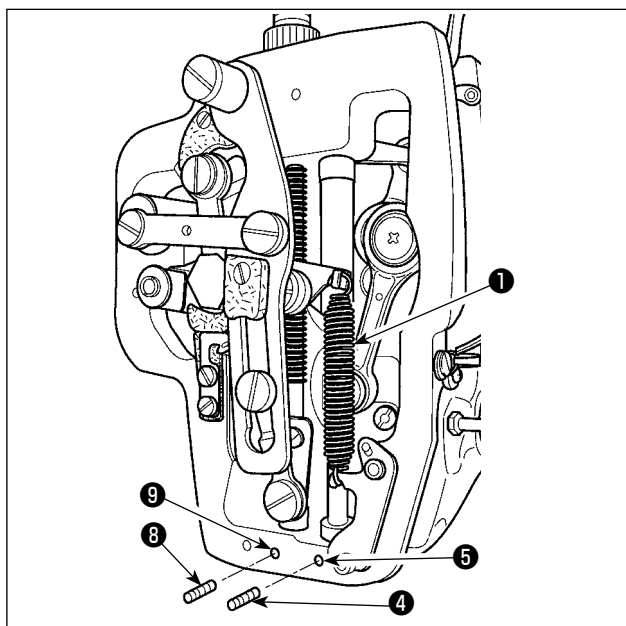


- 1) Open the frame cover to remove intermediate presser auxiliary spring B ①.
- 2) Apply JUKI Grease A onto periphery of needle bar ②. Turn the sewing machine by hand to apply grease onto the entire periphery of the needle bar.
Turn needle bar upper bushing grease cover ③ in the direction of arrow A to add grease through the grease inlet. After completion of the procedure, turn the needle bar upper bushing grease cover in the direction of arrow B to return to its home position.
Remove setscrew ④ from the needle bar lower bushing grease hole. Put JUKI Grease A through hole ⑤ and tighten setscrew ④ to fill inside the bushing with the grease.
- 3) Apply JUKI Grease A also onto groove section ⑥ of the slide block.
- 4) Apply JUKI Grease A onto periphery of intermediate presser bar ⑦.
Remove setscrew ⑧ from the intermediate presser bar bushing grease hole. Put JUKI Grease A through inlet ⑨. Tighten screw ⑧ to fill inside the bushing with JUKI Grease A.

1. Do not wipe off the grease applied onto the periphery of needle bar inside the frame. If the grease has decreased due to cleaning, air blow or other reasons, apply grease again without exceptions.
2. When operating the sewing machine, turn the needle bar upper bushing grease cover in direction B to close grease inlet ⑩.
3. The rear face of the needle bar crank rod has projection ⑪ with a sharp edge. So, care should be taken to the projection. Never put your finger to the rear face of the needle bar crank rod during greasing procedure.




■ Grease supplement to the face plate section

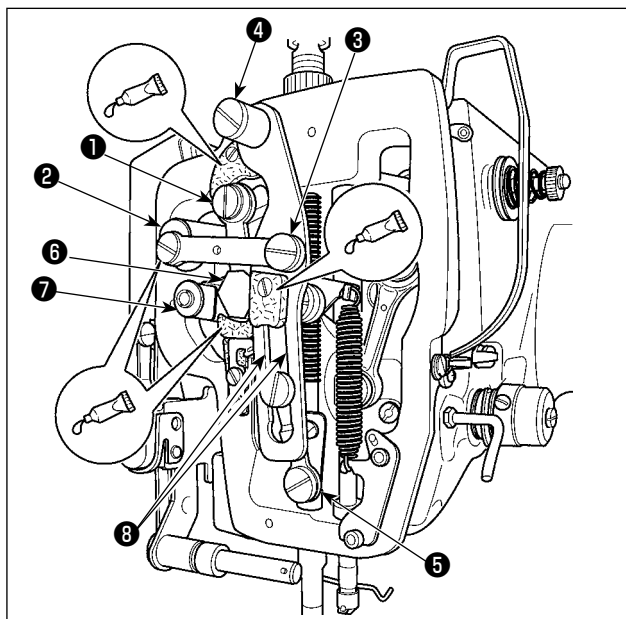


- 1) Open the face plate cover.
- 2) Add the JUKI Grease B onto the felt sections (3 locations), peripheral shoulder screw, fulcrums ① to ⑦ and guide groove section ⑧.

1-8. Cleaning the inside of the throat plate auxiliary cover

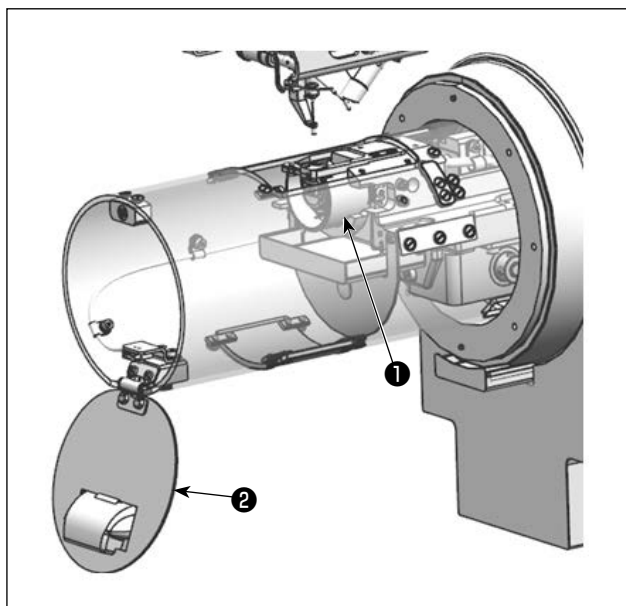


- 1) Remove oil shield ❶.
("III-1-6. Amount of oil supplied to the hook"
p.109)
- 2) Open cover ❷.

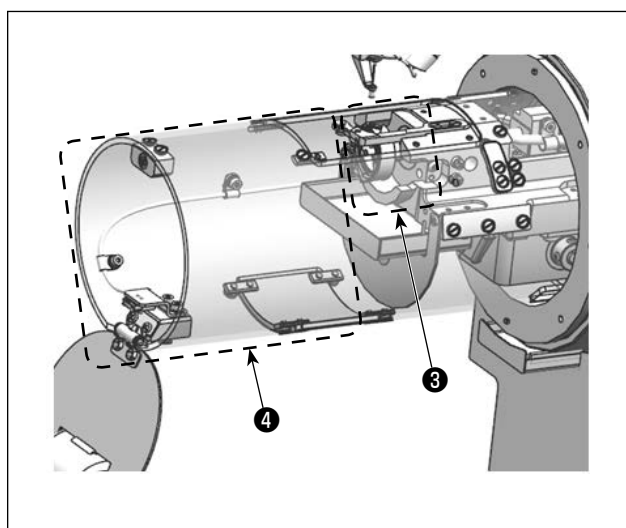

- 3) Clean hook section ❸ and remove any dust from
the inner surface of throat plate auxiliary cover ❹
section.

1-9. Draining waste oil

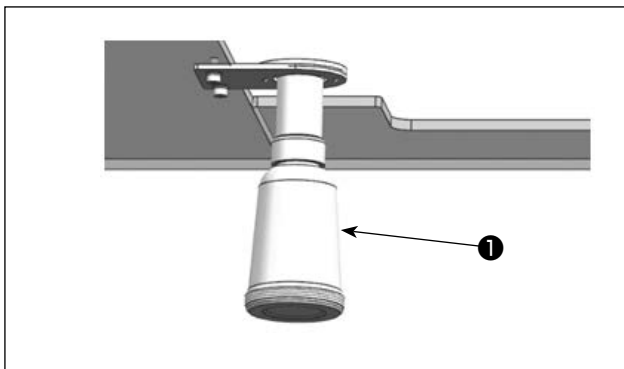


When polyethylene oiler ❶ becomes filled with oil, remove polyethylene oiler ❶ and drain the oil.

1-10. Replacing the fuse



WARNING :

1. To avoid electrical shock hazards, turn OFF the power and open the control box cover after about five minutes have passed.
2. Open the control box cover after turning OFF the power without fail. Then, replace with a new fuse with the specified capacity.

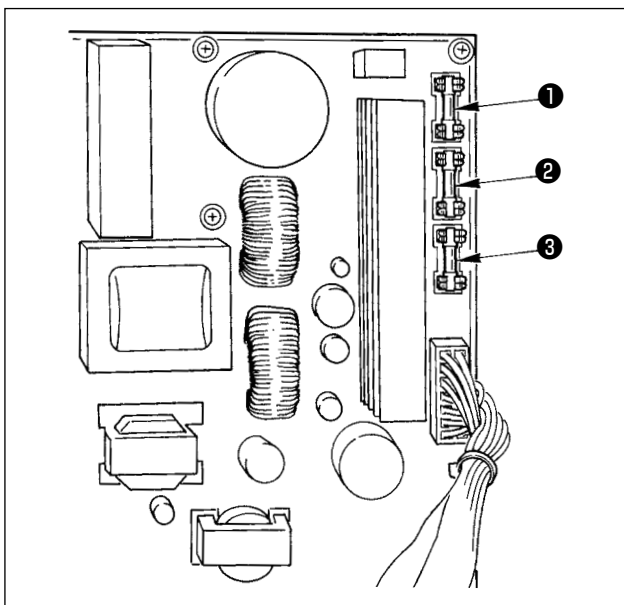

The machine uses the following three fuses :

- ❶ For pulse motor power supply protection
15A (time-lag fuse)
- ❷ For solenoid and pulse motor power supply protection
3.15A (time-lag fuse)
- ❸ For control power supply protection
2A (fast-blow type fuse)

1-11. Changing the voltage of 100⇔200V




WARNING :

To prevent personal injuries caused by electric shock hazards or abrupt start of the sewing machine, carry out the work after turning OFF the power switch and a lapse of 5 minutes or more. To prevent accidents caused by unaccustomed work or electric shock, request the electric expert or engineer of our dealers when adjusting the electrical components.


It is adaptable to the voltage of single phase 100V to 120V/3-phase 200V to 240V by changing the voltage changeover connector mounted on FLT p.c.b.

(Caution) When the changing procedure is wrong, the control box will be broken. So, be very careful.

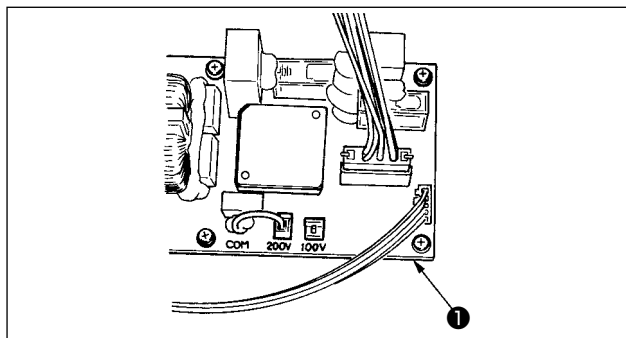

Changing procedure of the changeover connector

1. Turn OFF the power source with the power switch after confirming that the sewing machine has stopped.
2. Draw out the power cord from the power plug socket after confirming that the power switch is turned OFF. Then wait for five minutes or more.
3. Remove the front cover.
4. Remove four screws fixing the rear cover of the control box and slowly open the rear cover.

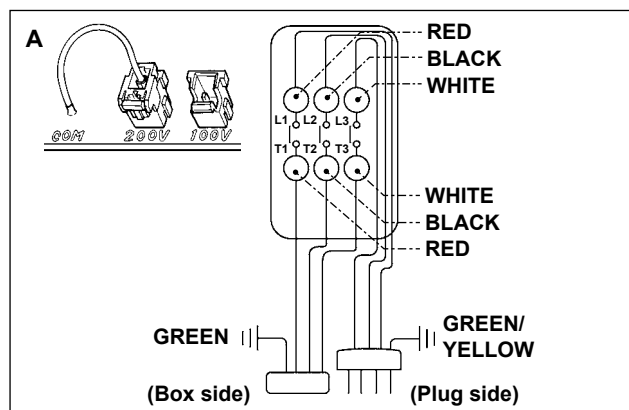


A. In case of using with 3-phase 200V to 240V

- Changing the changeover connector
Connect to 200V the 100/200V changeover connector of FLT p.c.b. ① located on the side of the Box Side of the control box.
- Connect the crimp style terminal of AC input cord to the power plug as shown in the figure.

B. In case of using with single phase 100V to 120V

- Changing the changeover connector
Connect to 100V the 100→200V changeover connector of FLT p.c.b. ① located on the side of the Box Side of the control box.
- Connect the crimp style terminal of AC input cord to the power plug as shown in the figure.

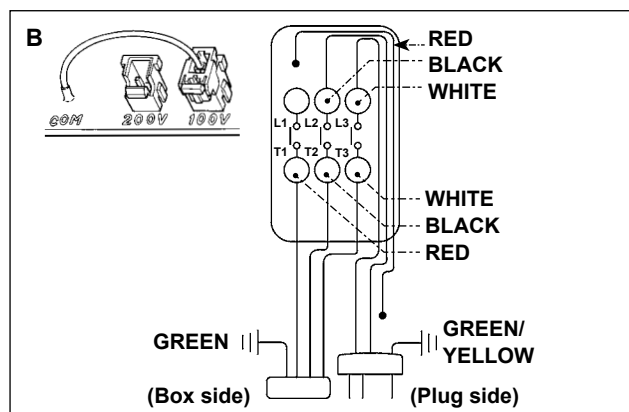


(Caution) Securely perform the insulation treatment to the red terminal which is not used with insulation tape or the like. (When the insulation is insufficient, there is a danger of electric shock or leakage current.)

C. In case of using with single phase 200V to 240V

- Changing the changeover connector
Connect to 200V the 100→200V changeover connector of FLT p.c.b. ① located on the side of the Box Side of the control box.
- Connect the crimp style terminal of AC input cord to the power plug as shown in the figure.

(Caution) Securely perform the insulation treatment to the red terminal which is not used with insulation tape or the like. (When the insulation is insufficient, there is a danger of electric shock or leakage current.)

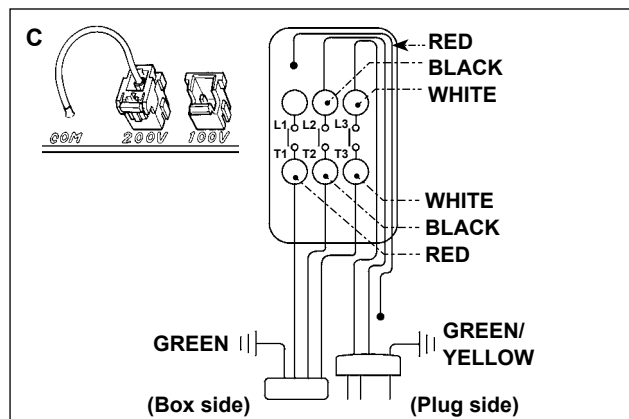

5. Check that the change has been performed without fail before closing the rear cover.
6. Be careful that the cord is not pinched between the rear cover and the control box main unit. Close the rear cover while pressing the lower side of rear cover, and tighten four screws.

1-12. Troubles and corrective measures (Sewing conditions)

Trouble	Cause	Corrective measures	Page
1. The needle thread slips off at the start of bartacking.	① Stitches are slipped at the start.	<ul style="list-style-type: none"> Adjust the clearance between the needle and the shuttle to 0.05 to 0.15 mm. 	108
	② The needle thread remaining on the needle after thread trimming is too short.	<ul style="list-style-type: none"> Set soft-start sewing at the start of bartacking. 	88
	③ The bobbin thread is too short.	<ul style="list-style-type: none"> Correct the thread tension release timing of the thread tension controller No. 2. 	9,10
	④ Needle thread tension at 1st stitch is too high.	<ul style="list-style-type: none"> Increase the tension of the thread take-up spring, or decrease the tension of the thread tension controller No. 1. 	9,10
	⑤ Threads fail to intertwine at the beginning of sewing.	<ul style="list-style-type: none"> Decrease the tension of the bobbin thread. Increase the clearance between the needle hole guide and the counter knife. Decrease the tension at 1st stitch. 	9
	⑥ Pitch at 1st stitch is too small.	<ul style="list-style-type: none"> Carry out reverse feed stitching to sew about two stitches at the beginning of sewing. Make the pitch at 1st stitch longer. Decrease the needle thread tension at 1st stitch. 	108
2. Thread often breaks or synthetic fiber thread splits finely.	① The hook and bobbin case stopper have scratches.	<ul style="list-style-type: none"> Remove the hook. Then, polish the surface with a fine whetstone or buff. 	10
	② The needle hole guide has scratches.	<ul style="list-style-type: none"> Buff the needle hole guide or replace it with a new one. 	
	③ The needle comes in contact with the intermediate presser.	<ul style="list-style-type: none"> Adjust the position of the intermediate presser. 	
	④ The needle thread tension is too high.	<ul style="list-style-type: none"> Reduce the needle thread tension. 	
	⑤ The tension of the thread take-up spring is too high.	<ul style="list-style-type: none"> Reduce the tension of the thread take-up spring. 	
	⑥ When taking up the thread, the thread is pierced with the needle tip.	<ul style="list-style-type: none"> Check the roughness of the needle tip. Use a ball point needle. 	
3. The needle often breaks.	① The needle is bent.	<ul style="list-style-type: none"> Replace the bent needle. 	7
	② The needle strikes the intermediate presser foot.	<ul style="list-style-type: none"> Correct the position of the intermediate presser foot. 	10
	③ The needle is too thin for the material.	<ul style="list-style-type: none"> Replace it with a thicker needle according to the material. 	106
	④ Timing between the needle and the hook is not correct.	<ul style="list-style-type: none"> Adjust the position of the needle and hook. 	
4. Threads are not trimmed. (Bobbin thread only)	① The counter knife is dull.	<ul style="list-style-type: none"> Replace the counter knife. 	108
	② The difference in level between the needle hole guide and the counter knife is not enough.	<ul style="list-style-type: none"> Increase the bend of the counter knife. 	
	③ The moving knife has been improperly positioned.	<ul style="list-style-type: none"> Correct the position of the moving knife. 	
	④ The last stitch is skipped.	<ul style="list-style-type: none"> Correct the timing between the needle and the shuttle. 	
	⑤ Bobbin thread tension is too low.	<ul style="list-style-type: none"> Increase the bobbin thread tension. 	
	⑥ Flopping of cloth	<ul style="list-style-type: none"> Lower the intermediate presser height of the last stitch. 	
5. Stitch skipping often occurs.	① The motions of the needle and shuttle are not properly synchronized.	<ul style="list-style-type: none"> Correct the positions of the needle and shuttle. 	106
	② The clearance between the needle and the bobbin case is too large.	<ul style="list-style-type: none"> Correct the positions of the needle and shuttle. 	106
	③ The needle is bent.	<ul style="list-style-type: none"> Replace the bent needle. 	7
	④ Length of needle thread remaining after thread trimming is too long. (In the case of stitch skipping within the 2nd to 10th stitch from the beginning of sewing)	<ul style="list-style-type: none"> Reduce the thread take-up spring pressure or increase the thread tension applied by the thread tension controller No. 1. 	9,10

Trouble	Cause	Corrective measures	Page
6. The needle thread comes out on the wrong side of the material.	① The needle thread tension is not high enough. ② The tension release mechanism fails to work properly. ③ The needle thread after thread trimming is too long.	○ Increase the needle thread tension. ○ Check whether or not the tension disc No. 2 is released during bar-tracking. ○ Increase the tension of the thread tension controller No. 1.	9 9
7. Thread end of the 1st stitch comes out on the right side of the material.	① Stitch skipping at the 1st stitch ② Needle used and thread used are thick in terms of the inner diameter of the intermediate presser. ③ Intermediate presser is not properly positioned in terms of the needle.	○ Adjust the hook timing faster by a 1/2 stitch. ○ Increase the inner diameter of intermediate presser. ○ Adjust the eccentricity between intermediate presser and needle so that needle enters in the center of intermediate presser.	
8. Threads break at time of thread trimming.	① The moving knife has been improperly position.	○ Correct the position of the moving knife.	108
9. Needle thread clamp fault	① The needle thread at the sewing start is too long.	○ Tighten thread tension controller No. 1 and make the length of needle thread 42 to 50 mm.	
10. Uneven length of the needle thread	① The tension of thread take-up spring is too low.	○ Increase the tension of the thread take-up spring.	10
11. The length of needle thread does not become short.	① The tension of thread tension controller No. 1 is too low. ② The tension of thread take-up spring is too high. ③ The tension of thread take-up spring is too low and motion is unstable.	○ Increase the tension of thread tension controller No. 1. ○ Decrease the tension of thread take-up spring. ○ Increase the tension of thread take-up spring and lengthen the stroke as well.	9 10
12. The knotting section of bobbin thread at 2nd stitch at the sewing start appears on the right side.	① Idling of bobbin is large. ② The bobbin thread tension is too low. ③ The needle thread tension at 1st stitch is too high.	○ Adjust the position of the moving knife. ○ Increase the bobbin thread tension. ○ Decrease the needle thread tension at 1st stitch.	108 12 9
13. Wiper fails to work. (Return is defective.)	① Needle entry of the last needle is the same as that of the sewing start, and the resistance of thread and cloth is large.	○ Shift the needle entry point of the last needle.	
14. The needle thread is trimmed too short at the time of thread trimming	① Flapping of the material. ② The last stitch pitch is too small. ③ Sewing direction immediately before thread trimming is wrong.	○ Reduce the clearance between the presser and the needle. ○ Reduce the stroke of the intermediate presser. ○ Increase the last stitch pitch. ○ Carry out reverse feed stitching at the end of sewing to change the sewing direction immediately before thread trimming.	108

2. OPTIONAL

2-1. Table of Needle hole guide

Needle used	Needle hole guide		
Size	Part No.	Needle hole diameter	Application
#18~#21	40262128 (Standard)	ø 2.4	For medium-weight to heavy-weight materials
	40250484(OP)	ø 3.0	For medium-weight to heavy-weight materials
#18~#25	40250484(OP)	ø 3.0	For medium-weight to heavy-weight materials

Needle used	Intermediate presser	
Size	Part No.	Size (øA × øB × H × L)
#18~#21	40023632 (Standard)	ø 2.2 × ø 3.6 × 5.7 × 38.5
#18~#25	B1601210D0CA (OP)	ø 3.5 × ø 5.5 × 5.7 × 38.5

· (OP) means the optional.

